

JOHN DEERE 36 FARM LOADER

 



OPERATORS MANUAL JOHN DEERE 36 FARM LOADER

OMC14638C L2 English

OMC14638C L2

LITHO IN THE U.S.A.
ENGLISH



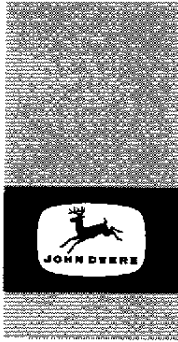

TO THE PURCHASER


This manual contains the operating, servicing and lubricating instructions for the John Deere 36 Farm Loader.

This loader has been designed to give many years of satisfactory service. The successful operation and long life of the loader depends, of course, on proper operation and the care given it. The first recommendation is that you read this manual carefully and follow the instructions. By doing so you may save much time and expense in the field. If additional information is needed, see your John Deere dealer.

Lubrication is very important. Refer to the Lubrication Chart.

When in need of parts see your John Deere dealer. He is equipped to provide genuine John Deere parts and service.

Right- and left-hand references are determined by standing at the rear of the tractor-loader combination and facing the forward direction of travel.

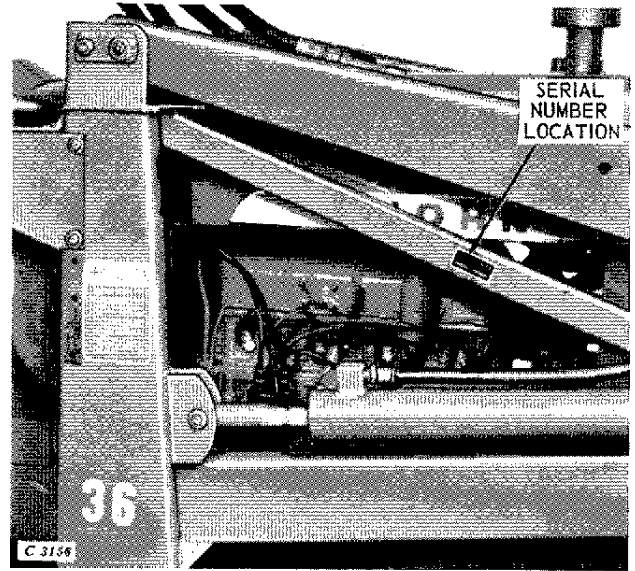


The serial number of your new loader is located on the right frame as shown above. Record this number in the space below for reference when requesting information or ordering parts.

JOHN DEERE 36 FARM LOADER

Loader Serial No.

Date Purchased19. . .

(To be filled in by purchaser)

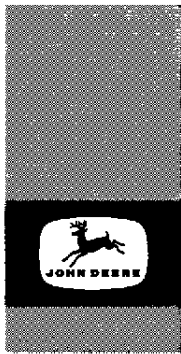

CONTENTS

	Page
IDENTIFICATION VIEWS	2
SPECIFICATIONS	3
OPERATION	4-16
Tractor preparation and operation	4
Safety suggestions	4
Controls for loaders with mechanically-controlled bucket	5-6
Controls for loaders with hydraulically-controlled bucket	7
Adjusting materials bucket tilt	7
Field operation	8
Attaching loader	9-10
Detaching loader	10
EXTRA EQUIPMENT	11-13
LUBRICATION	14
SERVICE	15-20
TROUBLE SHOOTING	21

DESCRIPTION

John Deere 36 Farm Loader has been designed for use with the John Deere 1010 Utility, Row-Crop Utility, and Single Row-Crop Tractors; 2010 Row-Crop and Row-Crop Utility Tractors; 330 and 320 Standard and Utility Tractors; 430, 420 and 40 Standard, Utility, Tricycle, and Row-Crop Utility Tractors; and 435 Diesel Tractor.

The 36 Loader is controlled by independent single or double-spool hydraulic valves with one exception.


A loader with a mechanically-controlled bucket requires one independent control valve to operate the boom except when the loader is mounted on a 2010 Tractor equipped with a remote hydraulic control attachment. In this case the boom may be controlled either by the remote cylinder operating lever on the tractor or by an independent single-spool control valve.

A loader with a hydraulically-controlled bucket requires an independent double-spool control valve to operate the boom and the bucket in all cases, including the 2010 Tractor equipped with remote hydraulic control attachment.

The loader is equipped with double-action lift cylinders. To provide additional operating convenience, a "float" position is provided in the independent lift cylinder control valve.


Three buckets are available for use with the loader: a 6-tine bucket, a 7-tine bucket, and a 60-inch materials bucket. All three buckets may be mechanically- or hydraulically-controlled.

Right-hand or left-hand references are determined from the tractor seat looking toward the front.

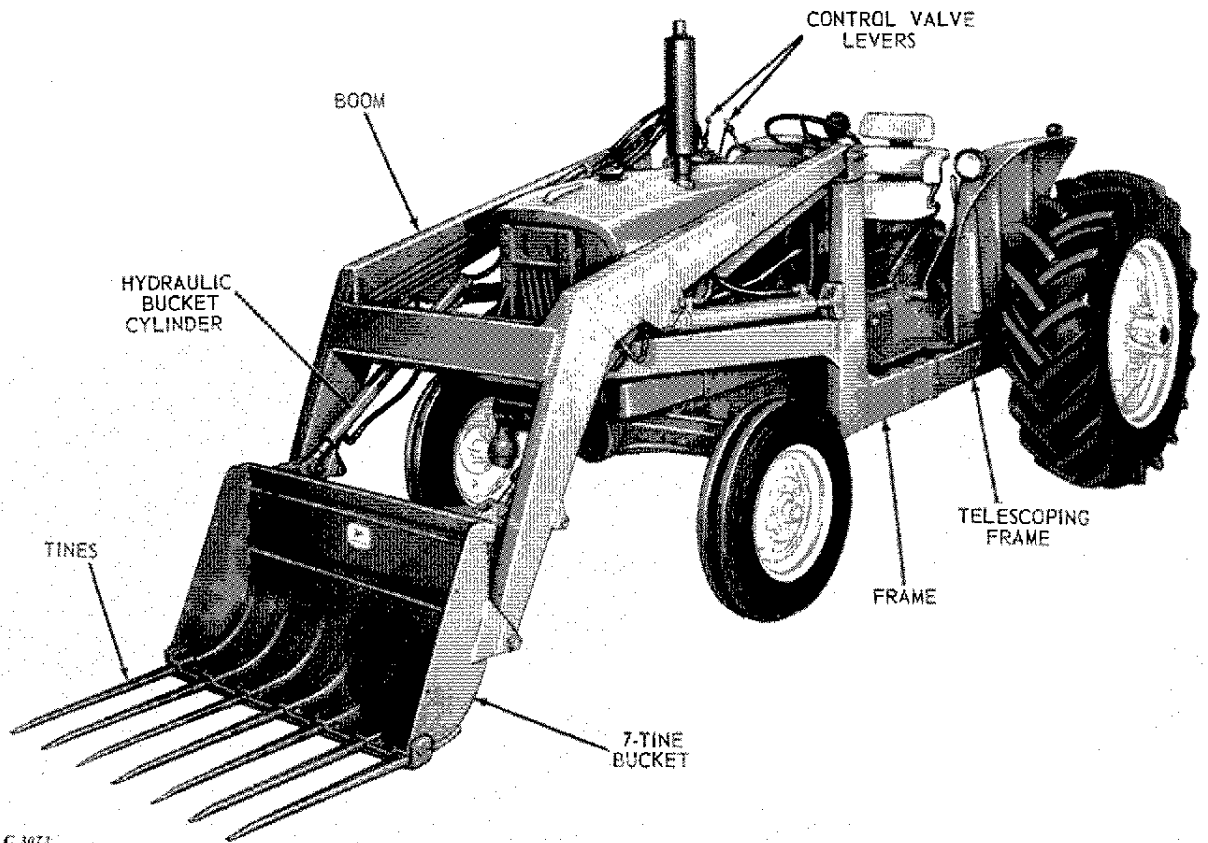

C 3073


John Deere 36 Farm Loader with Hydraulically-Controlled 7-Tine Bucket on John Deere 2010 Row-Crop Utility Tractor

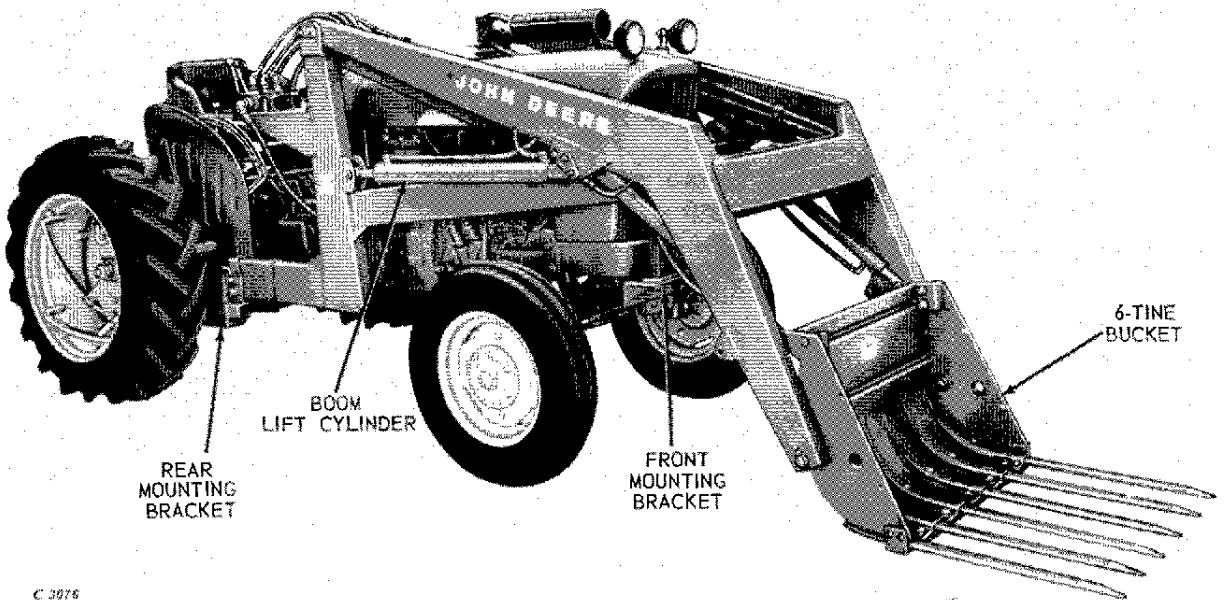

C 3076

John Deere 36 Farm Loader with Hydraulically-Controlled 6-Tine Bucket on John Deere 1010 Utility Tractor

OM-C14638C

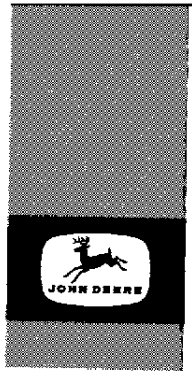

SPECIFICATIONS

TRACTORS 1010 Utility, Row-Crop Utility, and Single Row-Crop; 2010 Row-Crop and Row-Crop Utility; 330 and 320 Standard and Utility Tractors; 430, 420 and 40 Standard, Utility, Tricycle, and Row-Crop Utility, and 435 Diesel.

TRACTOR HYDRAULIC EQUIPMENT REQUIRED Tractor Equipped with Rockshaft

LIFT AND BUCKET CYLINDERS Double Action

BUCKET CONTROL Mechanical or Hydraulic

BUCKETS: 60-inch Materials
41-inch 7-Tine Manure
37-inch 6-Tine Manure

WEIGHT (With Independent Control Valve, 7-Tine Bucket, and Mechanically-Controlled Bucket) 1036 Pounds

OVER-ALL LENGTH (On John Deere 2010 Row-Crop Utility Tractor with 7-Tine Bucket) 16 Feet, 6 Inches

RATED BREAKAWAY CAPACITY AT GROUND LEVEL @ 1500 PSI 2500 Pounds

RATED LIFT CAPACITY @ 1500 PSI 2090 Pounds


LIFT HEIGHT (To Heel of Bucket) 9 feet, 7 Inches

PENETRATION BELOW GROUND LEVEL 10 Inches (Approx.)

OPTIONAL EQUIPMENT:

- Scraper Blade
- Crane Attachment
- 7-Tine Bucket Attachments:
 - Bottom Sheet Extension
 - Dirt Bucket
 - Spill Sheet
 - 80-Inch Utility Bucket
 - Spring for Relatching Utility Bucket

- 6-Tine Bucket Attachments:
 - Bottom Sheet Extension
 - Dirt Bucket
 - Spill Sheet
 - 73-Inch Utility Bucket
- 60-Inch Materials and Bucket Attachments:
 - Tines with Cover
 - Bottom Sheet Extension with Sides

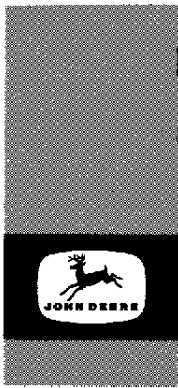

OPERATION

TRACTOR PREPARATION AND OPERATION

WHEEL WEIGHTS AND SPACING

Front Wheels

The loader may be mounted on tractors with either single or dual front wheels. In either case, use heavy-duty front tires.

If mounted on tractors with dual wheels, set the wheels for widest front wheel tread. This eliminates the accumulation of mud between the tires, and also provides better stability.

If the tractor is equipped with an adjustable front axle, the axle setting should be in the narrowest position.

Front end weight should not be used.

Rear Wheels

Use the widest rear wheel tread setting possible.



When barn doors or gates limit the rear wheel tread, extra precaution must be taken when operating loader due to decreased stability.

Sufficient ballast should be added to rear wheels to secure the best operation possible. See your tractor operator's manual for ballast instructions.

TIRE INFLATION

Refer to your tractor operator's manual for correct tire inflation pressures.

Increased tire inflation in front tires is necessary for loader operation.

COLD WEATHER STARTING

In cold weather, run the tractor at half throttle for about 10 minutes to warm up the oil in the hydraulic system. This will assure smooth operation of the loader.

In extremely cold weather, the warm-up period for the hydraulic oil may be shortened considerably by raising the loader to the end of the cylinder stroke and continuing to hold the control lever in operating position. When the oil lines

become warm to the touch, release the control lever and return the bucket to ground position.

CHECKING OIL LEVEL

Check the oil level in the tractor hydraulic system daily. Refer to your tractor operator's manual for instructions. Keep oil supply up to proper level. The oil level should be checked with bucket on the ground and tractor engine stopped except on the 435 Diesel which should be checked with the motor running. If oil level is low, add proper weight oil as instructed in the tractor operator's manual.

If air is present in the system due to low oil level, remove air from the system according to instructions on page 20.

ENGINE SPEED

When using the loader under average conditions, operate the tractor at a speed and throttle setting which will deliver maximum loader efficiency with minimum wheel slippage. One-half to two-thirds throttle setting will usually give best results.

SAFETY SUGGESTIONS



Never operate loader except from tractor seat.

Carry loads low.

Operate at slow ground speeds, especially on irregular ground.

Never operate a loader with frayed hoses or leaky fittings. A leak in the hydraulic system retards the efficient operation of the loader and may cause an accident.

Under no circumstances lift a person in the bucket.

Do not leave tractor unattended with bucket in raised position.


Never operate loader without the minimum recommended amount of rear wheel weights.

Refer to your tractor operator's manual for additional safety suggestions.

CONTROLS FOR LOADERS WITH MECHANICALLY-CONTROLLED BUCKET

BOOM CONTROL

Loader Boom Controlled by Tractor Remote Cylinder Operating Lever—2010 Tractors Only

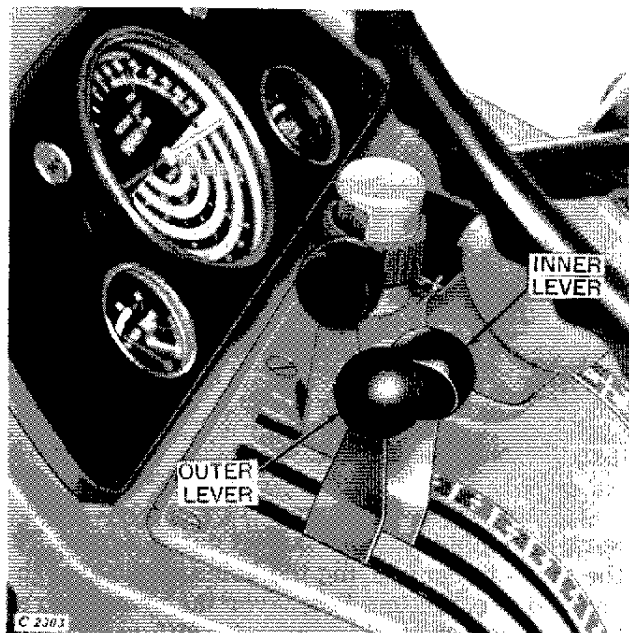

When the loader is mounted on a 2010 Tractor with dual rockshaft and single remote hydraulic system, the outer remote cylinder operating lever is used to control the boom.


When the loader is mounted on a tractor with single rockshaft and dual remote hydraulic system, the inner remote cylinder operating lever is used to control the boom.

Connect hoses at tractor side outlets so that moving the proper lever forward will lower the boom and moving the lever to the rear will raise it.

Moving the lever farther forward or backward will increase the operating speed of the boom.

If the lever is moved all the way forward, it will remain in that position until the boom reaches its highest point. The lever will automatically return to the neutral position.

Loader Boom Controlled by Independent Control Valve

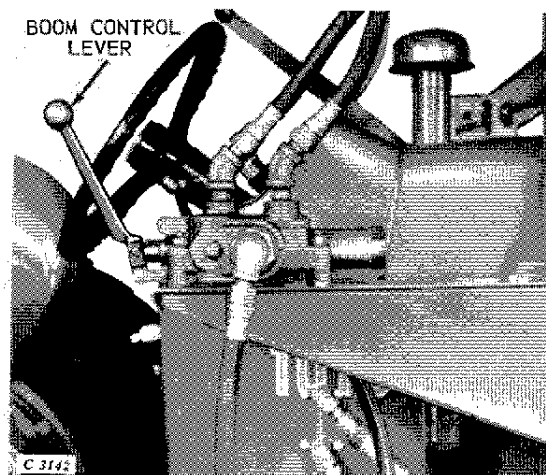

An independent single-spool control valve must be used to control the loader when it is mounted on a 2010 Tractor without remote hydraulic control attachment and with all 1010 or earlier model tractors of similar size.

The control valve may be mounted on the right- or left-hand mast at different heights to suit the convenience of the operator.

The independent control valve regulates the raising and lowering of the boom. Pulling the lever back raises the boom; pushing the lever forward lowers the boom.

A float position is provided in the valve for jobs where it is necessary for the bucket to follow the contour of the ground. This position may be used to secure "ground-hugging" bucket action when digging at the extreme bottom of a pile. It also may be used to advantage when leveling feed yards with the scraper blade.

Pushing the lever all the way forward will place the lever in float position. The lever will remain in float position until it is manually pulled back toward neutral.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com