



43 CORN SHELLER



JOHN DEERE

OPERATORS MANUAL 43 CORN SHELLER

OMC34 (01SEP63) English

OMC34 (01SEP63)

LITHO IN THE U.S.A.
ENGLISH



TO THE PURCHASER

You have purchased a sheller which is designed to give you many years of satisfactory service. Material and workmanship are the very best.


The object of this manual is to give you useful information about the operation and adjustment of your sheller, and to insure proper lubrication. Read your Manual carefully; proper operation and lubrication will result in longer life and better performance.

Where right- or left-hand is referred to, it is based on the position of the operator when standing at the hopper side of the sheller. Left-hand would be the pulley side and right the cob stacker side. The feed hopper would be at the rear and the fan discharge at the front.


Date Sheller was purchased 19 . . .

CONTENTS


	<i>Page</i>
IDENTIFICATION VIEWS.....	2-3
DESCRIPTION.....	4
SPECIFICATIONS.....	5
OPERATION.....	6-9
Speed.....	6
Capacity.....	6
Corn Thrower.....	6
Cob Stacker.....	7
Cob Outlet Door.....	7
Belt Drive.....	7
Power Take-Off Drive.....	8-9
3-Point-Hitch Attachment.....	10
Transport Trailer.....	10
Transporting.....	10
CONVERTING FROM 540 TO 1000 RPM PTO DRIVE.....	11
LUBRICATION.....	12-13
SERVICE.....	14
ASSEMBLY.....	15-28
SHIPPING BUNDLES.....	15-16

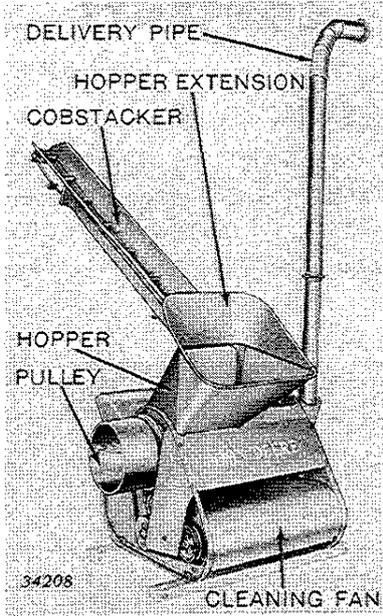


John Deere 43 Sheller with Delivery Pipe Attachment

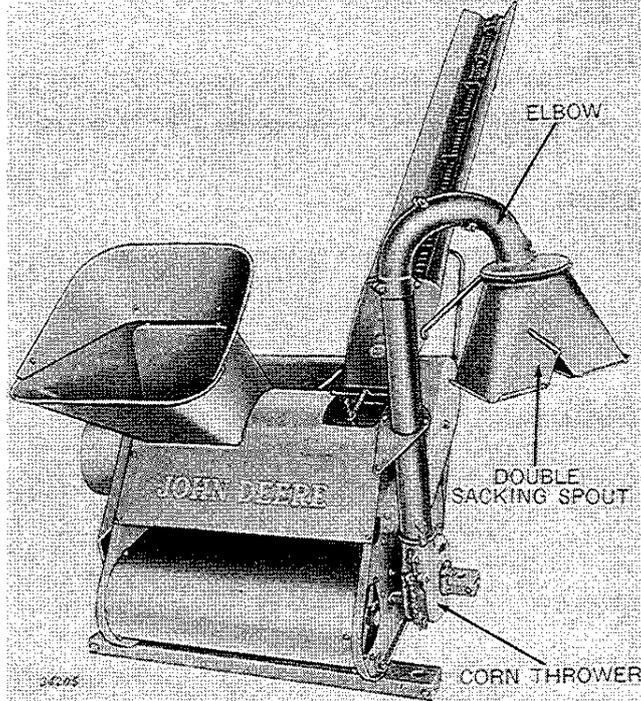

John Deere 43 Sheller with Sacking Attachment

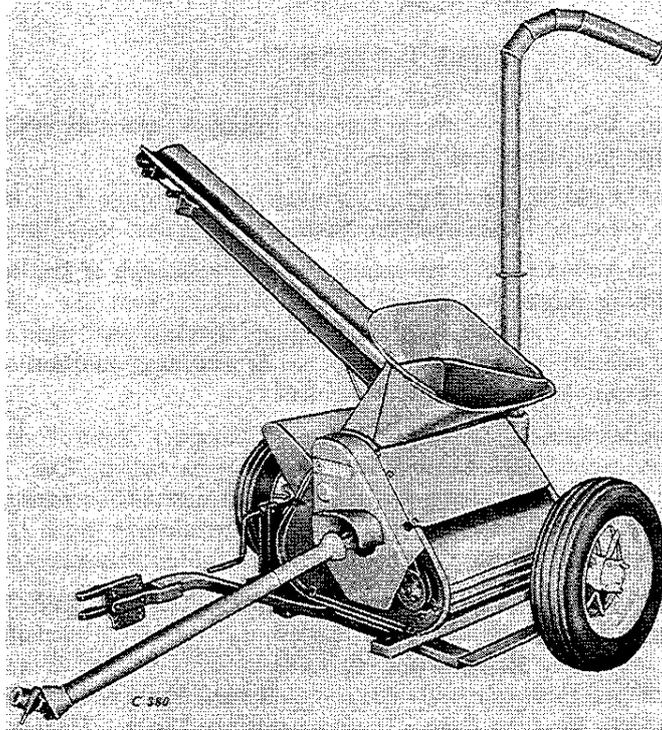

John Deere 43 Sheller with PTO Drive and Trailer

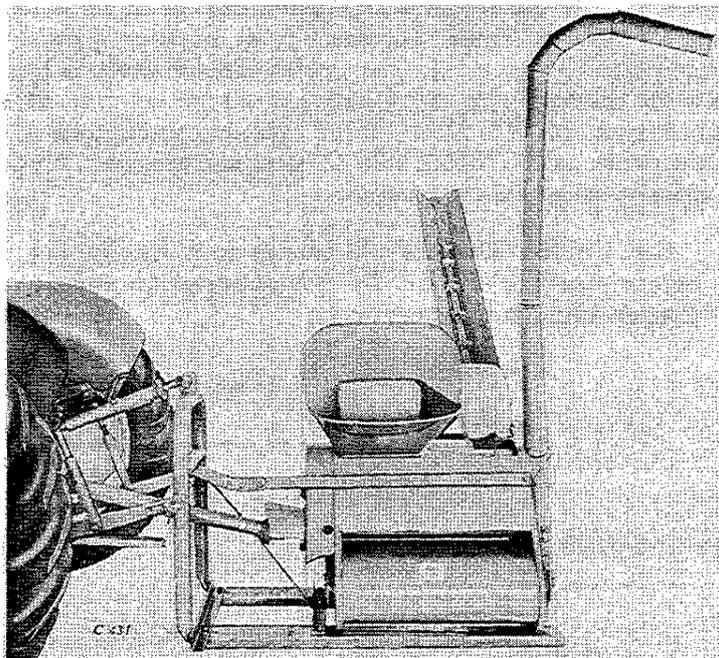

John Deere 43 Sheller with PTO Drive and Three-Point Attachment

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com