

# Impeller Mower-Conditioners 1326 and 1327



## OPERATORS MANUAL Impeller Mower-Conditioners 1326 and 1327

OMCC22166 Issue K6 English

John Deere Arc-lès-Gray  
OMCC22166 Issue K6

LITHO IN U.S.A.  
ENGLISH



# Introduction




**This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.**

"Right-hand" and "left-hand" sides are determined by facing in the direction the mower-conditioner will travel when in use.

Record your mower-conditioner model and serial number in the space provided at the rear of this manual.

Your warranty appears on your copy of the purchase order copy which you should have received from your dealer.


Metric measurements are shown with their respective equivalents throughout this operator's manual. These are the SI (International System) Units of Measure.

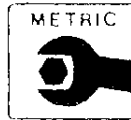

The 1326 and 1327 mower-conditioners are of metric design. Specified metric hardware must be used for replacement.



**CAUTION: Use only metric tools. Other tools may not fit properly. They may slip and cause injury.**

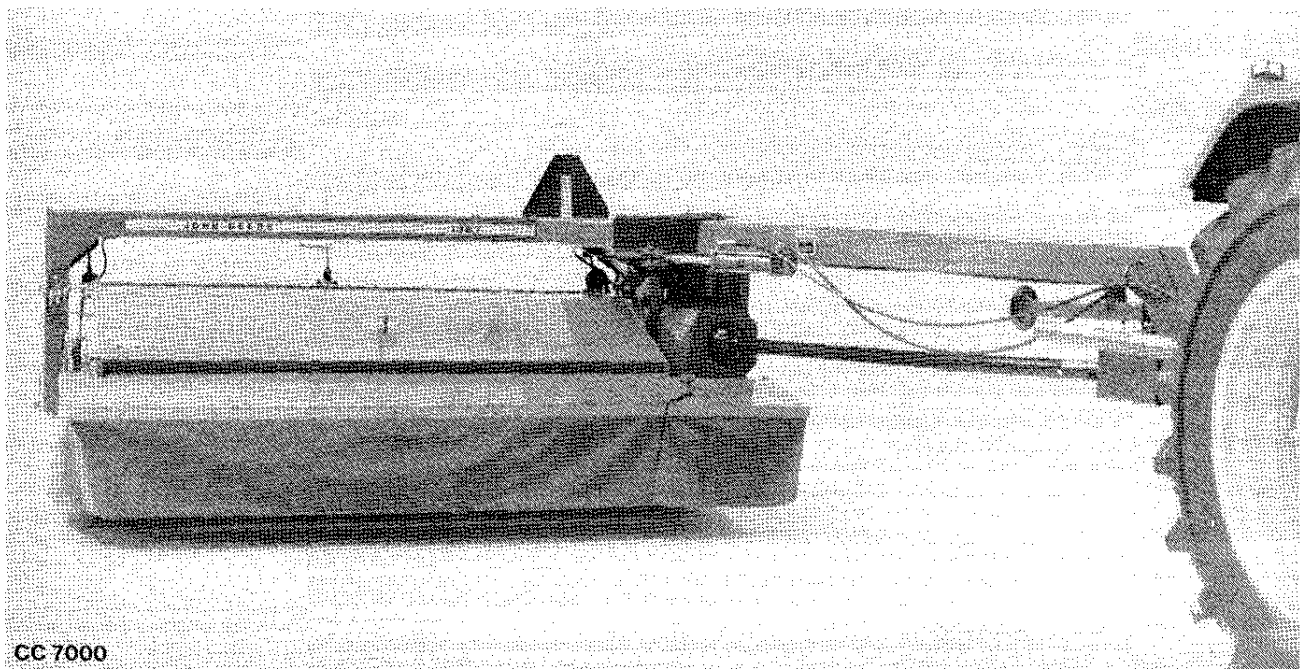

CC 7000

© Deere & Co., European Office, D-6800 Mannheim

**All information, illustrations, and specifications contained in this operator's manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.**

CC7000-1326ACCE-060284

# 1326 and 1327 Mower Conditioners

## PREDELIVERY CHECK LIST

After the mower-conditioner has been completely assembled, inspect it to be sure it is in good running order before delivering it to the customer. Check off each item when found satisfactory or after making the necessary adjustments.

- All grease nipples have been lubricated and gear case and cutterbar filled.
- All moving parts are working freely.
- Check tire inflation pressures.
- Install attachments.
- Check rotor belt tension and adjust, if necessary.
- Check tightness of disk and knife bolts.
- Make sure tines are securely mounted on rotor.
- Platform float is properly adjusted.
- Check tightness of all nuts and bolts and make sure all cotter pins are spread.
- Hydraulic cylinders operate properly.
- Mower-conditioner has been run for 30 minutes and bearings are not overheating.

Check Date: .....

Dealer's Name and Address: .....

Signature: .....

CONTOM-1326ACCE-060284

## OWNER REGISTER

Name .....

Rural Route No. ....

City ..... State ..... Zip .....

Serial No. ....

Operator's Manual No. OM-CC22166

Date Sold .....

PROPRIOM-1326ACCE-060284

### DELIVERY CHECK LIST

The following check list is a reminder of very important information which should be conveyed directly to the customer when delivering the machine.

- Advise the customer that the life expectancy of this or any other machine depends on regular lubrication as described in the operator's manual.
- Advise the customer that he must drain and refill the cutterbar after the first 10 hours of operation.
- Advise the customer that he must check the torque of cutterbar securing bolts after the first 10 hours of operation.
- Advise the customer that he must check the torque of disk nuts and knife bolts after the first 10 hours of operation.
- Inform the customer on safety precautions to be taken when using the mower-conditioner.

- Give the operator's manual to your customer and explain fully all operating adjustments and lubrication.
- Inform the customer on optional attachments available to fit his needs.
- When the mower-conditioner is transported by road at night or during the day, install the lighting equipment for adequate warning to drivers of other vehicles. In this regard, check local traffic lighting regulations.
- Tell the customer to record the serial number of his mower-conditioner in the space provided at the end of this manual.

Delivery date: .....

Signature: .....

LIVRAIOM-1326ACCE-060284

### AFTER-SALE CHECK LIST

The following items should be checked some time during the first season of operation with the mower conditioner.

- Inspect the entire machine and check for loose or missing bolts.
- Make sure all safety shields are in place.
- Check rotor belt for proper tension.
- Check tightness of tines, disks and knives.
- Check for broken or damaged parts.

- If possible, run the mower-conditioner to make sure that it is functioning properly.
- Review the entire operator's manual together with your customer and stress the importance of proper and regular lubrication, as well as safety precautions.

Date: .....

Signature: .....

APRLIVOM-1326ACCE-060284

# Contents

Safety .....	2
Preparing the tractor .....	7
Attaching and detaching .....	9
Preparing the mower-conditioner .....	11
Transporting .....	13
Operating the mower-conditioner .....	14
Attachments .....	16
Lubrication and maintenance .....	17
Trouble shooting .....	26
Service .....	29
Storage .....	49
Specifications .....	51
Index .....	52

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)