

JOHN DEERE 60C FORAGE BLOWER



OPERATORS MANUAL

JOHN DEERE 60C
FORAGE BLOWER

OME38312 B7 English

OME38312 B7

LITHO IN THE U.S.A.
ENGLISH



INTRODUCTION


Your new John Deere 60C Forage Blower is a dependable machine. With proper care and operation you can expect to receive the service and long life designed and built into it. Like any precision machine your blower will require some attention at regular intervals. When any questions arise regarding lubrication or adjustments, use your manual as a guide to service your machine the **RIGHT WAY**

If you find yourself in need of additional information or special servicing not covered in this manual, see your John Deere dealer. He is in a position to answer your questions for you.

When in need of parts either to replace worn parts or to make emergency repairs, see your John Deere dealer.

When ordering parts, give your dealer the serial number of your blower. This information will help him give you prompt and efficient service.

The Serial No. of your blower is located on the frame channel at the rear of the machine.

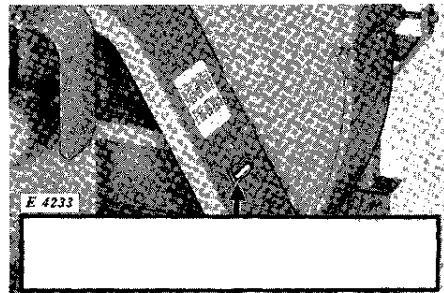


NOTE: Right- and left-hand referred to in this manual are determined from a position at the rear of the blower facing in the direction of travel in transport.

CONTENTS

	Page		Page
Specifications	3	Service	13-16
Operation	4-11	Conveyor Lift Spring	13
Preparing the Blower . . .	4	Conveyor and Auger Clutch	
Determining Correct Fan		Lever	13
Speed	4	Fan and Bearings	14
Adjusting Fan Speed . . .	5	Leveler Pitman	14
Operating the Blower . . .	6-9	Conveyor Filler Plate . . .	14
Locating Blower at Silo .	6	Variable Speed Drive Chain	15
Hitch-Stand	6	Auger Drive and Inter-	
Conveyor Latch	6	mediate Chains	15
Stand	6	Conveyor Drag Chain	16
Tractor Hookup	7	Conveyor Drive Chain . . .	16
Conveyor and Auger		Trouble Shooting	17
Clutch Lever	7		
Positioning Fan Housing		Attachments	18-20
Rim	7	Telescoping Pipe	18
Attaching Blower Pipe . .	8	Deflector and Pipe	18
Breaking in the New		Blower Pipe Clamp	19
Blower	8	Adjustable Elbow	19
Conveyor Cleanout Door.	9	45 Degree Elbow	19
Fan Blade Cleaner	9	Variable Speed Unit	20
Transporting Blower . . .	10		
Storing Blower	11	Assembly	21-27
Safety Precautions	11	Shipping Bundles	21
Lubrication	12		

**A Careful Operator
IS THE BEST INSURANCE
AGAINST AN ACCIDENT**

—National Safety Council

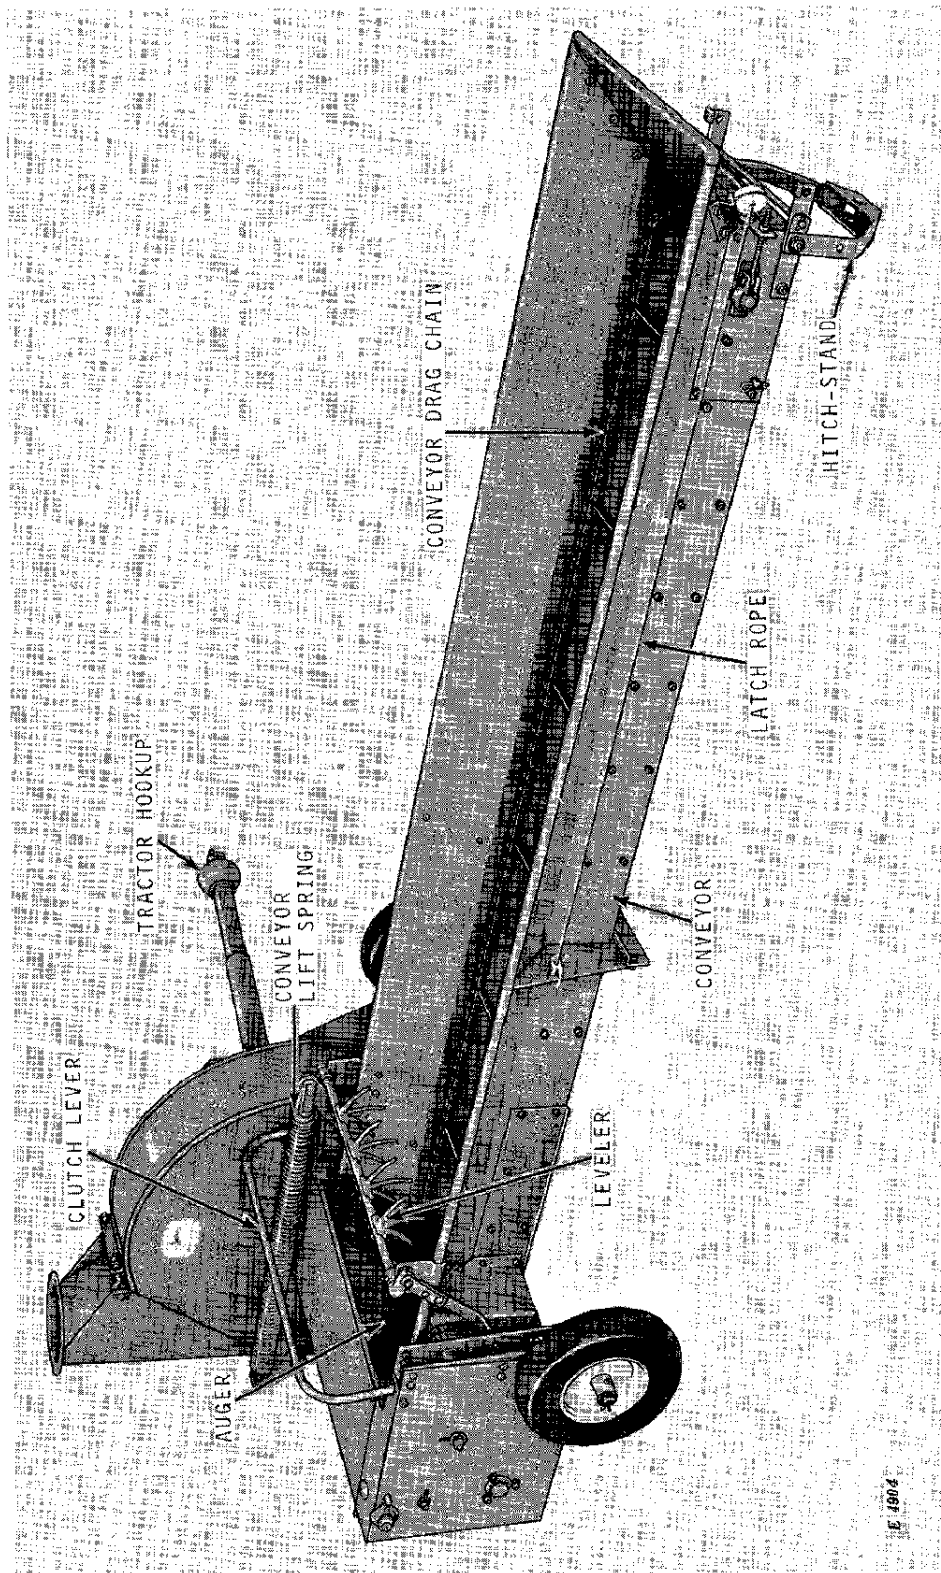

John Deere 60C Forage Blower

SPECIFICATIONS

Auger diameter	10 in.
Blower fan	Steel, 4-blade, 40-in. diameter
Blower pipe	9-in. diameter
Conveyor	Hinged—may be raised to allow wagon to pass
Height	23 in.
Length	10 ft. 6 in.
Width	29-1/2 in.
Fan speed: Direct drive	540 or 1000 rpm
Variable speed drive (540 rpm PTO)	645, 728, or 869 rpm
Variable speed drive (1000 rpm PTO)	622, 745, or 838 rpm
Height: With conveyor lowered	4 ft. 2-1/4 in.
With conveyor raised	11 ft. 7-1/2 in.
Length	13 ft. 10 in.
Size of tractor recommended	2-plow tractor or larger
Tires: Size	4-ply, 4:00 x 8
Pressure	50 lbs.
Tractor hookup	540 or 1000 rpm
Weight (with hookup)	1100 lbs.
Width	5 ft. 11 in.

(Specifications and design subject to change without notice.)

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com