

1209 MOWER CONDITIONER



OPERATORS MANUAL 1209 MOWER CONDITIONER

OME60688 J7 English

**JOHN DEERE OTTUMWA WORKS
OME60688 J7**

LITHO IN THE U.S.A.
ENGLISH






To the Purchaser

Your new mower-conditioner was carefully designed and manufactured to give years of dependable service. To keep it running efficiently, read the instructions in this operator's manual. Each section is clearly identified so you can easily find the information you need—whether it is operation, lubrication, or service. Read the "Table of Contents" to learn where each section is located. Use the alphabetical index for fast reference.

In addition to the equipment furnished with your mower-conditioner, attachments are available to help you do a better job in special crop conditions. These are described in the attachment section of this manual and can be purchased from your John Deere dealer.


 This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

Because John Deere sells its products world-wide, U.S. units of measure are shown with their respective Metric equivalents throughout this operator's manual. These equivalents are the SI (International System) Units of Measure.

"Right-hand" and "left-hand" sides are determined by facing in the direction of mower-conditioner forward travel.

Record your mower-conditioner serial number in the space provided on page 33. Your dealer needs this information to give you prompt, efficient service when you order parts. If your mower-conditioner requires replacement parts, go to your John Deere dealer where you can obtain Genuine John Deere parts - accept no substitutes.

The warranty on this mower-conditioner appears on your copy of the purchase order which you should have received from your dealer when you purchased the mower-conditioner.

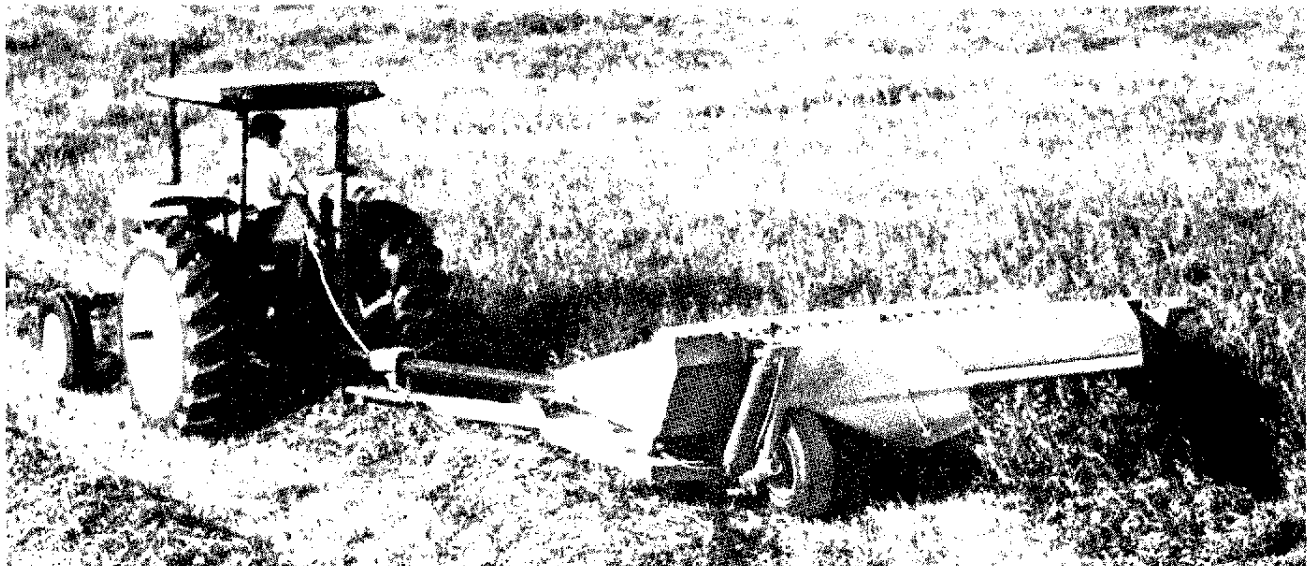

JOHN DEERE 1209 MOWER-CONDITIONER

PREDELIVERY CHECK LIST

After the mower-conditioner has been completely assembled, inspect it to be sure it is in good running order before delivering it to the customer. The following check list is a reminder of points to inspect. Check off each item as it is found satisfactory or after proper adjustment is made.

- ☐ Knockdown bar is adjusted to operating position, page 20.
- ☐ All grease fittings have been lubricated and gear cases filled. (See "Lubrication," pages 10 through 12.)
- ☐ All moving parts are working freely.
- ☐ Platform float is properly adjusted, page 7.
- ☐ SMV bracket is turned up.
- ☐ Tires are properly inflated, page 3.
- ☐ Hydraulic cylinders operate properly.
- ☐ Mower-conditioner has been run for one-half hour and bearings are not heating.
- ☐ Make sure the slip clutch will slip and the springs are properly adjusted, page 6.
- ☐ Rolls are properly timed and spaced, pages 21 and 22.
- ☐ Windrowing shields and swath board properly adjusted, page 6.

(Date Set-Up)

(Signature)

DELIVERY CHECK LIST

At the time the mower-conditioner is delivered, the following check list is a reminder of very important information which should be conveyed directly to the customer. Check off each item as it is fully explained to the customer.

- ☐ Advise the customer that the life expectancy of this machine, like any other machine, is dependent on regular lubrication as described in the operator's manual.
- ☐ Advise the customer of the safety precautions that must be exercised while using this mower-conditioner, page 2.
- ☐ Give the operator's manual to the customer and explain fully all operating adjustments and lubrication.
- ☐ Point out slip clutch safety device.
- ☐ Explain proper ASAE standard dimensions for 540 rpm or 1000 rpm if the field conversion bundle was/or is to be installed.

(Date Delivered)

OWNER REGISTER

Name _____
RR# _____
City _____ State _____ Zip _____
Serial Number _____
Operator's Manual No. OM-E60688 _____
Date Sold _____

- ☐ When the mower-conditioner is transported on a road or highway at night or during the day, accessory lights and devices should be used for adequate warning to operators of other vehicles. In this regard, tell customers to check local governmental regulations. Among these is the SMV (slow-moving vehicle) emblem which can be attached vertically to the mounting on the front side of the left-hand spring support bracket to provide proper light reflection.
- ☐ Advise the customer of the optional attachments that are available for special crop and operating conditions.

(Signature)

AFTER-SALE CHECK LIST

It is suggested that the following items be checked sometime during the first operating season.

- | | |
|-------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <input type="checkbox"/> Go over the entire machine and check for loose or missing bolts. | <input type="checkbox"/> Check for broken or damaged parts. |
| <input type="checkbox"/> Check chain for proper tension. | <input type="checkbox"/> If possible, run the mower-conditioner to see if it is functioning properly. |
| <input type="checkbox"/> Make sure all safety shields are in place. | <input type="checkbox"/> Review the entire operator's manual with the customer and stress the importance of proper and regular lubrication and safety precautions. |

(Date Checked)

(Signature)

JOHN DEERE 1209 MOWER-CONDITIONER

PREDELIVERY CHECK LIST

After the mower-conditioner has been completely assembled, inspect it to be sure it is in good running order before delivering it to the customer. The following check list is a reminder of points to inspect. Check off each item as it is found satisfactory or after proper adjustment is made.

- ☐ Knockdown bar is adjusted to operating position, page 20.
- ☐ All grease fittings have been lubricated and gear cases filled. (See "Lubrication," pages 10 through 12.)
- ☐ All moving parts are working freely.

- ☐ Platform float is properly adjusted, page 7.
- ☐ SMV bracket is turned up.
- ☐ Tires are properly inflated, page 3.
- ☐ Hydraulic cylinders operate properly.
- ☐ Mower-conditioner has been run for one-half hour and bearings are not heating.
- ☐ Make sure the slip clutch will slip and the springs are properly adjusted, page 6.
- ☐ Rolls are properly timed and spaced, pages 21 and 22.
- ☐ Windrowing shields and swath board properly adjusted, page 6.

(Date Set-Up)

(Signature)

DELIVERY CHECK LIST

At the time the mower-conditioner is delivered, the following check list is a reminder of very important information which should be conveyed directly to the customer. Check off each item as it is fully explained to the customer.

- ☐ Advise the customer that the life expectancy of this machine, like any other machine, is dependent on regular lubrication as described in the operator's manual.
- ☐ Advise the customer of the safety precautions that must be exercised while using this mower-conditioner, page 2.
- ☐ Give the operator's manual to the customer and explain fully all operating adjustments and lubrication.
- ☐ Point out slip clutch safety device.
- ☐ Explain proper ASAE standard dimensions for 540 rpm or 1000 rpm if the field conversion bundle was/or is to be installed.

(Date Delivered)

OWNER REGISTER

Name _____
RR# _____
City _____ State _____ Zip _____
Serial Number _____
Operator's Manual No. OM-E60688 _____
Date Sold _____

- ☐ When the mower-conditioner is transported on a road or highway at night or during the day, accessory lights and devices should be used for adequate warning to operators of other vehicles. In this regard, tell customers to check local governmental regulations. Among these is the SMV (slow-moving vehicle) emblem which can be attached vertically to the mounting on the front side of the left-hand spring support bracket to provide proper light reflection.
- ☐ Advise the customer of the optional attachments that are available for special crop and operating conditions.

(Signature)

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com