

327 and 337 Series Balers



OPERATORS MANUAL

327 and 337
Series Balers

OME69899 Issue D4 English

John Deere Ottumwa Works
OME69899 Issue D4

LITHO IN U.S.A.
ENGLISH



INTRODUCTION




This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

Measurements are shown with their respective Metric equivalents throughout this operator's manual. These equivalents are the SI (International System) Units of Measure.

"Right-hand" and "left-hand" sides are determined by facing in the direction the baler will travel when in use.

Your warranty appears on your copy of the purchase order copy which you should have received from your dealer.

Record your baler model and serial numbers on page 109.

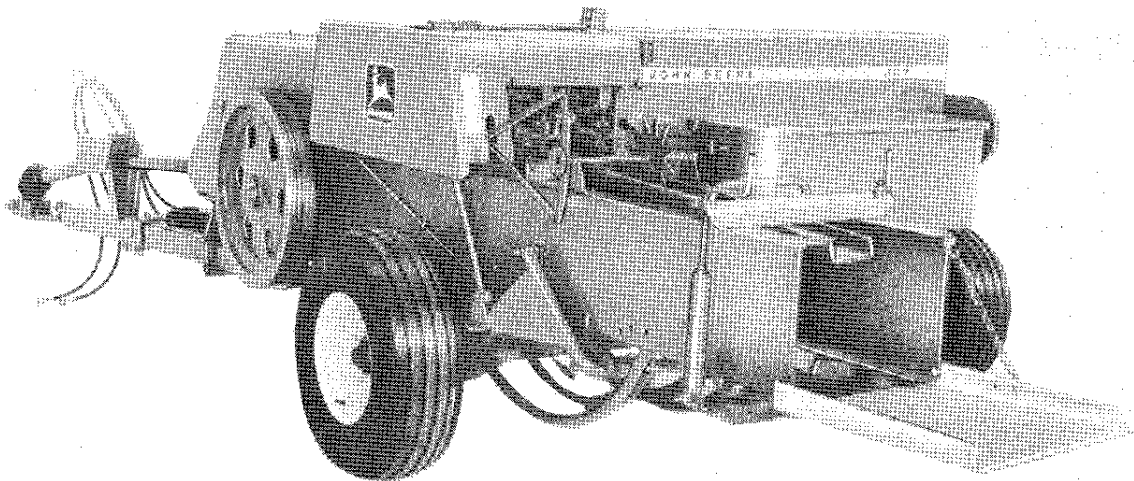

JOHN DEERE 327 and 337 BALERS

PREDELIVERY CHECK LIST

After the baler has been completely assembled, inspect it to be sure it is in good running condition before delivering it to the customer. The following check list is a reminder of points to inspect. Check off each item as it is found satisfactory or after proper adjustment is made.

- ☐ Baler has been assembled properly. (See page 85.)
- ☐ Shipping plug has been replaced with breather cap on gear case. (See page 92.)
- ☐ Baler has been lubricated. (See page 36.)
- ☐ All moving parts are working freely.
- ☐ Plungerhead and stationary knife clearance has been checked. (See page 78.)
- ☐ Check measuring arm adjustment. (See pages 24 and 58.)

(Date set up)

OWNER REGISTER

Name
RR #
County State
Model No.
Serial No.
Operator's Manual No OM-E69899
Date Sold

- ☐ PTO slip clutch has been checked for specified slip-page. (See page 75.)
- ☐ Tire pressure have been checked. (See page 14.)
- ☐ Pickup spring tension is properly adjusted. (See page 76.)
- ☐ Drive gears have been lubricated before run-in. (See page 7.)
- ☐ Baler has been run in one hour. (See page 7.)

(Signature)

DELIVERY CHECK LIST

The following check list is a reminder of very important information which should be conveyed directly to the customer at the time the baler is delivered. Check off each item as it is fully explained.

- ☐ Advise the customer that the life expectancy of this, like any other machine, is dependent on regular lubrication as described in operator's manual.
- ☐ Give the operator's manual to the customer and explain all operating adjustments and lubrication fully.
- ☐ Explain proper ASAE standard dimensions for PTO hookup.
- ☐ Advise customer of safety precautions that must be observed while using this baler.

(Date delivered)

- ☐ Tell customer the right-hand wheel of the tractor should be removed all the way in on tractors having adjustable-tread width.
- ☐ When the baler is transported on a road or highway at night or during the day, accessory lights and devices should be used for adequate warning to operators of other vehicles. Various safety lights and devices are available from your John Deere dealer. In this regard, tell customers to check local governmental regulations. Among these is the SMV (slow-moving vehicle) emblem which can be attached vertically to the rear of the auger housing.
- ☐ Advise the customer of the optional attachments that are available for special crop and operating conditions.

(Signature)

AFTER-SALE CHECK LIST

It is suggested that the following items be checked sometime during the first season's operation.

- ☐ Go over entire machine for loose or missing bolts.
- ☐ Check for correct needle, feeder, and plungerhead timing as outlined in the operator's manual.
- ☐ Check the plungerhead for proper adjustment.
- ☐ Inspect the plungerhead and stationary knives to be sure they are sharp and properly adjusted.
- ☐ All chains and belts are properly tightened.
- ☐ All safety shields are in place.
- ☐ Check for broken or damaged parts.
- ☐ If possible, run the baler to see if it is functioning properly.
- ☐ A good quality twine or wire is being used and is threaded properly.
- ☐ Check knotter adjustments. If possible, inspect ties on a few bales.
- ☐ Review the entire operator's manual with the customer and stress the importance of proper and regular lubrication and safety precautions.

(Date checked)

(Signature)



Contents

	Page
Safety	2
Preparing the Tractor	5
Preparing the Baler	7
Attaching and Detaching	15
Transporting	18
Operating the Baler	19
Attachments	31
Lubrication	36
Troubleshooting	42
Service	54
Storage	83
Assembly	85
Specifications	108
Index	110

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com