

430 AND 530 ROUND BALERS

 


OPERATORS MANUAL 430 AND 530 ROUND BALERS


OME73768 G4 English

JOHN DEERE OTTUMWA WORKS
OME73768 G4

LITHO IN THE U.S.A.
ENGLISH



 ! This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.



This baler is primarily of metric design.

For your convenience, most specifications are given in metric measurement with the customary U. S. measurement following.

Some specifications cannot be converted, these appear in metric only.


Most hardware is metric. Specified metric hardware must be used for replacement.

! **CAUTION: Use only metric tools. Other tools may not fit properly. They may slip and cause injury.**

“Right-hand” and “left-hand” sides are determined by facing in the direction the baler will travel when in use.

Your warranty appears on your copy of the purchase order copy which you should have received from your dealer.

Record your baler serial number in the space provided on page 134. Your dealer needs this information to give you prompt efficient service.

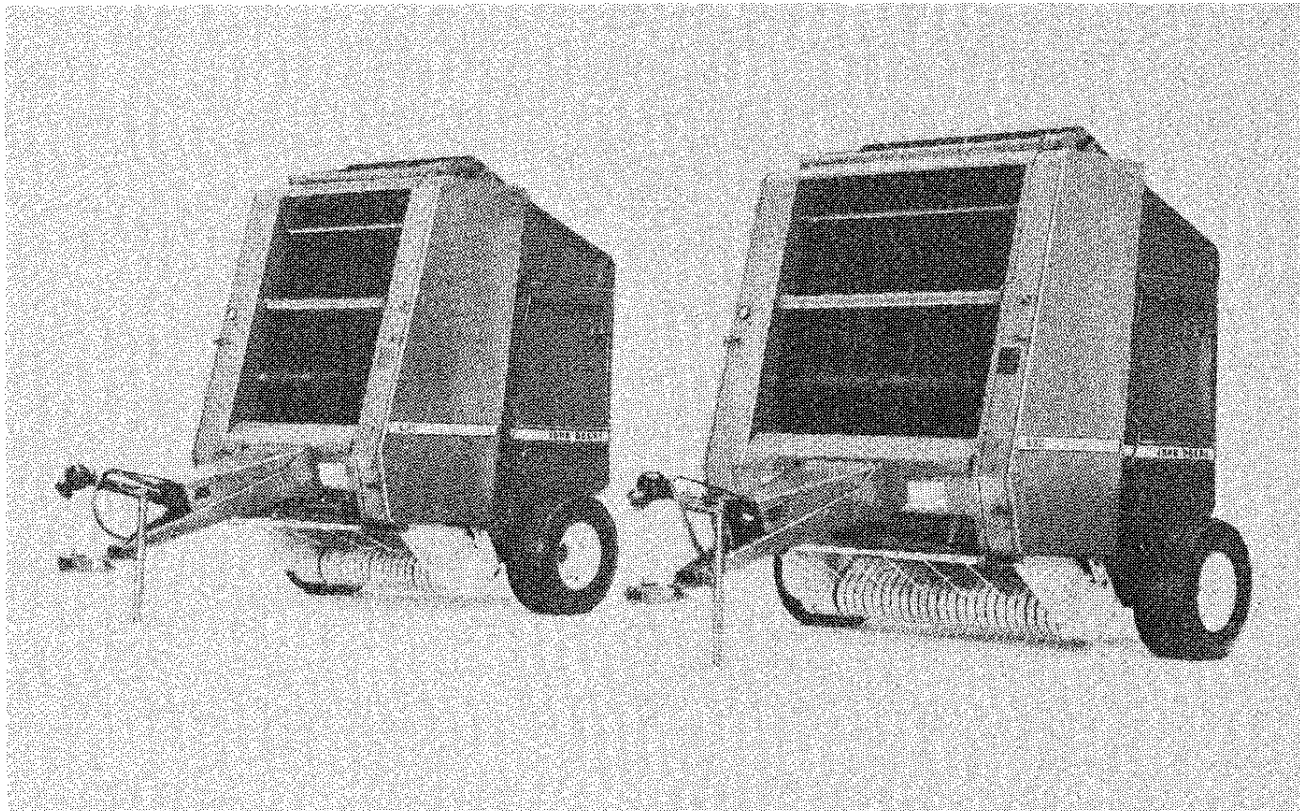

John Deere 430 and 530 Round Balers

PREDELIVERY CHECK LIST

After the baler has been completely set-up, inspect it to be sure it is in good running condition before delivering it to the customer. The following check list is a reminder of points to inspect. Check off each item as it is found satisfactory or after proper adjustment is made.

- Baler has been assembled properly. (See page 98.)
- Check all hydraulic hoses and connections for oil leaks.
- Baler has been lubricated. (See page 46.)
- Gate opens and closes freely and latches are adjusted properly. (See page 80.)

- Upper arm stops have been installed. (See page 104.)
- Belt tracking is satisfactory. (See page 74.)
- Cycle twine arm and check oil level.
- Check monitor box to see that all lights and gauges function properly.
- Check gate lock valve for proper function.
- Drive chains have been adjusted properly and lubricated. (See pages 48 and 70.)
- Drive slip clutch has been checked for specified adjustment. (See page 71.)
- Tire pressures have been checked. (See page 17.)

(Date set up)

(Signature of Set-Up Technician)

AB5; E01;;530U A 080584

OWNER REGISTER

Name _____
Rural Route # _____
County _____ State _____ Zip _____
Serial Number _____
Operator's Manual No. OM-E73768 _____
Date Sold _____


AB5; E01;;530U B 080584

Pre-Delivery

DELIVERY CHECK LIST

The following check list is a reminder of very important information which should be conveyed directly to the customer at the time the baler is delivered. Check off each item as it is fully explained.

- Advise the customer that the life expectancy of this, like any other machine, is dependent on regular lubrication as described in the operator's manual.
- Give the operator's manual to the customer and explain all operating adjustments and lubrication fully.
- Explain proper bale handling procedures.

- Explain proper ASAE standard dimensions for PTO hookup.
- Advise customer of safety precautions that must be observed while using this baler.
- Advise the customer never to discharge bales on sloping ground and if moving bales with a tractor loader, the loader MUST have a grapple.
-  When the baler is transported on a road or highway at night or during the day, accessory lights and devices should be used for adequate warning to operators of other vehicles. Various safety lights and devices are available from your John Deere dealer. In this regard, tell customers to check local governmental regulations.
- Advise the customer to set the front and rear wheels out on the tractors having adjustable-tread width to avoid driving over hay.

(Date delivered)

(Signature)

530PDC:092962

AFTER-SALE CHECK LIST

It is suggested the following items be checked sometime during the first season's operation.

- Go over entire machine for loose or missing bolts.
- Check belt lacings for proper wear.
- All chains are properly tightened.
- All safety shields are in place.
- Check for broken or damaged parts.

- If possible, run the baler to see if it is functioning properly.
- A good quality twine is being used and is threaded properly.
- Check operating adjustments. If possible, inspect wraps on a few bales.
- Review the entire operator's manual with the customer and stress the importance of proper and regular lubrication and safety precautions.

(Date checked)

(Signature)

530PDC:092982

Contents

	Page
Safety	2
Preparing the Tractor	9
Preparing the Baler	14
Attaching and Detaching	19
Transporting	24
Operating the Baler	26
Attachments	41
Lubrication and Maintenance	46
Troubleshooting	54
Service	66
Storage	94
Crime Prevention Tips	96
Assembly	98
Specifications	132
Index	136

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com