

840 BALE PROCESSOR



OPERATORS MANUAL 840 BALE PROCESSOR

OME77322 I6 English

JOHN DEERE OTTUMWA WORKS
OME77322 I6

LITHO IN THE U.S.A.
ENGLISH



Introduction

Read this manual carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

This manual should be considered a permanent part of your machine and should remain with the machine when you sell it.

Measurements in this manual are U.S. customary units and their metric equivalents.

Right-hand and left-hand sides of the implement are determined by facing in the direction the implement will travel when going forward.

 
Warranty appears on your copy of the purchase order which you should have received from your dealer.

The tire manufacturer's warranty supplied with your machine may not apply outside the U.S.

Write product identification numbers in the Specifications section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.



CAUTION: Some pictures in this manual show the machine with safety shields removed for a better view of the subject pictured. The machine should NEVER be operated with any of the safety shields removed.

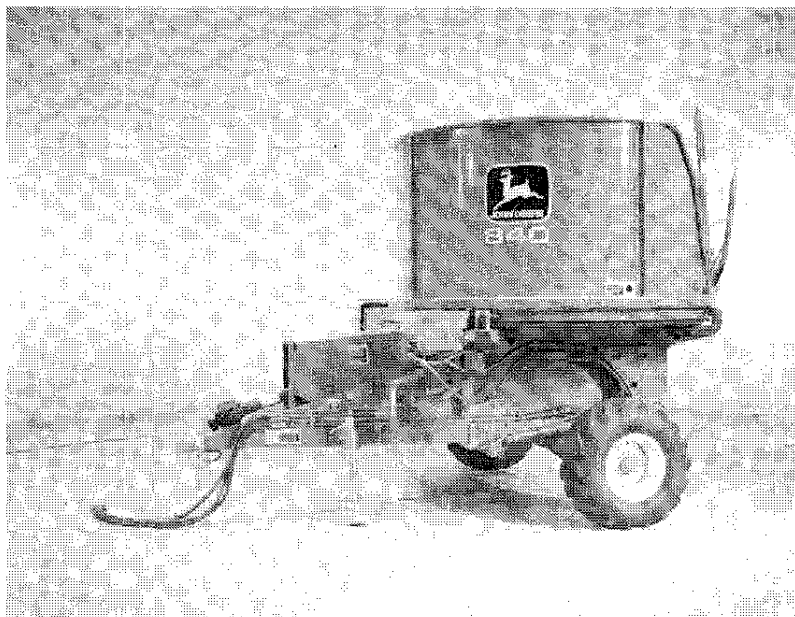

John Deere 840 Bale Processor

All information, illustrations and specifications in this manual are based on the latest product information available at the time of publication. The right is reserved to make changes at any time without notice.

Checklists

840 BALE PROCESSOR

PREDELIVERY CHECKLIST

After the processor has been completely set up, inspect it thoroughly to be sure it is ready to operate properly before delivering it to the customer. The following checklist is a reminder of points to inspect. Check off each item as it is found satisfactory or after proper adjustment is made.

- Processor has been assembled properly.
- Bolts, nuts, bearing collars and set screws are tight.
- Wheel hub bolts are properly tightened and tires are inflated to recommended pressure.
- Lubricate all lubrication points; be sure all fittings are taking grease and check all lubrication seals for leakage.
- Gear case is lubricated and vented properly.
- Make sure slip clutch will slip.
- Tub drive chain is properly tensioned and cog driver is properly positioned with tub drive cogs.
- Connect processor securely to tractor drawbar and check hydraulic system for leaks and proper operation of the hydraulic components.
- Be sure tub tilts smoothly. When tub is tilted, be sure tub tilt lockout valve functions properly and brake is engaged to prevent rotor rotation. If rotor can be rotated, adjust brake springs or linkage.
- Hydraulic motor and tub speed control valve functions properly. Tub rotates without any binding.
- Connect PTO and check operation of PTO, gear case and rotor. Watch for any signs of faulty operation, vibration or unusual sounds. After a period of operation, disengage PTO and shut off tractor engine. Check for loose bolts, heated bearings and gear case.
- Clean the processor and touch up any places where the paint is nicked or scratched. Be sure all decals are properly affixed and undamaged.
- Tire pressure has been checked.
- Safety chain is attached.

(Date Set Up)

(Signature of Set-Up Technician)

E01;;840BU A 150886

OWNER REGISTER

Name _____
County _____ City _____
State _____ Zip _____
Serial Number _____
Model Number _____
Date Sold _____

E01;;330BU B 260385

E97;IFC 6 180886

Checklists

DELIVERY CHECKLIST

The following checklist is a reminder of very important information which should be conveyed directly to the customer at the time the processor is delivered. Check off each item as it is fully explained.

- Advise customer the tractor 3-point lift arms must be completely raised during operation of the machine. If the arms are in lowered position they will contact tongue or PTO shaft and do considerable damage.
- Advise the customer that the life expectancy of this, like any other machine is dependent on regular lubrication as described in this manual.
- Explain the importance of safe and proper operation of the machine. Point out decals warning the operator of the dangers of unsafe operating procedures and conditions.
- When the processor is transported on a road or highway at night or during the day, accessory lights and devices should be used for adequate warning to operators of other vehicles. The tub should be rotated so the slow moving vehicle emblem is visible from behind. Various safety lights and safety devices are available from your John Deere dealer. In this regard, tell customers to check local governmental regulations.
- Complete Delivery and Warranty Registration forms, listing serial number of machine.
- Explain Warranty. Have dealer and customer sign form.
- Show customer how to hook up machine and operation of controls.
- For the safety of those around the machine, explain the correct adjustment of the rotor rundown brake when tilting the tub.
- Explain the adjustments for operation.
- Advise to use safety chain.
- Give the operator's manual to the customer and explain all operating adjustments and lubrication fully.

(Date Delivered)

(Signature)

Checklists

AFTER-SALE CHECKLIST

It is suggested the following items be checked some-time during the first season's operation.

- Go over entire machine for loose or missing bolts.
- All chains are properly tightened.
- All safety shields are in place.
- Check for damaged or broken parts.
- If possible, run the processor to see if it is functioning properly.
- Review the entire operator's manual with the customer and stress the importance of proper and regular lubrication and safety precautions.

(Date Checked)

(Signature)

E01;840BU C 110985

BEFORE EACH SEASON CHECKLIST

- Be sure recommended lubrication has been performed. Be sure gear case lubricant is not contaminated. If in doubt, drain and refill with new lubricant.
- Check tension of tub drive chain.
- Make sure slip clutch is working properly.
- With the processor operating in a stationary position, observe the operation of moving parts. Watch for any signs of faulty operation or overheated bearings, and listen for any unusual sounds.
- Check and make sure the rotor rundown brake is correctly adjusted and functioning.
- Inspect all bearings to be sure they are tight and not badly worn.
- Check hydraulic system for proper operation and leakage.
- Check tire pressure and wheel bolts.
- Be sure the proper operating adjustments have been made for your crop.

E01;840BU D 150886

Checklists

EACH MORNING OF OPERATION CHECKLIST

- Lubricate items required daily and those whose lubrication time is due.
- Check chain tension for excessive tightness or looseness.
- Look for loose or missing bolts or parts.
- Check hydraulic system for leakage.
- Check tire pressure.
- Check tractor hookup for security, correct connections, and correct functioning controls.
- Clean material from top of discharge chute.

E01;840BU E 150886

Contents

	Page		Page
Safety Signs	1	Service	
Safety	5	Practice Safety	37
Preparing the Tractor	10	Service Tires Safely	37
Attaching and Detaching	11	Bolt Torque Chart	38
Transporting	16	Replacing PTO Shear Bolt	39
Operating the Bale Processor		Removing PTO Drive Shaft Shield	39
Operating the Hydraulic Control Levers	18	Adjusting Rundown Brake Spring	40
Operating the Rotor	18	Adjusting Rundown Brake Linkage	40
Setting Tub Speed	19	Adjusting or Replacing Grid	42
Grid Size	19	Adjusting Tub Rotation and Drive	43
Loading the Bale	20	Adjusting Tub Guide Rollers	44
Processing the Bale	22	Aligning Cog Driver with Cog Track	44
Rundown Brake	24	Adjusting Tub Drive Chain	45
Unclogging the Rotor	25	Adjusting Floating Tines	45
Removing Bale Turn Driver	26	Adjusting Bale Turn Driver	46
Attachments	27	Sharpening Rotor Blades	46
Lubrication and Maintenance		Replacing Rotor Blades	47
Observe Lubrication Symbols	31	Replacing Bearings	
Perform Lubrication and Maintenance	31	(Eccentric Self-Locking Collar)	49
Alternative Lubricants	31	Adjusting Axle Height	49
Hydraulic Pump Oil	31	Replacing Wheel Bearings	50
Storing Lubricants	32	Checking Tire Pressure	50
Cold Weather Operation	32	Replacing Clutch Linings	51
Chains	32	Resetting Clutch	52
Gear Case Oil	33	Slipping Clutch	53
Grease	33	Adjusting Discharge Panel	54
Each Day	34	Cleaning Top of Discharge Chute	54
Every 10 Hours	34	Storage	55
Every 30 Hours	35	Crime Prevention Tips	57
Annually	35	Assembly	59
Troubleshooting	36	Specifications	61
		Index	63

 
 
 
Safety Signs

READ SAFETY SIGNS CAREFULLY




Carefully read and follow all CAUTION and WARNING safety signs.

Keep safety signs in good condition. Replace missing or damaged safety signs.

E01;;840BZ A 270885

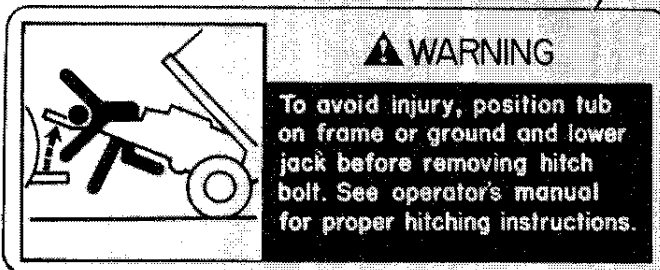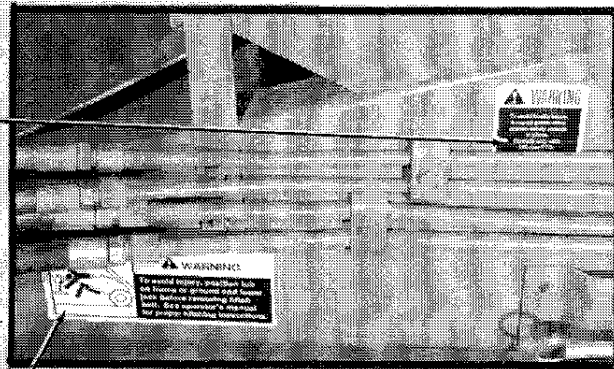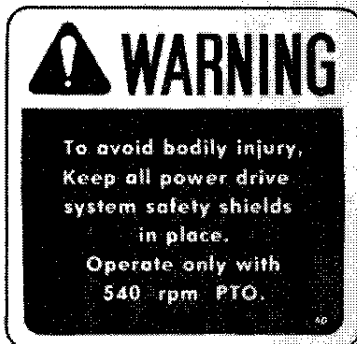

014;E28238 E01;;840BZ B 150886

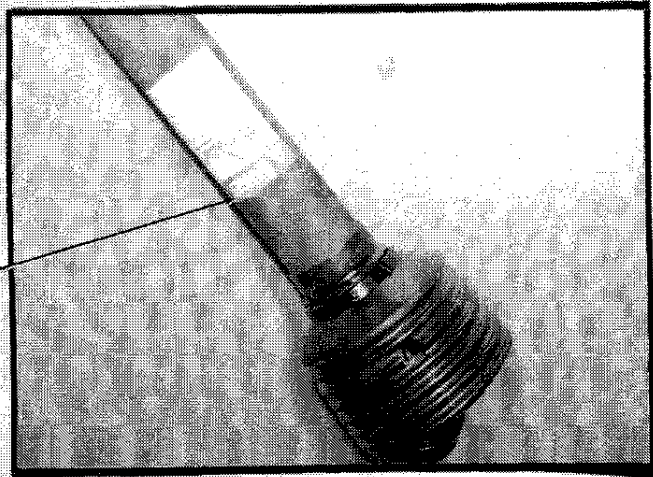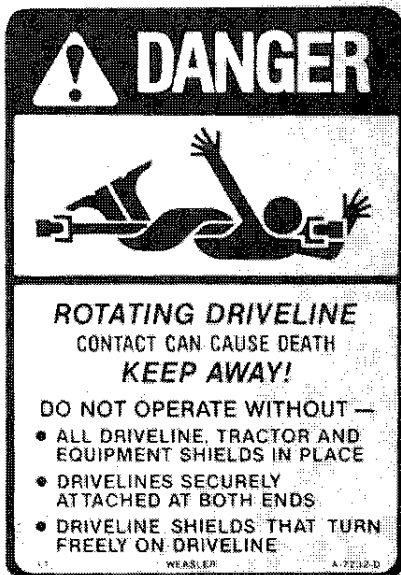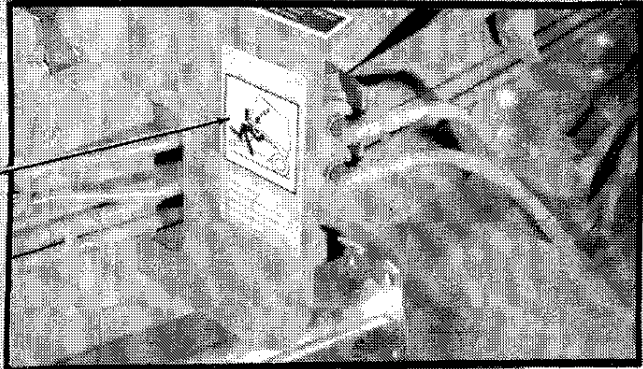   

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com