

# **84 ROUND BALE MOVER AND FEEDER**



## **OPERATORS MANUAL 84 ROUND BALE MOVER AND FEEDER**

OME78010 J6    English

**JOHN DEERE OTTUMWA WORKS  
OME78010 J6**

LITHO IN THE U.S.A.  
ENGLISH



# Introduction

**Read this manual** carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.


**This manual should be considered** a permanent part of your machine and should remain with the machine when you sell it.

**Measurements** in this manual are U.S. customary units and their metric equivalents.

**Right-hand and left-hand** sides of the implement are determined by facing in the direction the implement will travel when going forward.

**Warranty** appears on your copy of the purchase order which you should have received from your dealer.

**Write product identification numbers** in the Specifications section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.

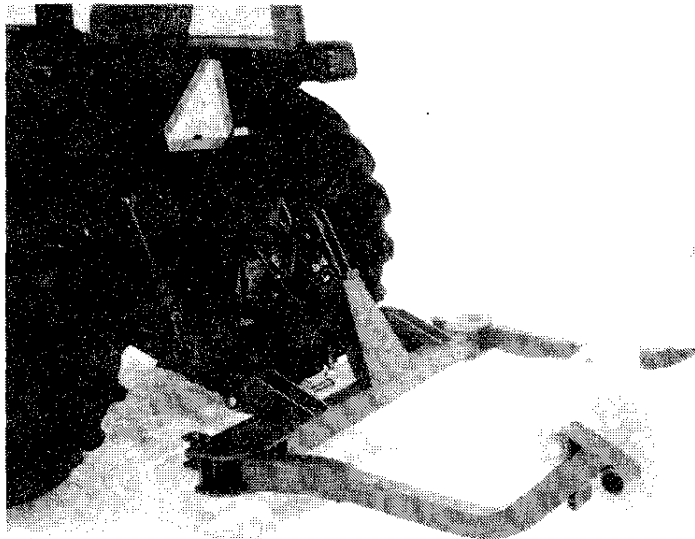

*84 Round Bale Mover and Feeder*

*All information, illustrations and specifications in this manual are based on the latest product information available at the time of publication. The right is reserved to make changes at any time without notice.*

# Checklists

## 84 ROUND BALE MOVER AND FEEDER

### PREDELIVERY CHECKLIST

After the bale mover has been completely set up, inspect it to be sure it is in good operating condition before delivering it to the customer. The following checklist is a reminder of points to inspect. Check off each item as it is found satisfactory or after proper adjustment is made.

- ☐ Bale mover has been assembled properly.
- ☐ All moving parts are working freely.
- ☐ Hydraulic cylinder operates properly.

\_\_\_\_\_  
(Date Set Up)

\_\_\_\_\_  
Signature

E01;;84BMU A 260986

### OWNER REGISTER

Name \_\_\_\_\_  
Rural Route # \_\_\_\_\_  
County \_\_\_\_\_ City \_\_\_\_\_  
State \_\_\_\_\_ Zip \_\_\_\_\_  
Serial Number \_\_\_\_\_  
Model Number \_\_\_\_\_  
Date Sold \_\_\_\_\_

E01;;530U B 220485

## Checklists

### DELIVERY CHECKLIST

The following checklist is a reminder of very important information which should be conveyed directly to the customer at the time the bale mover is delivered. Check off each item as it is fully explained.

- ☐ Give the operator's manual to the customer and encourage the customer to read it.
- ☐ Advise customer of safety precautions that must be observed while using the bale mover.
- ☐ Explain proper bale handling procedures.
- ☐ When the bale mover is transported on a road or highway at night or during the day, accessory lights and devices should be used for adequate warning to operators of other vehicles. Various safety lights and devices are available from your John Deere dealer. In this regard, tell customers to check local governmental regulations.

\_\_\_\_\_  
(Date Delivered)

\_\_\_\_\_  
(Signature)

E01;848MU B 220886

### AFTER SALE CHECKLIST

It is suggested the following items be checked some-time during the first season's operation.

- ☐ Check for loose or missing hardware.
- ☐ Check for broken or damaged parts. Repair as necessary.
- ☐ If possible, operate bale mover to see if it is functioning properly.
- ☐ Review the entire operator's manual with the customer and stress the importance of safety precautions.

\_\_\_\_\_  
(Date Checked)

\_\_\_\_\_  
Signature

E01;848MU C 220886

E99;IFC 7 250886

# Contents

	Page
<b>Safety</b> . . . . .	1
<b>Preparing the Tractor</b>	
Determining Front-End Ballast . . . . .	5
Positioning Sway Blocks or Chains . . . . .	5
<b>Attaching and Detaching</b>	
Check Implement-To-Tire Clearance . . . . .	6
Connecting Implement to 3-Point Hitch . . . . .	6
Attaching Implement to Quick Coupler . . . . .	8
Detaching Bale Mover . . . . .	10
<b>Transporting</b> . . . . .	11
<b>Operating the Bale Mover</b>	
Operating Bale Mover . . . . .	12
Unrolling Round Bales for Feeding . . . . .	13
Positioning Lift Arms and Bale Holders for Various Size Bales. . . . .	14
Setting Arms for 4 Ft (1.22 m) Length Bales . . . . .	14
Setting Arms for 5 Ft (1.53 m) Length Bales . . . . .	15
<b>Lubrication and Maintenance</b> . . . . .	16
<b>Service</b> . . . . .	17
<b>Storage</b> . . . . .	19
<b>Crime Prevention Tips</b> . . . . .	20
<b>Assembly</b> . . . . .	22
<b>Specifications</b> . . . . .	25

# Safety

## RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.



AB6;T81389 053;ALERT 071085

## UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

Safety signs with signal word DANGER or WARNING are typically near specific hazards.

General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.

**▲ DANGER**

**▲ WARNING**

**▲ CAUTION**

AB6;TS187 053;SIGNAL 071085

## OBSERVE “IMPORTANT” MESSAGES

Messages labeled “important” will appear in your operator’s manual and/or on the machine to provide specific instructions for performing adjustments, services, etc. If these instructions are not followed, it could result in damage to the machine.

E05;;300AC B 041084

## LEARN MACHINE SAFETY

Carefully read this manual. Learn how to operate the machine and how to use the controls properly.

Do not let anyone operate this machine without proper instruction.

Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.



AB6;TS183 053;READ2 080785

## OPERATE BALE MOVER AND FEEDER SAFELY

Never allow anyone to walk or work under a raised bale mover.

Be sure that people, livestock, or pets are not standing near the machine while operating.

Operate bale mover from operator's seat only. Remain at controls until operation is completed.

Do not use bale mover as a battering ram.

To avoid handling and stability problems, refer to your tractor operator's manual for recommended weight. The weight of the loaded bale mover may affect the tractor balance and usual tractor handling.

E01;;84BMC A 220886

## KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.




AB6;TS173 053;RIDER 261184

## PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguishers handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

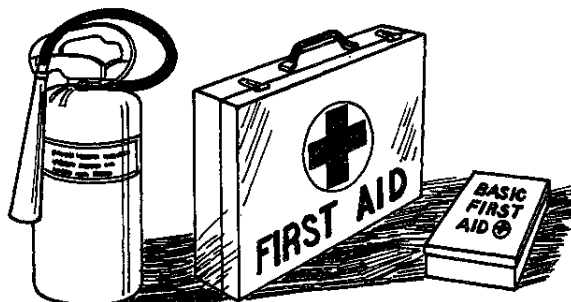


AB6;TS186 053;FIRE2 080785

## PROTECT AGAINST NOISE

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs (A) or earplugs (B) to protect against objectionable or uncomfortable loud noises.

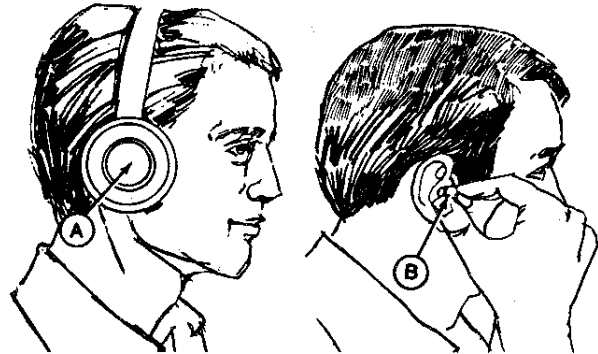

AB6;X7662 053;NOISE 270886

## WEAR PROTECTIVE CLOTHING

Wear fairly tight clothing. . . . . and safety equipment.



AB6;TS184 053;WEAR2 080785


## USE SAFETY LIGHTS AND DEVICES

When transporting your machine on a road or highway at night or during the day, use necessary safety lights. Check local governmental regulations. A safety lighting kit is available from your John Deere dealer.

Keep safety items in good condition. Replace missing or damaged items.

A—Lights  
B—SMV Emblem

C—Reflector Tape  
D—Reflectors

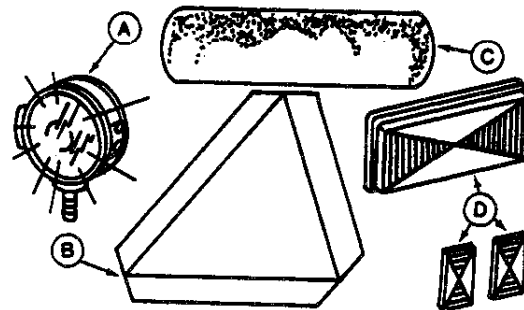


AB6;N36564 053;WARN 111085

## SERVICE BALE MOVER AND FEEDER SAFELY

Always engage parking brake or place transmission in "PARK", lower bale mover to the ground, shut off engine and remove key before servicing bale mover.

Do not work under raised bale mover unless it is securely blocked or held in position.

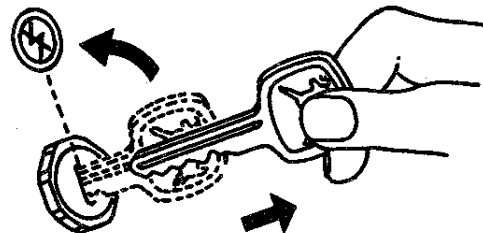


014;W9765 E01;;84BMC B 220886



## **AVOID HIGH-PRESSURE FLUIDS**

Escaping fluid under pressure can penetrate the skin causing serious injury. Relieve pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure. Keep hands and body away from pinholes and nozzles which eject fluids under high pressure. Use a piece of cardboard to search for leaks.

If ANY fluid is injected into the skin, it must be surgically removed within a few hours by a doctor familiar with this type injury or gangrene may result.

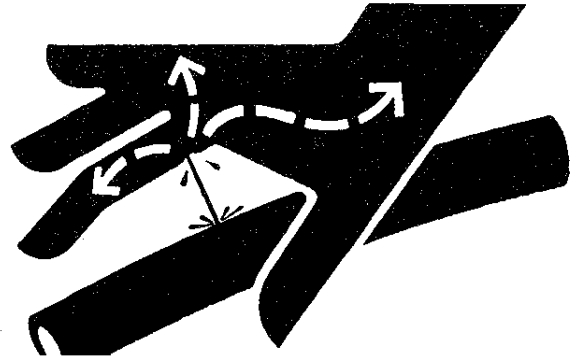

AB6;X9811 053;FLUID 010586

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)