

# 5730 AND 5830 SELF-PROPELLED FORAGE HARVESTERS



## OPERATORS MANUAL 5730 AND 5830 SELF-PROPELLED FORAGE HARVESTERS

OME79601 L8 English

**JOHN DEERE OTTUMWA WORKS**

**OME79601 L8**

(This Manual Replaces OME79057 ISSUE L7)

LITHO IN THE U.S.A.  
ENGLISH



# Introduction

**Read this manual** carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

**This manual should be considered** a permanent part of your machine and should remain with the machine when you sell it.

**Measurements** in this manual are U.S. customary units and their metric equivalents.

**Right-hand and left-hand** sides are determined by facing in the direction of forward travel.

**Write product identification numbers** in the Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.

**Warranty** is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

**The tire manufacturer's** warranty supplied with your machine may not apply outside the U.S.

*All information, illustrations and specifications in this manual are based on the latest product information available at the time of publication. The right is reserved to make changes at any time without notice.*

COPYRIGHT® 1988. DEERE & COMPANY, Moline, Illinois. All rights reserved. A John Deere ILLUSTRATION™ Manual.

PREVIOUS EDITIONS COPYRIGHT® 1985, 1986, 1987

E03;;5830A -IFCOM 150988

E61;JFC 3 031088

# Contents

	Page		Page
<b>Identification Views</b> . . . . .	05-1	<b>Prestarting Checks</b> . . . . .	30-1
<b>Safety Signs</b> . . . . .	10-1	<b>Operating the Engine</b>	
<b>Safety</b> . . . . .	15-1	Starting the Engine . . . . .	35-1
<b>Operator's Station</b>		"Stop Engine" Indicator . . . . .	35-3
Speed, Direction, Height and Spout		"Service Alert" Indicator . . . . .	35-3
Control Levers . . . . .	20-1	Stopping the Engine . . . . .	35-4
Hydraulic Brakes . . . . .	20-1	Cold Weather Operation . . . . .	35-4
Gearshift Lever . . . . .	20-2	<b>Operating the Harvester</b>	
Parking Brake . . . . .	20-2	Moving Through the Field . . . . .	40-1
Ignition Switch . . . . .	20-3	<b>Wheels and Ballast</b>	
Digital Tachometer . . . . .	20-3	Wheel Bolt Torque . . . . .	45-1
Coolant Temperature Gauge . . . . .	20-4	Service Tires Safely . . . . .	45-1
Fuel Gauge . . . . .	20-4	Front Tire Pressure Chart . . . . .	45-3
Voltmeter . . . . .	20-5	Rear Tire Pressure Chart . . . . .	45-4
Indicator:		Harvester as Traction Unit . . . . .	45-5
Engine Oil Pressure . . . . .	20-5	Front Weight . . . . .	45-5
Engine Coolant Temperature . . . . .	20-5	Rear Weight . . . . .	45-6
Hydrostatic Transmission Oil Temperature . . . . .	20-6	Rear Weight Chart (All Countries	
Main Gear Case Temperature . . . . .	20-6	Except Germany) . . . . .	45-7
Hydraulic Oil Temperature . . . . .	20-6	Rear Weight Chart (Germany) . . . . .	45-8
Parking Brake . . . . .	20-6	Checking Toe-In . . . . .	45-9
Air Filter . . . . .	20-7	Adjusting Toe-In . . . . .	45-10
Rotary Screen Drive (North America) . . . . .	20-7	Rear Wheel Spacing Chart . . . . .	45-11
Hydrostatic Charge Pressure . . . . .	20-7	Adjusting the Axle . . . . .	45-12
Main Gear Case Pressure . . . . .	20-7	Adjusting Hydraulic Steering Cylinder . . . . .	45-13
Hydraulic Oil Filter . . . . .	20-8	Front Wheel Spacing . . . . .	45-13
Rear Wheel Drive . . . . .	20-8	Front Wheel Spacing Chart . . . . .	45-14
Metal Detector Switch and Test Button . . . . .	20-8	Wheel Bolt Dowels . . . . .	45-15
Adjusting Harvesting Unit Electric		Installing Wheel Spacers . . . . .	45-15
Downstop . . . . .	20-9	<b>Harvesting Units and Attachments</b>	
Horn Switch . . . . .	20-9	Corn Head Units . . . . .	50-1
Turn Signal and Warning Lamp Switches . . . . .	20-9	Mower Bar Unit . . . . .	50-1
Light Switch . . . . .	20-10	4-Row Stalkers (North America) . . . . .	50-1
Windshield Wiper (Upper) . . . . .	20-10	2-Row Row-Crop Unit . . . . .	50-2
Auxiliary Wiper (Lower) . . . . .	20-11	3-Row Row-Crop Unit . . . . .	50-2
Blower . . . . .	20-11	4-Row Row-Crop Unit . . . . .	50-2
Air Conditioning . . . . .	20-11	Pickup Unit . . . . .	50-2
Air Conditioning High Pressure Switch . . . . .	20-11	4-Meter Pickup Unit (Outside North	
Air Conditioning Low Pressure Switch . . . . .	20-12	America) . . . . .	50-3
Heater . . . . .	20-12	Kernel Processor . . . . .	50-3
Steering Column Adjustment Pedal . . . . .	20-12	SPOUT-TRAK Aiming Control (North	
Seat Adjustments . . . . .	20-13	America) . . . . .	50-3
Adjusting Armrest, Backrest, and		Power Rear Wheel Drive . . . . .	50-3
Lumbar Support . . . . .	20-13	Front Wheel Spacers . . . . .	50-4
Console and Dome Lights . . . . .	20-13	Hydraulic Outlet . . . . .	50-4
Hydraulic Outlet Control Switches . . . . .	20-14	Air Conditioner (Outside North America) . . . . .	50-4
<b>Break-In</b> . . . . .	25-1		

## Contents

	Page		Page
Auxiliary Lighting Package (North America) . . . . .	50-4	Chains . . . . .	60-6
In-Block Coolant Heater . . . . .	50-5	<b>Lubrication and Maintenance</b>	
Heavy-Duty and Extra Heavy Duty Float Springs . . . . .	50-5	Follow Recommended Intervals . . . . .	65-1
Suitcase Weights . . . . .	50-5	Observe Lubrication Symbols . . . . .	65-2
Radio (Not Available for Germany) . . . . .	50-6	Lubrication and Maintenance	
Lower Windshield Wiper (North America) . . . . .	50-6	As Required . . . . .	65-3
Feed Roll Pan . . . . .	50-6	Every 10 Hours . . . . .	65-4
Horizontal Discharge Spout Extension and Brace . . . . .	50-6	Every 50 Hours . . . . .	65-7
Precleaner Grille . . . . .	50-7	Every 100 Hours . . . . .	65-8
Kernel Processor Recirculating Screens . . . . .	50-7	Every 200 Hours . . . . .	65-11
Recutter Screen, Spout Cover and Spout Brace . . . . .	50-9	Every 500 Hours or Annually . . . . .	65-13
Tall Crop Dividers . . . . .	50-10	Annually . . . . .	65-16
Grass Fan Blades . . . . .	50-10	<b>Installing and Removing Harvesting Units</b>	
6-Row Row-Crop Unit (Outside North America) . . . . .	50-10	Harvesting Unit Checklist . . . . .	70-1
<b>Transporting</b>		Drive Chain Size Chart . . . . .	70-2
Transport Information . . . . .	55-1	Attaching Harvesting Units . . . . .	70-2
Secure Cab Roof . . . . .	55-1	Removing Harvesting Unit . . . . .	70-4
Antenna Storage . . . . .	55-2	Adjusting Harvesting Unit Float and Position . . . . .	70-5
Turn Signal and Warning Lamp Switches . . . . .	55-2	Preparing Cutterhead Housing for Use With Ear Corn Head . . . . .	70-8
Swing-Out Lights (Outside North America) . . . . .	55-2	Preparing to Install Heavy-Duty Float Springs . . . . .	70-10
"D" Panel (France) . . . . .	55-3	Converting Heavy-Duty Float Springs for 7-Ft Pickups . . . . .	70-11
Beacon (Italy and Germany-with 28L Tires) . . . . .	55-3	Adjusting Heavy-Duty Float System . . . . .	70-12
Transport Panel (Italy and Germany) . . . . .	55-3	Preparing to Install Extra Heavy-Duty Float Springs . . . . .	70-15
Transport Switch (Germany and Italy) . . . . .	55-4	<b>Cutterhead Housing</b>	
Front Guard (Germany) . . . . .	55-4	Length-of-Cut . . . . .	75-1
Transport Guard (Germany) . . . . .	55-4	Adjustment for Length of Cut . . . . .	75-1
<b>Fuels and Lubricants</b>		Adjusting Length-of-Cut Chain . . . . .	75-2
Diesel Fuel Specifications (North America) . . . . .	60-1	Sharpening Cutterhead Knives . . . . .	75-3
Fuel (Outside North America) . . . . .	60-1	Adjusting Stationary Knife . . . . .	75-6
Storing and Handling Fuel . . . . .	60-2	Removing Stationary Knife . . . . .	75-8
Filling Fuel Tank . . . . .	60-2	Checking Stationary Knife for Wear . . . . .	75-9
Diesel Engine Oil . . . . .	60-2	Installing Stationary Knife . . . . .	75-10
Hydrostatic Drive Oil . . . . .	60-3	Correcting Knife Adjuster End Play . . . . .	75-12
Gear Oil . . . . .	60-3	Recutter Screen Usage . . . . .	75-13
Hydrostatic Drive Oil . . . . .	60-4	Kernel Processor Recirculating Screens . . . . .	75-14
Hydrostatic Drive System Outside the United States and Canada . . . . .	60-4	Installing Recutter Screen Frame . . . . .	75-15
Extreme Pressure Grease . . . . .	60-5	Installing Recutter Screen . . . . .	75-16
Hydraulic Brakes . . . . .	60-5	Installing Recirculation Screen . . . . .	75-16
Lubricant Storage . . . . .	60-5	Adjusting Recutter or Recirculating Screen . . . . .	75-19
Alternate Lubricants . . . . .	60-6	Knife Bolt Torque . . . . .	75-20
		Replacing or Adjusting Partial Set of Cutterhead Knives . . . . .	75-21

## Contents

	Page		Page
Replacing Complete Set of Cutterhead Knives . . . . .	75-22	Functional Check for SPOUT-TRAK Aiming . . . . .	95-2
Replacing Clamp Bars . . . . .	75-23	Adjusting:	
Replacing Knife Retainer Bar . . . . .	75-24	SPOUT-TRAK Aiming Magnetic Pickup . . . . .	95-3
Leveling Knife Sharpener . . . . .	75-25	Wagon Tongue Clevis . . . . .	95-3
Adjusting Knife Gauge Bar . . . . .	75-26	Spout Rotation for Proper Working Width . . . . .	95-4
Replacing Knife Sharpening Stone . . . . .	75-26	Spout Alignment for Uniform Wagon Loading . . . . .	95-6
Adjusting:		Spout Rotary Potentiometer . . . . .	95-6
Smooth Roll Scraper . . . . .	75-27	Tongue Follower Rotary Potentiometer . . . . .	95-8
Reverse Drive Motor Cam . . . . .	75-28	SPOUT-TRAK Aiming Troubleshooting . . . . .	95-9
Feed Roll Drive Case Chain . . . . .	75-28		
Slip Clutch Alert . . . . .	75-29	<b>Engine Systems</b>	
Feed Roll Drive Shift Lever . . . . .	75-30	Clean Engine Compartment . . . . .	100-1
Feed Roll and Harvesting Unit Drive Lever . . . . .	75-30	Fuel System . . . . .	100-1
Replacing Wear Liners . . . . .	75-31	Adjusting Throttle . . . . .	100-2
Adjusting Feed Roll Springs . . . . .	75-31	Adjusting the Fuel Shut Off Cable . . . . .	100-2
Removing Cutterhead and Feed Roll Assembly . . . . .	75-32	Storing Fuel . . . . .	100-2
Adjusting Feed Roll Gear Case Drive Coupler . . . . .	75-37	Filling Fuel Tank . . . . .	100-2
Installing Lower Feed Roll Pan . . . . .	75-38	Bleeding Fuel System . . . . .	100-3
		Fuel Transfer Pump . . . . .	100-4
<b>Metal Detector</b>		Inspecting and Cleaning Fuel System . . . . .	100-4
Operating IRON-GARD™ Metal Detector . . . . .	80-1	Replacing Fuel Filter Elements . . . . .	100-5
Operating the Metal Detector Lockout . . . . .	80-2	Fuel Injectors . . . . .	100-5
When Metal is Detected . . . . .	80-2	Replacing Engine Oil and Filter, Bypass Filter . . . . .	100-6
Adjusting Upper and Lower Stop Pawls . . . . .	80-3	Cold Weather Operation . . . . .	100-7
Metal Detector Test . . . . .	80-4	Antifreeze . . . . .	100-8
		General Cooling System Information . . . . .	100-9
<b>Auger</b>		Radiator Cap . . . . .	100-9
Replacing Auger Drive Shear Bolts . . . . .	85-1	Cleaning Cooling System . . . . .	100-10
Auger Doors (Double Auger Conveyor) . . . . .	85-1	Cleaning Rotary Screen . . . . .	100-11
Removing Auger Assembly (Single or Double) . . . . .	85-1	Adjusting Screen Baffle . . . . .	100-11
		Cleaning the Radiator Condenser, Oil Coolers, and Vacuum Ducts . . . . .	100-12
<b>Blower and Discharge Spout</b>		Adjusting Rotary Screen Door . . . . .	100-13
Removing Fan Doors . . . . .	90-1	Adjusting Rotary Screen Knife . . . . .	100-13
Grass Fan Blades . . . . .	90-1	Air Filtering System . . . . .	100-14
Adjusting Fan Blades . . . . .	90-1	Precleaner . . . . .	100-14
Install:		Removing Primary Element . . . . .	100-14
Horizontal Extension, Electric Spout Motor, and Lamp . . . . .	90-2	Cleaning Primary Element . . . . .	100-15
Vertical Spout Extension (Option) . . . . .	90-3	Washing Primary Element . . . . .	100-15
Spout Brace . . . . .	90-4	Inspecting Primary Element . . . . .	100-16
Spout Cover (Option) . . . . .	90-5		
Horizontal Spout Extension and Brace (NA) . . . . .	90-5	<b>Electrical Systems</b>	
Auxiliary Spout on Rear Lamp (Option) . . . . .	90-6	General Electrical System Information . . . . .	105-1
		Checking Voltage . . . . .	105-1
<b>SPOUT-TRAK</b>		Main Circuit Breakers . . . . .	105-2
SPOUT-TRAK Aiming Operation . . . . .	95-1	Console Circuit Breakers . . . . .	105-3
		Auxiliary Accessories . . . . .	105-4

## Contents

	<b>Page</b>		<b>Page</b>
Accessory Relay . . . . .	105-4	Adjusting Parking Brake . . . . .	115-9
Diagnosing Electrical Malfunctions . . . . .	105-5	<b>Cab Functions</b>	
General Battery Information . . . . .	105-6	Opening Cab Roof . . . . .	120-1
Servicing Batteries . . . . .	105-6	Removing Cab Filters . . . . .	120-2
Installing Batteries . . . . .	105-8	Checking Air Conditioning Refrigerant Level . . . . .	120-4
Using a Booster Battery . . . . .	105-9	High Pressure Switch . . . . .	120-4
Alternator and Voltage Regulator . . . . .	105-9	Tightening Compressor Drive Belt . . . . .	120-5
90-Amp John Deere Alternator Diagram . . . . .	105-9	Checking Heater and Air Conditioner Trouble Areas . . . . .	120-5
Safeguarding Alternator and Regulator . . . . .	105-10	<b>Troubleshooting</b>	
Adjusting Fan and Alternator Belt Tension . . . . .	105-11	Main Drive . . . . .	125-1
General Starter Information . . . . .	105-11	Cutterhead and Feed Rolls . . . . .	125-3
John Deere Starter . . . . .	105-12	Knife Sharpener . . . . .	125-4
Starter Checklist . . . . .	105-12	Stationary Knife Adjustment . . . . .	125-6
Neutral Start Switch . . . . .	105-13	Engine . . . . .	125-7
Adjusting the Parking Brake (Indicator Lights and Alarm Switch) . . . . .	105-13	Electric Downstop . . . . .	125-14
General Feed Roll Electromagnetic Clutch Information . . . . .	105-14	Lift and Float System . . . . .	125-15
Checking Defective Feed Roll Electromagnetic Clutch . . . . .	105-15	Power Train to Ground Drive . . . . .	125-16
Burnish Electric Clutch . . . . .	105-16	Hydrostatic System . . . . .	125-19
Electric Spout Cap Motor . . . . .	105-17	Power Rear Wheels . . . . .	125-20
Electric Rotary Air Screen Motor and Switch . . . . .	105-17	Rotary Air Screen . . . . .	125-21
Electric Downstop . . . . .	105-18	Spout Delivery . . . . .	125-22
<b>Hydraulic Systems</b>		Wagon Dump System . . . . .	125-23
Hydraulic System General Information . . . . .	110-1	Hydraulic System . . . . .	125-24
Hydraulic and Steering System Diagram . . . . .	110-2	Electric Spout Cap Motor . . . . .	125-27
Adjusting Lift or Lowering Rate of Harvesting Unit . . . . .	110-3	Electrical . . . . .	125-28
Rear Hydraulic Outlet . . . . .	110-4	Digital Display Tachometer Speed Monitoring System . . . . .	125-30
Adjusting Pump Drive Belt Tension . . . . .	110-5	Operator's Cab Systems . . . . .	125-31
Main Gear Case Cooling Circuit . . . . .	110-6	<b>Storage</b>	
<b>Power Train and Brakes</b>		End of Season Service . . . . .	130-1
Tightening Bearing Locking Collars . . . . .	115-1	Beginning of Season Service . . . . .	130-3
Adjusting: Speed and Direction Control Lever . . . . .	115-1	<b>Crime Prevention Tips</b> . . . . .	135-1
Force on Speed and Direction Control Lever . . . . .	115-2	<b>Specifications</b> . . . . .	140-1
Gearshift Linkage . . . . .	115-2	<b>Index</b> . . . . .	145-1
Fan and Cutterhead Drive Gear Case . . . . .	115-3		
Adjusting Main Clutch . . . . .	115-4		
Adjusting Fan and Cutterhead Clutch Lever . . . . .	115-6		
Adjusting Cutterhead Belt . . . . .	115-6		
Adding Brake Fluid to Master Cylinder . . . . .	115-7		
Adjusting Master Cylinder Push Rods . . . . .	115-7		
Bleeding the Brakes . . . . .	115-8		

# Identification Views

## WORLDWIDE PUBLICATION

This publication is applicable worldwide. Items unique to certain areas of the world will be described in each section.

E03;;5831D A 050685


## NORTH AMERICA



5830 Forage Harvester with 4-Row Row-Crop.

1UA;E26238 E03;;5831D B 050685

**OUTSIDE NORTH AMERICA**

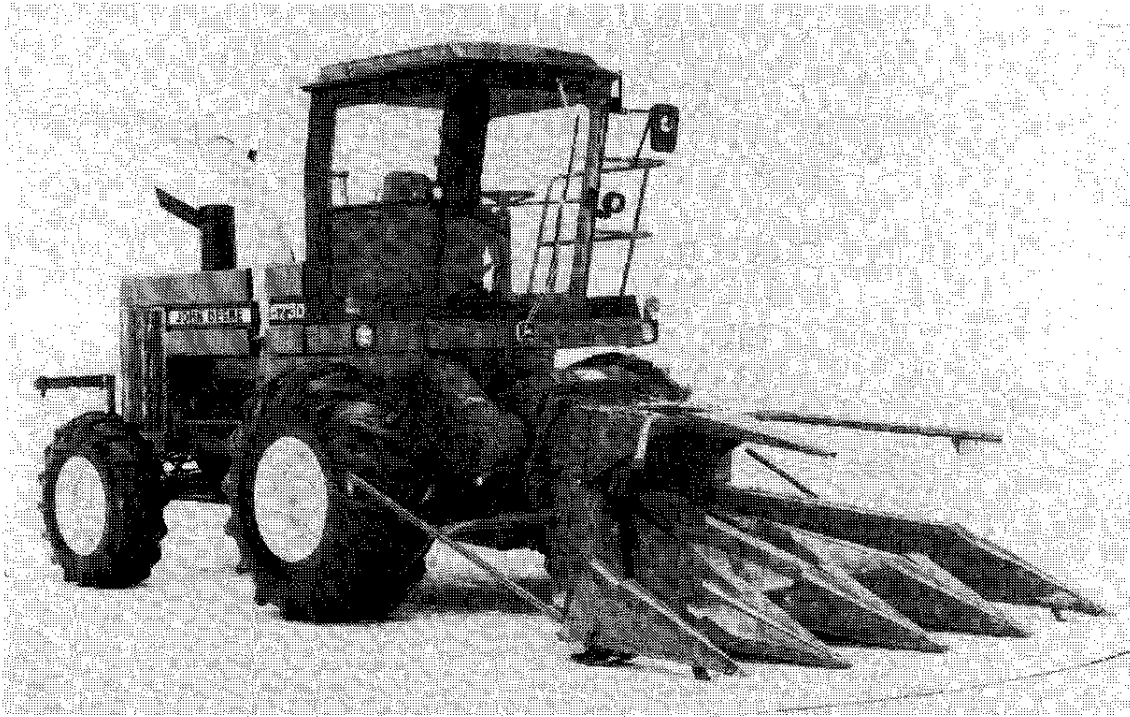

5730 Forage Harvester with 4-Row Row-Crop.

1UA;E26239 E03;583ID C 050685



# Safety Signs


## READ SAFETY SIGNS CAREFULLY

Carefully read and follow all **CAUTION** and **WARNING** safety signs.

Keep safety signs in good condition. Replace missing or damaged safety signs.

E03;583Z A 060685

**OPERATING INSTRUCTIONS METAL DETECTOR**




1. Shift feedroll drive to neutral.
2. Start engine.
3. Engage main drive clutch.
4. Depress upper portion of metal detector switch (green and red lights and alarm will come on).
5. Shift feedroll drive to reverse (red light will go out and alarm will stop).
6. Slowly shift feedroll drive to forward.
7. When metal is detected (red light and alarm will come on) shift feedroll drive to reverse.
8. Shift feedroll drive to neutral.
9. Disengage main clutch.
10. Shut off engine and ignition switch.
11. Search for and remove metal.

**CAUTION**

**TO AVOID SERIOUS PERSONAL INJURY:**

Never search for detected metal until you

1. Disengage all drives.
2. Shut off the engine and ignition switch.
3. Wait for all parts to stop moving.

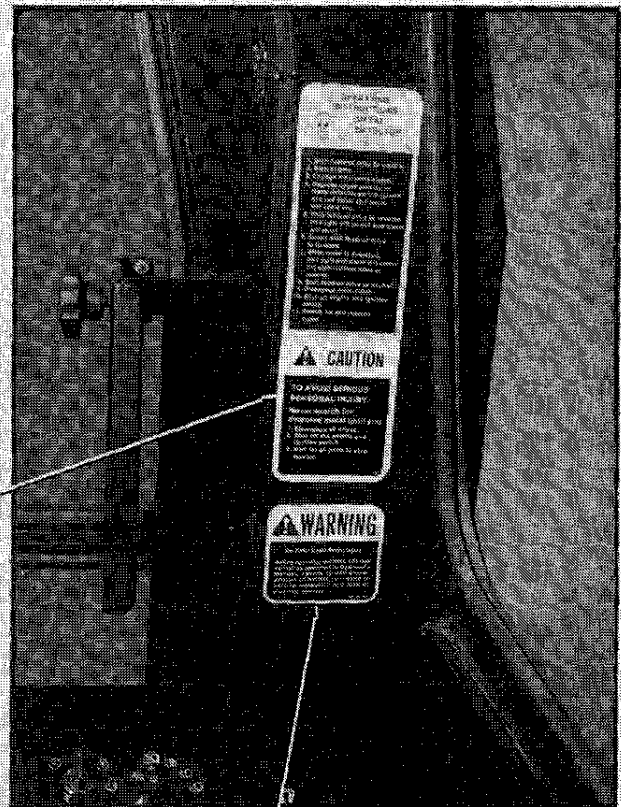

**WARNING**

Be Safe—Avoid Bodily Injury

Before operating machine, add rear ballast as specified in Operator's Manual. Failure to add proper amount of ballast can result in vehicle instability and loss of steering control.

014;E26533 E03;583Z B 060685

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)