

2360
Self-Propelled
Windrower

John Deere Ottumwa Works
OME81676 Issue E1
(This manual replaces OMW38925 L7)

LITHO IN U.S.A.
ENGLISH

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are U.S. customary units and their metric equivalents.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS in the Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S.



W14114 -UN-25AUG88

Contents

	Page		Page
Safety	05-1	Prestarting Checks	
Safety Signs	10-1	Check Daily	25-1
Operator's Station		Neutral Safety Lock Linkage	25-5
Windrower and Platform Controls	15-1	Operating The Engine	
Foot Controls	15-1	Start-Up Precautions	30-1
Using Parking Brake	15-2	Reduce Fuel Consumption	30-1
Using Key Switch	15-2	Neutral Safety Lock Linkage	30-2
Light Switch Positions	15-2	Checking Instruments	30-2
Using Head Lamps	15-3	Adjusting Controls to Start Engine	30-3
Using Field Lamps	15-3	Starting Engine	30-4
Use Warning Lamps	15-3	Warming Up Engine	30-4
Using Turn Signals	15-4	Idling The Engine	30-5
Check Instruments Often	15-4	Restarting Stalled Diesel Engine	30-5
Watch Fuel Level	15-5	Stopping The Engine	30-5
Check Engine Temperature Gauge	15-5	Using A Booster Battery	30-6
Check Volt Meter	15-5	Diesel Engine	30-6
Hour Meter	15-6	Gasoline Engine	30-7
Observe Indicator Lights and Buzzers	15-6	Operating The Windrower	
Adjusting Blower Speed	15-7	Driving The Windrower Forward	35-1
Adjusting Louvered Air Outlets	15-7	Driving The Windrower Rearward	35-1
Controlling Air Conditioning	15-7	Stopping The Windrower	35-2
Controlling Heater	15-7	Making A Spin Turn	35-2
Controlling Windshield Wiper	15-8	Operating The Platform	35-2
Opening Window	15-8	Rear Weights	35-3
Controlling Dome Light	15-8	Adding Rear Ballast	35-3
Adjusting Steering Wheel	15-9	Attachments	
Adjusting Arm Rest	15-9	Aspirated Air Cleaner	40-1
Adjusting Seat for Operator Weight	15-9	Aspirated Precleaner Assembly	40-1
Adjusting Seat Height	15-10	Auxiliary Float Springs	40-1
Adjusting Seat Fore/Aft Position	15-10	Antenna	40-2
Engine Break-In		Install Speakers	40-2
Engine Break-In	20-1	Install Radio	40-3
Check V-Belts	20-2	Install Wiring Harness	40-4
Drain Diesel Engine Oil	20-3	Install Antenna	40-4
Drain Gas Engine Oil	20-4		
Hydraulic Oil Filters	20-4		
Check Wheel Bolt Torque	20-5		

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OME81676 E1-19-30MAY91

COPYRIGHT© 1991
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright 1989 Deere & Company

Contents

	Page		Page
Transporting			
Driving Windrower On Roads	45-1	Checking Refrigerant Charge	65-11
Towing Windrower	45-2	Checking Low Pressure Cut Out Switch	65-11
Transporting On Trailer	45-2	Removing Recirculating Air Filters	65-12
Fuels And Lubricants			
Diesel Fuel	50-1	Removing Cab Filter Element	65-12
Gasoline	50-1	Cleaning Cab Filters	65-13
Storing Fuel	50-2	Servicing Air Cleaner (Diesel)	65-13
Filling Fuel Tank	50-2	Replacing Air Cleaner Element	65-14
Selecting Grease	50-3	Servicing Air Cleaner (Gasoline)	65-15
Hydraulic Oil	50-3	Replacing Air Cleaner (Element)	65-15
Engine Oil	50-4	Inspecting Element	65-15
Storing Lubricants	50-5	Cleaning Element	65-16
Alternative Lubricants	50-5	Washing Element	65-16
Lubrication And Maintenance			
Observe Service Intervals	55-1	Avoid Battery Explosion	65-17
Hydraulic Oil Filters	55-2	Battery Precautions	65-17
Service Intervals	55-2	Preventing Battery Damage	65-18
Use Correct Filter Element	55-2	Servicing Battery	65-19
As Required	55-3	Charging Battery	65-20
Daily Checks	55-4	Safeguarding Alternator and Regulator	65-21
25 Hours	55-5	Using a Booster Battery	65-21
50 Hours	55-6	Gasoline Engine	65-22
After First 100 Hours	55-7	Servicing Lamp Bulbs	65-23
100 Hours Gasoline Engine	55-8	Replacing Head or Field Lamp Bulb	65-23
200 Hours or Annually	55-9	Adjusting Headlamps	65-23
600 Hours Diesel Engine	55-10	Adjusting Field Lamps	65-24
1000 Hours	55-10	Replacing Console Light Bulbs	65-24
2000 Hours Diesel Engine	55-10	Replacing Turn Indicator Light Bulb	65-24
Two Years	55-11	Replacing Dome Light Bulb	65-25
Troubleshooting 60-1			
Service			
Service Tires Safely	65-1	Replacing Tail Light Bulb	65-25
Service Machine Safely	65-1	Checking Circuit Breakers (Console)	65-25
Checking Bolt Torque	65-2	Checking Main Circuit Breaker	65-26
Tightening O-Ring Fittings	65-3	Bleeding Fuel System (Diesel)	65-26
Tightening Flare Type Tube Fittings	65-3	Adjusting High Speed Idle (Diesel)	65-28
Cleaning Engine Side Screens	65-4	Adjusting Low Idle Speed (Diesel)	65-28
Opening Side Screens	65-4	Inspecting and Gapping Spark Plugs	65-29
Cleaning Radiator, Condenser and Oil Cooler Cores	65-5	Checking Spark Plug Firing Order	65-30
Opening Hood	65-6	Adjusting Ignition Timing	65-30
Checking Coolant Level	65-7	Adjusting Distributor Air Gap	65-32
Flushing Coolant System	65-8	Adjusting High Speed Idle (Gasoline)	65-32
Winterize Cooling System	65-9	Adjusting Governor	65-33
Replacing Thermostat	65-10	Checking Governor Oil Level	65-34
		Adjusting Idle Mixture	65-34
		Draining the Carburetor	65-34
		Adjusting Low Idle (Gasoline)	65-35
		Adjusting Neutral Safety Lock Linkage	65-35
		Adjusting Platform Hydraulic Pump Drive Belt	65-41
		Adjusting Main Hydraulic Pump Drive Belt	65-41
		Adjusting Platform Drive Belt	65-42
		Adjusting Belt Guides	65-42
		Adjusting Belt Shield	65-43

Continued on next page

Contents

	Page
Adjusting Reel and Platform Lift Control Valve Linkage	65-43
Adjusting Draper and Reel Speed Control Valve Linkage	65-44
Adjusting Parking Brake	65-44
Replacing Fuel Filter (Diesel)	65-47
Adjusting V-Belts (Diesel)	65-48
Adjusting V-Belts (Gasoline)	65-49
Installing Wheels	65-50
Storage	
End of Season Service	70-1
Crime Prevention Tips	75-1
Assembly	
Unloading the Windrower	80-1
Remove Dunnage	80-1
Check Chain Length	80-2
Preliminary Checks	80-5
Specifications	85-1
Index	

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-04JUN90

T81389 -UN-07DEC88

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-04JUN90

TS187 -19-30SEP88


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

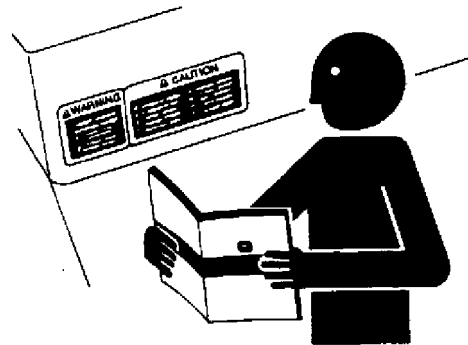


DX,READ -19-04JUN90

TS201 -UN-23AUG88



EMERGENCY EXIT

For an emergency exit, right-hand side window can be opened. Pull inward on both latches (A) and push outward on window.

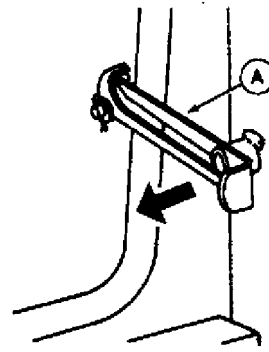

W07,2SY,B -19-05OCT84

W10339 -UN-12MAY89


PROTECT BYSTANDERS

Never operate the machine near people. Do not stand near the machine while cutterbar is in motion.

Keep all shields in place.

DO NOT allow children to operate tractor.

Operate the machine from tractor seat only.

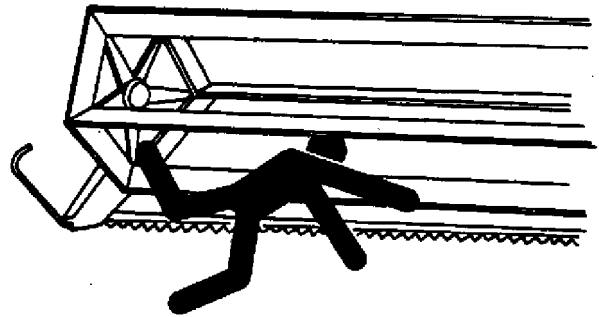

W02,14SY,AA -19-06OCT87

W13487 -UN-05OCT88

CHECK BEFORE OPERATING

Become familiar with all controls.

Check all hardware, especially knife and knife drive hardware.

Check condition of hydraulic hoses and connections.

Check condition of drive belts.

Remove foreign objects from machine.

Inspect driveline shield for free rotation.

Be sure all shields are in place.


W02,14SY,I -19-25SEP87

PREVENT MACHINE RUNAWAY

Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

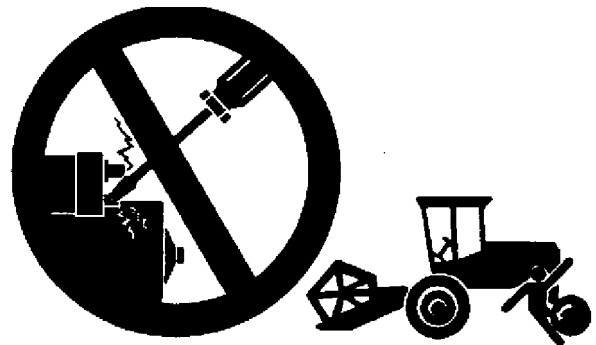

W07,2SY,JA1 -19-03JUN91

W14115 -UN-06OCT88



WASHING FRONT WINDOW

To wash front window, stand on ground and use a long handled squeegee or mop to reach top of window. DO NOT stand on top beam of platform.



W9691 -UN-30NOV89

W07,2SY,L -19-01OCT87

OPERATE SAFELY

Use handrail and handgrip when mounting or dismounting machine.

Avoid inclines, ditches, and fences.

Avoid sudden starts and stops.

Steering is opposite to normal when reversing. Hold wheel at bottom and turn wheel in direction you want the rear of machine to travel.

Be sure area is clear before making turns, machine travels in a large arc.

Reduce ground speed when traveling over rough ground.

When traveling downhill, keep platform at minimum height. This provides maximum stability if forward motion is stopped for any reason.

W07,2SY,N -19-01OCT87




STAY CLEAR OF MOVING WINDROWER

Be sure everyone is clear of windrower and platform before starting engine or moving steering wheel. Windrower will move if steering wheel is turned even if ground speed control lever is in neutral.

Never try to get on or off a moving windrower.

Before dismounting, place the ground speed control lever in NEUTRAL, engage the parking brake and lower the platform to the ground. Stop the engine and remove the key.

Never attempt to start or operate the Windrower except from operator's station.

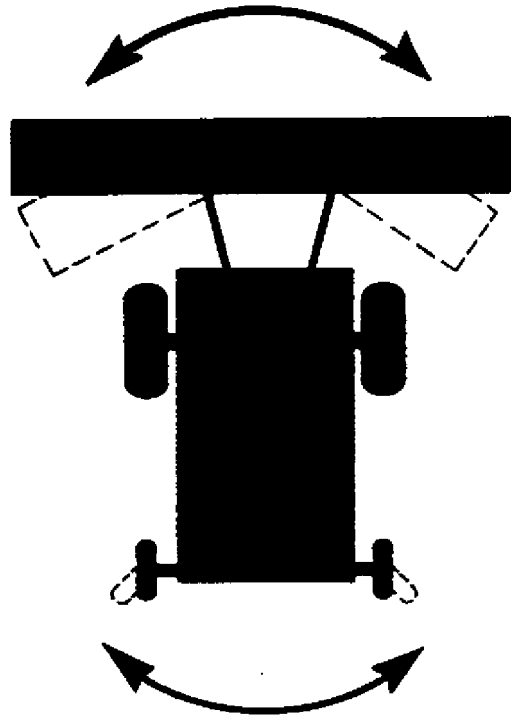


W07,2SY,P -19-01OCT87

W9743 -UN-12MAY89

AVOID EXHAUST FUMES

To avoid exhaust gas hazards, never run engine in a closed building.

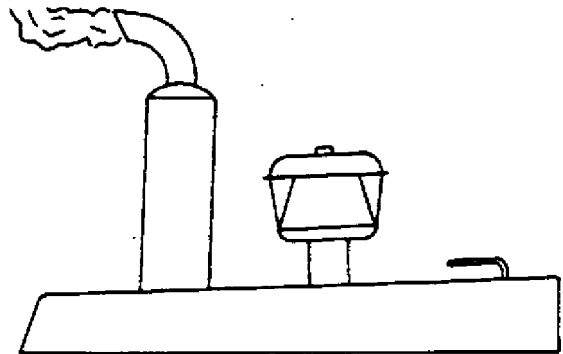


W07,2SY,T -19-01OCT87

W9685 -UN-12MAY89

LEAVING WINDROWER UNATTENDED

Before leaving the windrower unattended, lower platform to the ground, turn off engine, and remove key. The ground speed lever must be in neutral and the parking brake engaged. Lock cab door.

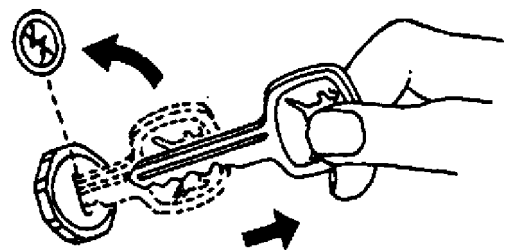

W07,2SY,K -19-01OCT87

W9765 -UN-24JAN89



KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.



W07_2SY,U -19-07OCT87

W14116 -UN-06OCT88

HANDLE FUEL SAFELY—AVOID FIRES

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.



DX_FIRE1 -19-04JUN90


TS202 -UN-23AUG88

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

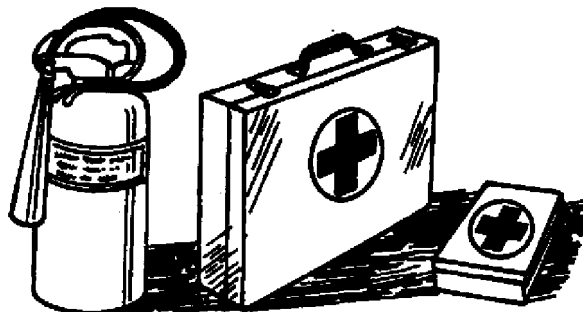

DX_FIRE2 -19-04JUN90

TS291 -UN-23AUG88




WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

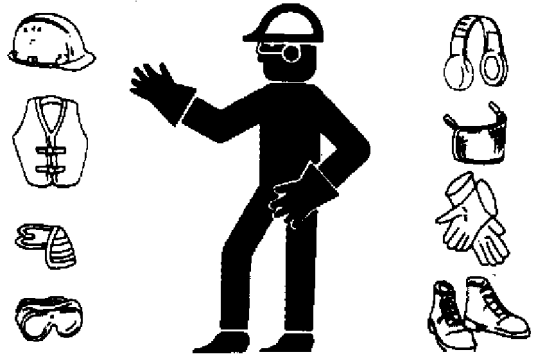

DX,WEAR -19-10SEP90



TS206 -UN-23AUG68

AVOID INJURY FROM MOVING PARTS

Never wear loose fitting clothing.

Keep hands, feet, hair, and clothing away from rotating bats, drive belts, pulleys, and other moving parts.

Never attempt to clear obstructions or objects from platform while machine is in operation.

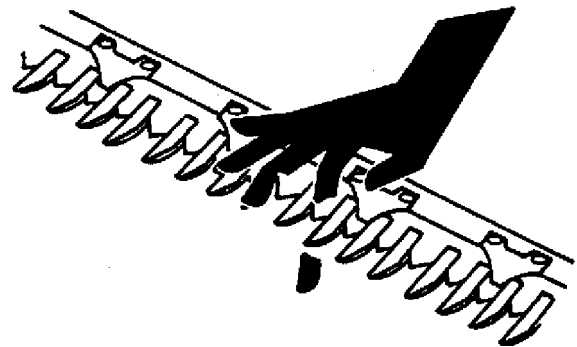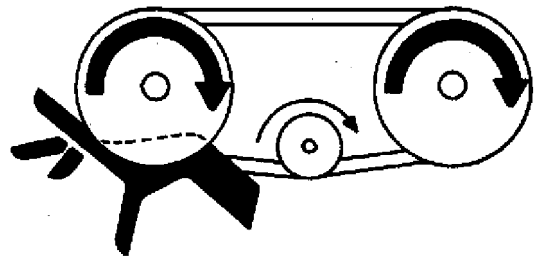

W02,14SY,AD -19-25SEP87

-UN-05OCT88

W14077

-UN-05OCT88

W14078



STAY CLEAR OF ROTATING DRIVELINES

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.



DX,PTO -19-04JUN90

TS198
-UN-23AUG68

TRANSPORT SAFELY


Check local laws for width regulations before transporting.

Disengage platform drive lever (A) when traveling to and from field.

For short distances, transport windrower with platform fully raised and reel fully lowered. Maintain adequate visibility.

For longer trips it is recommended a trailer be used, width of machine on trailer is approximately 20 ft (6.1 m). Take extra care when traveling over rough terrain or on a slope.

When driving the machine on a road or highway at night or during the day, use accessory lights and devices for adequate warning to operators of other vehicles. Various safety lights and devices are available from your John Deere dealer.

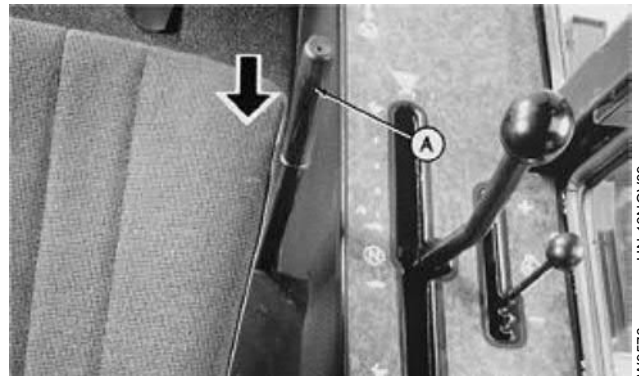

W9576
-UN-16NOV89



W9557
-UN-16NOV89



W9681
-UN-30NOV89

W07,1SY,G -19-14OCT87

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com