

1217 and 1219 Mower- Conditioners

(943001-)

John Deere Ottumwa Works
OME82475 Issue I2
(Mark old manual OME80055 G9 for
machines up to Serial No. 943001)

LITHO IN U.S.A.
ENGLISH

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.

 
WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers

when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty applicable to your machine may not apply outside the U.S.

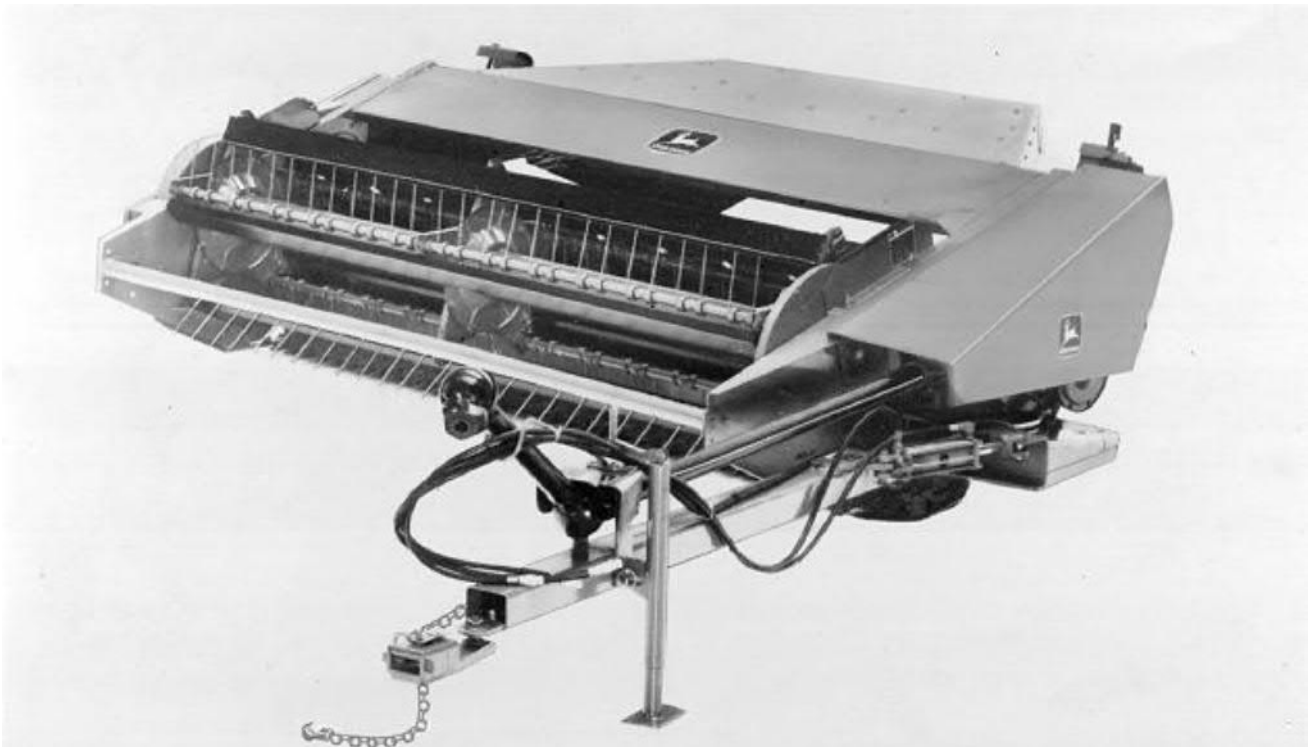

E25575
-UN-20JUN89

Contents

	Page		Page
Safety	05-1	Operating:—Continued	
Preparing the Tractor		Cutting Platform Transport Lock	25-3
Attaching Equal Angle Hitch	10-1	Use Transporting Pin	25-3
Adjusting Tractor Drawbar	10-1	Attachments	
Tractor Ballast	10-2	Tall Crop Divider	30-1
Preparing the Mower-Conditioner		Non-Clog Cutting Parts	30-1
Breaking in the Mower-Conditioner	15-1	PTO Adapting Parts	30-1
Operating the Jackstand	15-1	1000 RPM Conversion Parts (1219)	30-2
Tire Inflation Chart	15-1	Cutterbar Knife Sections	30-2
Starting and Driving	15-2	Center Gauge Shoe (1219)	30-2
Adjusting:		Hydraulic Cylinder	30-3
Cutting Height	15-2	Rope Control Positioner	30-3
Platform Float	15-2	Selector Control Valve	30-3
Swath Flap (1217)	15-3	Reel Bat and Tooth Bar Attachment	30-3
Swath Flap (1219)	15-3	Lubrication and Maintenance	
Forming Shields	15-3	Perform Lubrication and Maintenance	35-1
Slip Clutch	15-4	Alternative Lubricants	35-1
Gear Case Shield Stop	15-4	Lubricant Storage	35-1
Checking Wheel Bolt Torque	15-4	Gear Oil	35-2
PTO Storage Bracket	15-5	Extreme Pressure Grease	35-2
Cutterbar Knife Storage	15-5	Roll Drive Gear CAsE	35-3
Attaching and Detaching		Knife Drive Case	35-4
PTO Speed	20-1	Wheel Bolt Torque	35-4
Adjusting Tractor Drawbar	20-1	Lubrication and Maintenance:	
Attaching:		As Required	35-5
Mower-Conditioner to Tractor	20-1	10-Hour	35-6
To Tractor Hydraulic System	20-1	50-Hours	35-7
Tongue Positioner Rope	20-2	Each Season	35-8
Attaching and Detaching:		Troubleshooting	40-1
PTO Sliding Collar Driveline	20-3	Service	
Push Pin PTO Hookup	20-4	Adjusting:	
Transporting		Knockdown Bar	45-1
Operating:		Guard Angle	45-2
Manual Tongue Positioner (1217)	25-1	Reel Vertically (1217)	45-2
Hydraulic Tongue Positioner	25-2	Reel Vertically (1219)	45-3
Rope Control Positioner	25-2		

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OME82475 I2-19-12AUG92

COPYRIGHT© 1992
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright1989,1985,1984,1983,1982 Deere & Company

	Page
<i>Adjusting:—Continued</i>	
Reel Bat Position	45-3
Reel Horizontally (1219)	45-4
Reel Speed	45-5
Replacing Reel Teeth	45-5
Adjusting:	
Cam Followers	45-7
Cam	45-8
Roll Drive Chain	45-8
Reel Drive Belt	45-9
Cutterbar Drive Belt	45-9
Removing Knife	45-10
Installing Knife	45-10
Sharpening Knife Sections	45-11
Replacing Knife Sections	45-11
Installing:	
Non-Clog Cutterbar Parts	45-12
Regular Cutterbar Parts	45-14
Adjusting:	
Non-Clog Knife Hold-Downs	45-16
Regular Knife Hold-Downs	45-16
Roll Spacing	45-17
Positioning Rolls Horizontally	45-18
Tightening Bearing Locking Collars	45-19
Adjusting:	
Roll Timing	45-19
Roll Pressure	45-20
Wheel Bearings	45-20
Storage	50-1
Crime Prevention Tips	
Good Advice	55-1
Record Identification Numbers	55-1
Maintain Documented Proof of Ownership	55-1
Park Indoors Out of Sight	55-1
Parking Outdoors	55-2
Reduce Vandalism	55-2
Report Theft	55-2
Assembly	
Install:	
5-Bat Reel Conversion	60-1
6-Bat Reel Conversion	60-1
1000 RPM Conversion (1219)	60-2
Selector Control Valve	60-9
Center Gauge Shoe	60-11
Specifications	
Serial Number	65-6

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-04JUN90

T81389 -UN-07DEC88

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-09JAN92

TS187 -19-30SEP88


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

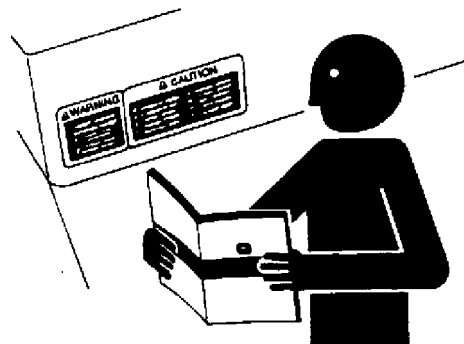

DX,READ -19-04JUN90

TS201 -UN-23AUG88



OPERATE MOWER CONDITIONER SAFELY

Clear obstructions off machine when machine is shut off and all moving parts have stopped.

Never hand feed material into machine.

Always operate machine at rated speed.


Drive slowly over rough ground.

EX,OM1217C,A -19-12AUG92

KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

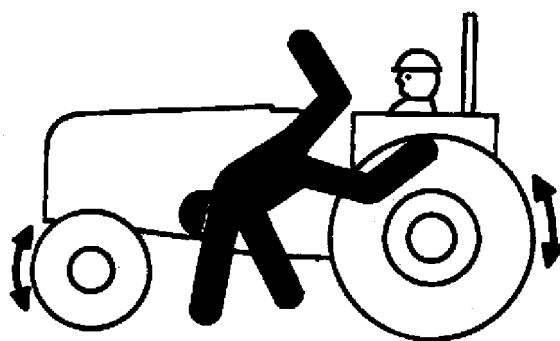

DX,RIDER -19-04JUN90


TS290 -UN-23AUG88

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

 Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

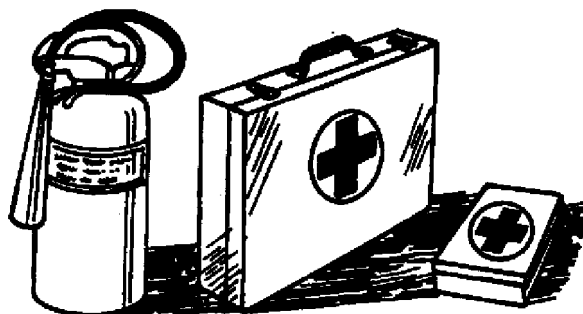

DX,FIRE2 -19-04JUN90


TS291 -UN-23AUG88



SUPPORT MACHINE PROPERLY

Always lower the attachment or implement to the ground before you work on the machine. If you must work on a lifted machine or attachment, securely support the machine or attachment.

 Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

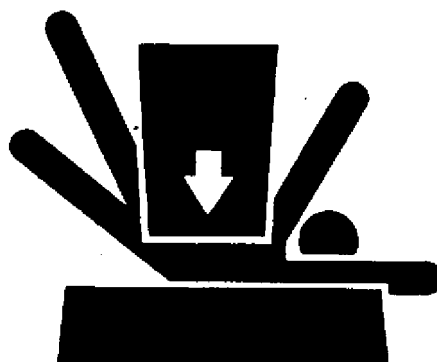

DX,LOWER -19-04JUN90

TS229 -UN-23AUG88

 
WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

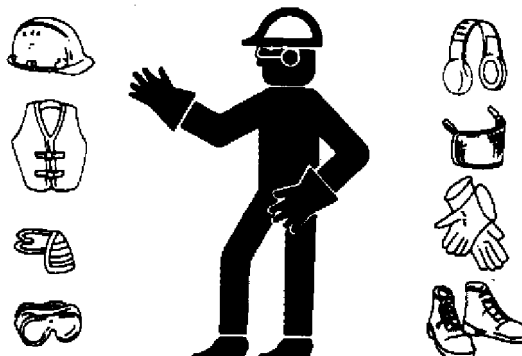

DX,WEAR -19-10SEP90

TS206 -UN-23AUG88

PROTECT AGAINST NOISE

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.



DX,NOISE -19-04JUN90

TS207 -UN-23AUG88



STAY CLEAR OF ROTATING DRIVELINES

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.



DX,PTO -19-04JUN90


TS198 -UN-23AUG88

USE SAFETY LIGHTS AND DEVICES

Slow moving tractors, self-propelled equipment and towed implements or attachments can create a hazard when driven on public roads. They are difficult to see, especially at night. Avoid personal injury or death resulting from collision with a vehicle.

Flashing warning lights and turn signals are recommended whenever driving on public roads. To increase visibility, use the lights and devices provided with your machine. For some equipment, install extra flashing warning lights.

 Keep safety items in good condition. Replace missing or damaged items. An implement safety lighting kit is available from your John Deere dealer.

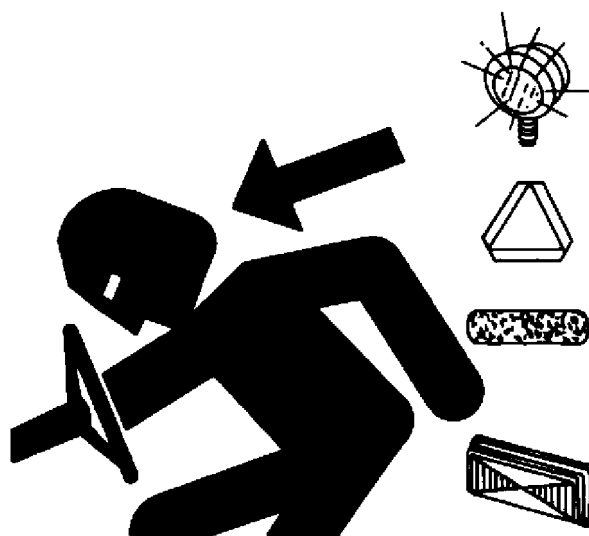

DX,FLASH -19-04JUN90


TS951 -UN-12APR90

USE A SAFETY CHAIN

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

 See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

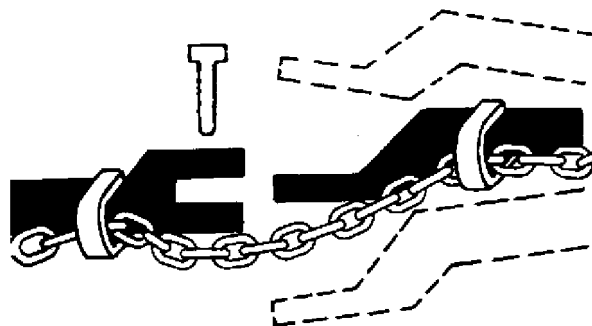

DX,CHAIN -19-04JUN90

TS217 -UN-23AUG88



PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate or service machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



DX,SERV

-19-04JUN90

TS218
-UN-23AUG88

REMOVE PAINT BEFORE WELDING OR HEATING

 
Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

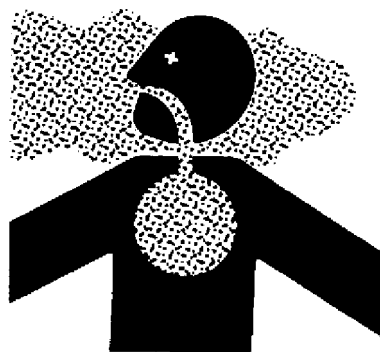

DX,PAINT

-19-04JUN90

TS220
-UN-23AUG88



AVOID HEATING NEAR PRESSURIZED FLUID LINES

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.



DX,TORCH -19-05OCT90

TS953 -UN-15MAY90

 
AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

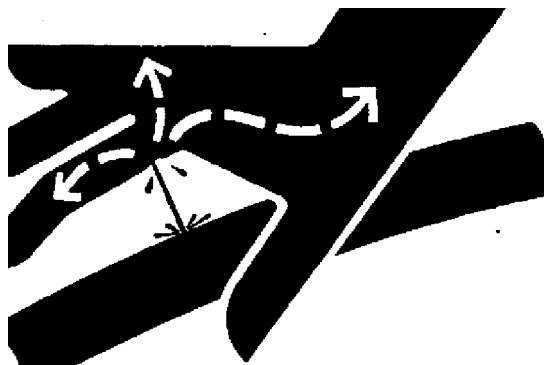

DX,FLUID -19-09AUG91

X9811 -UN-23AUG88



DISPOSE OF WASTE PROPERLY

 
Improperly disposing of waste can threaten the environment and ecology. Potentially harmful waste used with John Deere equipment include such items as oil, fuel, coolant, brake fluid, filters, and batteries.

Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.

Do not pour waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants escaping into the air can damage the Earth's atmosphere. Government regulations may require a certified air conditioning service center to recover and recycle used air conditioning refrigerants.

Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your John Deere dealer.

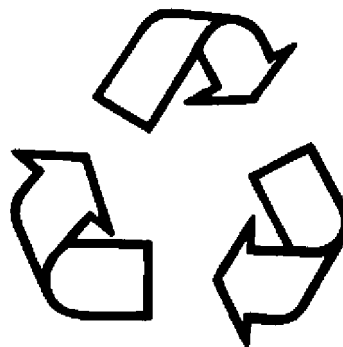

DX, DRAIN

-19-09AUG91

TS1133 -UN-26NOV90





! DANGER

Entanglement in rotating driveline can cause serious injury or death.

Keep all shields in place.
Avoid contact with rotating parts.



! CAUTION

Operate only with
540 rpm PTO

AD

E33405 -19-11JUL89

EX,OM1217C,B -19-12AUG92



WARNING

See instructions in operator's manual for adjusting conditioner roll gap.

To avoid bodily injury while performing this adjustment:

1. Keep all shields in place.
2. Lower machine to ground.
3. Position tongue in field position.
4. Reduce tractor throttle to minimum.
5. Keep hands, feet and clothing away from moving parts.



CAUTION

1. Keep all shields in place.
2. Disengage and shut off all engine and/or motor power before servicing or unclogging machine.
3. Keep hands, feet, and clothing away from power-driven parts.

AD

EX,OM1217C,D -19-12AUG92

E33407 -19-11JUL89



WARNING

Tongue position changes may occur rapidly with hydraulic control. Avoid personal injury or machine damage.

By:

Placing hydraulic flow control in "slow" position. If tractor does not have flow control, install an A-26112 Restrictor at one end of the cylinder fittings.

PD

EX,OM1217C,E -19-12AUG92

E33408 -19-11JUL89

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com