

1711D Clambunk Serial Number WJ1711D001001-

OPERATOR'S MANUAL 1711D Clambunk

OMF066886 Issue 8.3.2005 (ENGLISH)

CALIFORNIA
Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

If this product contains a gasoline engine:

 **WARNING**

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

The State of California requires the above two warnings.

**Worldwide Construction
And Forestry Division**
(This manual replaces 25.1.2005)
Published in Finland

Contents

	Page		Page
Introduction			
Operator's manual for Timberjack 1711D	1-1-1	Power Cables	3-3-8
Foreword	1-1-2	Driving/Transporting on Public Roads	3-3-9
Timberjack Contact Information	1-1-2	Ensure Safety before Driving on Frozen Water	3-3-9
Technical Information Feedback Form	1-1-3	Fire Prevention	3-3-10
Warranty			
Standard warranty clauses	2-1-1	What To Do If the Machine Catches Fire	3-3-11
Timberjack Standard Warranty	2-1-1	Safety - Maintenance Precautions	
Machines with Extended Coverage (For specified machines only!)	2-1-1	General	3-4-1
Periodic Maintenance	2-1-2	Securing the Service Position	3-4-2
Safety - Safety Features			
1711D Clambunk Safety Features	3-1-1	Use Proper Clothing	3-4-2
Safety - General Precautions			
General	3-2-1	Use Proper Tools	3-4-3
Recognize Safety Information	3-2-1	Support Machine Properly	3-4-3
Understand Signal Words	3-2-1	Shut Down Engine, Disconnect Battery Cable	3-4-4
Prepare for Emergencies	3-2-2	Service Cooling System Safely	3-4-4
Wear Protective Clothing	3-2-2	Prevent Battery Explosions	3-4-4
Handle Fluids Safely—Avoid Fires	3-2-3	Prevent Acid Burns	3-4-5
Handle Chemical Products Safely	3-2-3	Replacing the Xenon Worklamp	3-4-6
Replace Safety Signs	3-2-4	Start Only from Operator's Seat	3-4-6
Maintain Safety Cabin	3-2-4	Beware of Exhaust Fumes	3-4-7
Use of Radio-transmitters	3-2-5	Avoid High Pressure Fluids	3-4-7
Safety - Operating Precautions			
Inspect machine	3-3-1	Avoid Heating near Pressurized Fluid Lines . .	3-4-8
Attach Do not Operate Tag	3-3-1	Make Welding Repairs Safely	3-4-8
Prevent Machine Runaway	3-3-2	Service Tires Safely	3-4-9
Use Handholds and Steps	3-3-2	Refueling and Servicing Fuel System	3-4-9
Secondary exit	3-3-3	Dispose of Waste Properly	3-4-10
Handle Starting Fluid Safely	3-3-4	Operator's Station	
Pay Attention to Bystanders	3-3-4	General	4-1-1
Carry no passengers	3-3-5	Front Dashboard	4-1-3
Use Seat Belts	3-3-5	Start Key Positions	4-1-4
Avoid Risks under Difficult Conditions	3-3-5	Signal Lights	4-1-4
Stop Working if Machine Gives an Alarm	3-3-6	Left and Right Arm Control Panels	4-1-5
Loading the Machine	3-3-6	Using Boom Control Levers	4-1-6
Keep Danger Zone Clear	3-3-6	Window Washers and Wipers	4-1-8
Avoid Crush Points	3-3-7	Overhead Panel Switches	4-1-9
		Warning Lamps and Buzzer	4-1-10
		Preparedness for telephone	4-1-10
		Air Conditioner Controls	4-1-11
		Operator's seat	4-1-12

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2005
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION® Manual

Contents

	Page		Page
Lifting and Lowering the Cab			
How to Lift the Cab	4-2-1	Hydraulic oil	6-0-15
How to Lower the Cab	4-2-2	Gear oil	6-0-16
Machine - Control System and Operation			
TMC	5-1-1	Brake fluid	6-0-16
ECU	5-1-1	Cab lift pump	6-0-17
Alarms	5-1-2	Grease	6-0-17
Function of Seat Safety Switch	5-1-2	Maintenance intervals and Service parts	
Emergency Stopper	5-1-2	Maintenance intervals	6-1-1
Operating the Clambunk	5-1-3	Service parts	6-1-2
Operating the Boom	5-1-4	Maintenance - Every 10 hours or Daily	
Brakes	5-1-5	Check the hydraulic oil level	6-2-1
Frame Brake	5-1-6	Check the engine oil level	6-2-2
Steering	5-1-7	Remove Water and Sediment from the Primary Fuel Filter	6-2-2
High/Low Gear and Rear-Wheel Drive	5-1-8	Check engine coolant level	6-2-3
Using the Differential Lock-Up	5-1-9	Check the windshield washer fluid level	6-2-4
Operating the Decking Blade (Optional Equipment)	5-1-9	Check the radiator grille cleanliness	6-2-5
Starting and Driving the Machine			
Before Starting the Engine for the First Time in a Working Day	5-2-1	Check the driving brake oil level	6-2-6
Starting the Engine	5-2-2	Check the air filter	6-2-6
After starting	5-2-3	Check the tires for air pressure and overall shape	6-2-7
A normal operation of the engine	5-2-4	Fill up the fuel tank	6-2-7
Turning off the engine	5-2-5	Grease the clambunk	6-2-8
Off-Road Driving	5-2-5	Maintain the boom	6-2-8
Driving on Road	5-2-7	The following service and checks are to be made at the end of each workday	6-2-9
Transporting and Towing the Machine			
Use hold-down straps	5-3-1	Maintenance - Every 50 hours or Weekly	
Positioning	5-3-1	Grease the center hinge bearings and steering cylinder bearings	6-3-1
Minilevers	5-3-1	Grease the decking blade ¹	6-3-2
Chains	5-3-2	Check the air conditioner	6-3-2
Towing	5-3-2	Maintain the Boom	6-3-2
Stowing a Disabled Boom	5-3-6	Check the fire extinguisher system	6-3-3
Maintenance - General / Fluids and Lubricants			
Service, General	6-0-1	Maintenance - Every 250 hours	
Servicing Safety Precautions	6-0-2	Clean the machine	6-4-1
General Maintenance Instructions	6-0-3	Check the high/low gear oil level	6-4-1
Welding Instructions	6-0-4	Check Differential Oil Level	6-4-2
Tires	6-0-4	Check Single Axle Wheel Ends (Hub gear) Oil Level	6-4-3
Changing Wheels	6-0-5	Check Bogie Housings Oil Level	6-4-3
Anti slips	6-0-6	Grease Bogie Bearings	6-4-4
Fitting bogie tracks	6-0-7	Check Wheel Nut Torque	6-4-4
Cleaning the Cab Windows	6-0-9	Check the cabine air filters	6-4-5
Recommended Lubricants and Fluids	6-0-10	Check the air conditioner	6-4-5
Capacities	6-0-11	Maintain the boom	6-4-6
Diesel Fuel	6-0-12	Maintenance - Every 500 hours	
Engine Oil	6-0-13	Change engine oil and replace oil filter	6-5-1
Coolant	6-0-14	Continued on next page	

Contents

	Page		Page
Replace Fuel Filter Elements	6-5-3	Have the proper function of the atomizers checked	6-9-6
Remove sediment and water from the fuel tanks	6-5-4	Clean the Fuel Tank Filler Filter	6-9-6
Clean crankcase vent tube	6-5-5	Replacing Fan/Alternator Belt	6-9-7
Check the air intake system	6-5-5	Maintain the Boom	6-9-8
A visual inspection of the coolant pump	6-5-5	Check the air conditioner	6-9-8
Checking belt tensioner spring tension and belt wear	6-5-6		
Control of the vibrations damper.	6-5-8	Hydraulic System and Bleeding	
Check engine speeds	6-5-8	Working hydraulic system	7-1-1
Control engine grounding	6-5-9	Hydrostatic system	7-1-1
Check the batteries for charge	6-5-9	Bleeding Drive Hydraulic System	7-1-2
Checking cooling system	6-5-11	Bleeding Work Hydraulic System	7-1-3
Grease the driveshafts	6-5-12	Bleeding the Brake System	7-1-5
Maintenance - Every 1000 hours		Hydrostatic System: Drive Pump adjusting	
Renew the hydraulic oil	6-6-1	Checking and adjusting the charge pressure	7-2-1
Replace the hydraulic return filter	6-6-4	Checking and adjusting the pressure cut-off valve setting of the drive pump.	7-2-2
Replace the hydraulic tank breather	6-6-5		
Renew the high/low gear (transfer case) oil	6-6-6	Hydrostatic System: Drive Motor adjusting	
Renew the pressure filter of the drive hydraulic system	6-6-7	Checking and adjusting drive motors pressure cut-off settings	7-3-1
Change the Brake Pedal Circuit Oil	6-6-8		
Check and tighten the screw and bolt connections	6-6-9	Work Hydraulic System: Check and Adjust	
Check the exhaust manifold	6-6-9	Adjusting Clambunk Valve Pressure	7-4-1
Check the air conditioner	6-6-9	Adjusting Pressure Difference	7-4-2
Maintain the boom	6-6-10	Adjusting the Maximum Pressure in Clambunk Machine	7-4-2
		Adjusting the Boom Pressures in Clambunk Machine	7-4-3
Maintenance - Every 2000 hours		Adjusting Auxiliary Functions	7-4-5
Check valve clearance	6-7-1	Adjusting Frame Brake	7-4-6
Changing the Coolant	6-7-3	Adjusting Optional Equipment	7-4-6
Change Bogie Axle Differential Oil	6-7-6		
Change Bogie Housings Oil	6-7-7	Brake System: Check and Adjust	
Change Single Axle Differential Oil	6-7-8	Checking the brakes	7-5-1
Change Single Axle Wheel Ends Oil	6-7-9	Mechanical adjustment of brakes	7-5-2
Check and tighten the bolts for the joints between axles and frame	6-7-10	Brake Charging Pressure	7-5-3
		How to Adjust the Pressure Reducing Valve of the Parking Brake	7-5-4
Periodic Maintenance		Checking the Work Brake	7-5-4
Service the fire extinguisher every 6 months	6-8-1	Checking the Service Brake (Brake Pedal).	7-5-5
Have the fire extinguisher system (opt. eq.) checked every 12 months	6-8-1		
		Electrical System	
Maintenance - As required		Main Switch	8-1-1
General	6-9-1	ECU (Engine Control Unit)	8-1-1
Bleeding the fuel system	6-9-2	Batteries	8-1-2
Have the proper function of the turbocharger checked	6-9-5	Welding	8-1-4
Have the proper function of the alternator checked	6-9-5	Fuses on the Left-Hand Side in the Engine Compartment	8-1-6
Have the proper function of the starter motor checked	6-9-5	Instrument Box Fuses and Relays	8-1-7

Continued on next page

Contents

	Page		Page
Engine Sensors	8-1-9	After a fire	11-3-5
The RPM Sensor of the Drive		Control unit	11-3-6
Hydrostatics Motor	8-1-10	Hand-held fire extinguishers	11-3-8
Hydraulic Tank Sensors	8-1-10		
Transmission		Equipment, Decking Blade	
Operating Power Transmission	9-1-1	Using the Decking Blade	11-4-1
High/Low Gear	9-1-1	Lowering the Decking Blade	11-4-2
Hydrostatic System	9-1-2	Decking Blade's Float	11-4-3
Control of Transmission	9-1-3		
Boom, General		Storage	
A General Description of the Boom	1	Prepare Machine for Storage	12-1-1
Operating Safety Precautions	2	Monthly Storage Procedure	12-1-3
General Operating Instructions	3		
Assembly Instructions	3	Troubleshooting	
Bleeding the Hydraulic System	4	Engine Troubleshooting	12-2-1
Boom, Technical Data	4	Diagnose Drive Lines	12-2-6
		Diagnose Brake Hydraulics	12-2-7
		Diagnose Cab Tilt Hydraulics	12-2-7
		Diagnose Hydraulic/Hydrostatic Cooling	
		System	12-2-8
		Diagnose Hydrostatic Drive System	12-2-9
		Diagnose Hydrostatic Drive Pump	12-2-11
		Diagnose Hydrostatic Drive Motor	12-2-14
		Diagnose Loader	12-2-15
		Diagnose Heater/Air Conditioner	12-2-19
Boom - Maintenance			
Maintenance Schedule	10-2-1	Hydraulic Diagrams, F626444	
Maintenance daily or every 10 hours	10-2-2	Boom Hydraulics	13-1-1
Maintenance weekly or every 50 hours	10-2-3	Transmission Hydraulics	13-1-5
Maintenance every 250 hours	10-2-7	Brake Hydraulics	13-1-7
Maintenance every 1000 hours	10-2-9	Extra Equipment Hydraulics	13-1-9
Maintenance as required	10-2-11	Options Hydraulics	13-1-11
		Clambunk Hydraulics	13-1-13
		Electrical Schematics	
Equipment, Air Conditioner		General information	13-2-1
Introduction	11-1-1	Electrical Schematics	13-2-3
Main Parts of Air Conditioning System	11-1-1		
Risks and Counter-Measures	11-1-4	1711D Specifications	
First Aid	11-1-5	Dimensions	14-1-1
Air Conditioner, Using	11-1-6	Decals and Signs	14-1-2
Maintenance and Inspections: Check the		Load area	14-1-2
refrigerant level	11-1-8	Engine	14-1-3
Check the service moisture indicator of		Transmission	14-1-3
the dryer every 50 hours	11-1-11	Axles	14-1-3
Service the compressor V-belt every 250		Steering	14-1-4
hours	11-1-11	Brakes	14-1-4
Service the compressor every 1000 hours ..	11-1-11	Hydraulic system	14-1-4
Service the evaporator element every		Electrical System	14-1-4
1000 hours	11-1-12	Boom	14-1-5
Service the condenser element every		Cab	14-1-5
1000 hours	11-1-12		
Service the hoses and connectors every			
1000 hours	11-1-13		
Equipment, Engine Preheater			
Operation and maintenance	11-2-1		
Equipment, Fire Extinguisher System			
General	11-3-1		
Fire Alarm and Actions	11-3-2		

Introduction

Operator's manual for Timberjack 1711D

Manufacturer:
Timberjack Oy
P.O. Box 474
FIN-33101 Tampere, Finland
Telephone int: +358 205 84 162
Fax int: +358 205 84 163

Table to enter Machine Serial Number and Dealer information:
Machine Serial No.
Dealer

The information contained in this manual is comprised of regulations and instructions which will assist the operator to operate the machine in a safe and efficient manner. Make sure this manual is always close at hand and available to all who work on the machine. Should this manual be lost or should it deteriorate to an unintelligible state, contact Timberjack or your nearest Timberjack dealer for a replacement manual.

If you sell the machine, be sure to give this manual to the new owners.

Continuing improvements in the design of this machine can lead to changes in detail which may not be reflected in this manual. Consult Timberjack or your local Timberjack dealer for the latest available information of your machine or for questions regarding information in this manual.



CAUTION: Only persons whose training has been approved by Timberjack are permitted to operate Timberjack machinery.

Improper operation and maintenance of this machine can be hazardous and could result in serious injury or death.

Therefore, it is of paramount importance that all the instructions given in this manual and during training be followed when the machine is operated or serviced.

Read the safety rules from Section 3.

EL62757.0000159 -19-19APR02-1/1

Foreword

This manual provides you with the instructions for the operation and maintenance of Timberjack Clambunk. Please read the entire manual before you start operating the machine. The instructions given will assist you in becoming familiar with many features of Timberjack machine, showing you how to operate the machine and how to carry out periodic maintenance procedures and some basic adjustments.

However, we strongly advise you to contact the nearest repair shop authorized by Timberjack when complicated maintenance tasks or repairs come up. Our service people have the experience and tools needed for the job.

1711D Clambunk is designed for skidding logs. The machine must not be used for other purposes.

We designed the machine to operate under difficult off-road circumstances. Still it is important that you

always adapt your driving speed and load to the surroundings. Use chains and tracks if necessary. Take a good look at your machine always when having a short break or when maintaining the machine. It is worth bearing in mind that even a small failure, if left unattended, may soon result in major problems and a long downtime.

Do not pollute the environment. It is imperative that you do not allow oil to leak into the ground or water because it only takes one liter of mineral oil to contaminate one million liters of water. *Should you see a leaky joint, fix it immediately.*

Remember fire prevention. Keep the machine clean at all times for this reduces the risk of overheating and chance of a fire starting.

See Section 14, for technical information of the machine.

EL62757,000015A -19-19APR02-1/1

Timberjack Contact Information

Please, contact our web site: www.Timberjack.com.

EL62757,000015B -19-19APR02-1/1

Technical Information Feedback Form

We need your help to continually improve our Operator's Manuals please FAX or mail your comments, ideas and improvements on this comment sheet.

SEND TO: Timberjack Oy
P.O. Box 474
FIN-33101 Tampere
Finland
Attn: Publications Supervisor

FAX NUMBER: +358 205 84 6160

Ideas, Comments, (Please state Page Number): _____

OVERALL, how would you rate the quality of "ALL" Operator's Manuals provided to you? (Check one)

Poor		Fair		Good		Very good		Excellent	
1	2	3	4	5	6	7	8	9	10

Company Name _____
Address _____
Phone _____
FAX No. _____
Dealer Acct. No. _____

THANK YOU!

Warranty

Standard warranty clauses

The machine is covered by Timberjack's guarantee in compliance with the standard warranty clauses accepted by the Timberjack group.

The manufacturer will not assume responsibility for the machines delivered should the following conditions be violated:

- The machine is exclusively operated and maintained by experienced personnel who have been trained by Timberjack or by a dealer authorized by Timberjack.

- The machine must be operated and maintained in accordance with the instructions provided in this manual.
- Only fuels, lubricants and washing fluids specified in this manual are used.
- Only genuine spare parts are used

EL62757,000015D -19-28SEP04-1/1

Timberjack Standard Warranty

12 Months Warranty Full Machine Coverage to 2000 hr. on all Timberjack forestry machines.

The warranty given by Timberjack will be valid provided that the machine is handed over for following maintenances at the service shop authorized by Timberjack:

- Pre Delivery Inspection (PDI)
- 250 hours maintenance
- 1000 hours maintenance.

From here after we recommend *service every 1000 hours*, done by authorized workshop.

EL62757,000015E -19-19APR02-1/1

Machines with Extended Coverage (For specified machines only!)

EXTENDED COVERAGE is a purchased coverage program sold by authorized dealers. It provides additional coverage beyond the Standard Warranty provided with the new machine.

The Extended Coverage will be valid provided that the machine is handed over for following maintenances at the service shop authorized by Timberjack:

- Pre Delivery Inspection (PDI)¹
- 250 hours maintenance¹
- 1000 hours maintenance¹.

There after service every 1000 hours, done by authorized workshop, *as long as the coverage period lasts*.

¹the same as in Standard Warranty

EL62757,0000001 -19-28SEP04-1/1

Buy Now



Our support email:

ebooklibonline@outlook.com