

850 FELLER-BUNCHER

(Serial No. WC0850X008010-)

OPERATOR'S MANUAL 850 FELLER-BUNCHER

OMF383437 H2 (ENGLISH)

CALIFORNIA Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

If this product contains a gasoline engine:

WARNING

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

The State of California requires the above two warnings.

**Worldwide Construction
And Forestry Division**
(This manual replaces F380406)

Litho in Canada.

Introduction

Foreword

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your authorised dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel. Operating instructions assume that the traction drive sprockets are at the rear of the machine.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Machine Numbers section. Accurately

record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of the manufacturer's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that the manufacturer will back its products where defects appear within the warranty period. In some circumstances, also providing field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

DX,IFC7 -19-16NOV01-1/1

Technical Information Feedback Form

We need your help to continually improve our technical publications. Please copy this page and FAX or mail your comments, ideas and improvements.

SEND TO: Timberjack
925 Devonshire Avenue
Attn: Supervisor - Technical Manuals
Woodstock ON, Canada, N4S 5S1

FAX NUMBER: 519-537-2664

Ideas, Comments (Please State Page Number): _____

[illegible]

OVERALL, how would you rate the quality of this publication? (Check one)

1 2 3 4 5 6 7 8 9 10

Poor Fair Good Very Good Excellent

Company Name: _____

Technician Name: _____

Address: _____

Phone: _____

Fax No.: _____

Dealer Acct. No.: _____

THANK YOU!

Contents

	Page		Page
Safety — Safety Features		Safety — Safety Signs	
850 Feller-Buncher Safety Features	1-1-1	Remove Paint Before Welding or Heating	1-4-2
		Make Welding Repairs Safely.	1-4-2
		Prevent Acid Burns.	1-4-3
Safety—General Precautions			
Recognize Safety Information.	1-2-1	850 Feller- Buncher Cab Safety Signs	1-5-1
Follow Safety Instructions.	1-2-1	850 Feller-Buncher Cab Safety Signs.	1-5-2
Operate Only If Qualified	1-2-1	850 Feller- Buncher Engine/Enclosure	
Wear Protective Equipment	1-2-2	Safety Signs	1-5-3
Avoid Unauthorized Machine Modifications. . . .	1-2-2		
Inspect Machine	1-2-2		
Stay Clear Of Moving Parts	1-2-3	Operator's Station	
Avoid High-Pressure Fluids	1-2-3	Operator Controls and Instruments.	2-1-1
Beware Of Exhaust Fumes.	1-2-3	Gauges	2-1-2
Prevent Fires	1-2-4	Warning Lights	2-1-4
What To Do If the Machine Catches Fire	1-2-4	Front Cab Lights.	2-1-6
Prevent Battery Explosions.	1-2-4	Front Enclosure And Cab Side Light	2-1-6
Handle Chemical Products Safely.	1-2-5	Gauge and Switch Light Dimmer Control	2-1-6
Dispose of Waste Properly.	1-2-5	Dome Light.	2-1-6
Prepare for Emergencies	1-2-5	Ignition Key Switch.	2-1-7
Clean Trash from Machine	1-2-6	Horn Override and Lamp Test Switch.	2-1-7
Control Pattern.	1-2-6	Engine Throttle Speed Switch	2-1-8
		Boom Swing Brake Control Switch	2-1-9
Safety—Operating Precautions		Travel Speed Control Switch	2-1-9
Use Steps And Handholds Correctly	1-3-1	Air Conditioner/Heater Controls	2-1-10
Start Only From Operator's Seat	1-3-1	Saw Drive Switch	2-1-10
Use And Maintain Seat Belt	1-3-1	Forward Horn	2-1-11
Prevent Unintended Machine Movement	1-3-2	Travel Alarm.	2-1-12
Operate Machine Safely	1-3-2	Circuit Breakers and Relays.	2-1-12
Avoid Tipping	1-3-3	Defroster Fan	2-1-13
Keep Riders Off Machine	1-3-4	Operator's Seat	2-1-14
Use Care When Swinging Machine	1-3-4	Foot Pedal and Joystick Controls	2-1-17
Operate Booms with Care	1-3-5	Pilot Hydraulic Circuit and Reset Switch. . . .	2-1-17
Add And Operate Attachments Safely	1-3-5	AM/FM Stereo Cassette	2-1-18
Turn Off Battery Disconnect Switch	1-3-5	Cab Air Filter	2-1-19
Travel Safely	1-3-6	Secondary Exit (Rear Window).	2-1-19
Avoid Power Lines	1-3-6	Cab Door Release Handle	2-1-21
Driving/Transporting on Public Roads.	1-3-7	Fire Extinguisher	2-1-22
Inspect and Maintain ROPS	1-3-8	Fire Suppression System Time Delay.	2-1-22
		Cab Door Jamb Lever	2-1-23
Safety—Maintenance Precautions		Battery Disconnect Switch	2-1-23
Park And Prepare For Service Safely.	1-4-1		
Service Machines Safely	1-4-1		
Service Cooling System Safely.	1-4-2		

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2002
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION® Manual

	Page		Page
Enclosure Door Hand Pump	2-1-24	Prepare Machine for Maintenance	3-2-2
Engine Enclosure Door Switch	2-1-24	Machine Service Position - Felling Head	3-2-2
Operating the Machine		Maintenance and Repair Record	
Pre-Start Checks	2-2-1	Keeping System	3-2-3
Before Starting the Engine	2-2-1	OILSCAN Plus, [®] CoolScan Plus [®] and	
Normal Starting Procedure — Above		3-Way Coolant Test Kit	3-2-4
0°C (32 °F)	2-2-2	Auto-Lubrication System (Optional)	3-2-6
Cold Weather Starting — Below 0°C (32 °F) ..	2-2-3	Periodic Maintenance Table	3-2-13
Hydraulic Oil Warm-up Procedure	2-2-5	850 with FS20 Felling Head	3-2-16
Stopping Procedure	2-2-6	Maintenance — As Required	
Operating the Track Drive	2-2-7	Drain Hydraulic Fluid	3-3-1
Using Booster Batteries	2-2-10	Clean Track Drive Planetaries	3-3-1
Operating The Implements — General	2-2-11	Maintenance — Every 8 Hours or Daily	
Joystick Control Lever — Left Hand	2-2-12	General	3-4-1
Joystick Control Lever — Right Hand	2-2-13	Service Lights	3-4-1
Control Panel	2-2-14	Service Enclosures	3-4-1
Lowering Boom with Engine Stopped	2-2-15	Check Engine Oil Level	3-4-5
Preparation of Machine Before Leaving For		Check Air Filter Restriction Indicator and	
Cutting Area	2-2-16	Pre-cleaner	3-4-6
Felling Technique	2-2-17	Check Engine Coolant Level	3-4-7
Felling Head	2-2-19	Check Fuel/Water Separator	3-4-7
Maintenance — Machine		Check and Clean Radiator, Oil Cooler and	
Modifications or Repairs to Roll-over		Condenser Fins	3-4-7
Protective Structures (ROPS)	3-1-1	Check Hydraulic Fluid Level	3-4-8
Fuels and Lubricants Specifications Table	3-1-2	Check Hydraulic Filters	3-4-8
Diesel Engine Oil	3-1-3	Check Auto-Lubrication Reservoir (Optional	
Track Drive and Swing Drive Oils	3-1-4	Equipment)	3-4-8
Recommended Hydraulic System		Check Swing Drive Gearbox Oil Level	3-4-9
Summer Oils	3-1-5	Lubricate Attachment	3-4-9
Recommended Hydraulic System Winter		Lubricate Boom Joints and Cylinder Ends ...	3-4-10
Oils	3-1-6	Lubricate Swing Pinion and Bearing	3-4-10
Diesel Fuel	3-1-7	Inspect for Hydraulic Oil Leaks	3-4-11
Diesel Engine Coolant	3-1-8	Perform Overall Visual Inspection	3-4-12
Grease	3-1-9	Maintenance — Every 125 Hours	
Handling and Storing Diesel Fuel	3-1-9	Perform 8 Hour Interval Maintenance	
Lubricity of Diesel Fuel	3-1-10	Procedures	3-5-1
Supplemental Coolant Additives	3-1-11	Check Battery Electrolyte Level	3-5-1
Operating in Warm Temperature Climates ...	3-1-12	Refer to Fire Suppression System	
Additional Information about Diesel		Manufacturer's Manual (If Installed)	3-5-1
Engine Coolants and Supplemental Coolant		Check Engine RPM	3-5-2
Additives	3-1-13	Check Hydraulic Pump Mounting Bolts	3-5-2
Testing Diesel Engine Coolant	3-1-15	Check Swing Drive Mounting Bolts	3-5-3
Oil Filters	3-1-15	Check Oil Level In Idler Assembly	3-5-3
Alternative and Synthetic Lubricants	3-1-16	Check Oil Level in the Track Drive	
Lubricant Storage	3-1-16	Planetaries	3-5-4
Mixing of Lubricants	3-1-17	Lubricate Driveshaft and Motor Coupling	3-5-4
Maintenance — Periodic Maintenance		Check Swing Bearing Bolt Torque	3-5-5
Service Your Machine at Specified Intervals ...	3-2-1	Check Cab Mounting Bolt Torque	3-5-5
Check the Hourmeter Regularly	3-2-1		
Use Correct Fuels and Lubricants	3-2-1		

Continued on next page

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com