

# 50A Series Row-Crop Heads



JOHN DEERE

 
## OPERATORS MANUAL

50A Series  
Row-Crop Heads

OMH114166 Issue I2 English

Harvester Works  
OMH114166 Issue I2

LITHO IN U.S.A.  
ENGLISH



## INTRODUCTION



This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

*NOTE: If this row-crop head is attached to any combine, other than a John Deere, be certain all exposed drives are adequately shielded.*

 
Your operator's manual contains SI Metric equivalents which follow immediately after the U.S. customary units of measure.

"Right-hand" and "left-hand" sides are determined by facing in the direction the row-crop head will travel.

Record your row-crop head serial number in the space provided on page 71.

The warranty on this row-crop head appears on your copy of the purchase order which you should have received from your dealer when making your purchase. This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty.

Warranty and field improvements are a part of John Deere's product support program for customers who operate and maintain their equipment as described in this manual. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied.

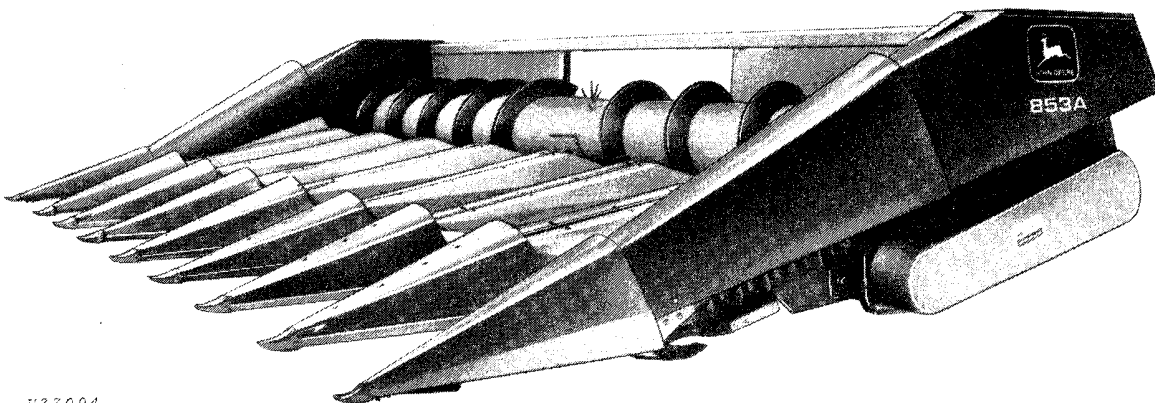

H33904

H33904



# Contents

---

 
	Page
Contents .....	1
Safety .....	2-4
Attaching and Detaching .....	5-13
Transporting .....	14
Operating the Row-Crop Head .....	15-45
Lubricants .....	46,47
Lubrication and Maintenance .....	48,49
Trouble Shooting .....	50-61
Service .....	62-65
Storage .....	66
Attachments .....	67-69
Specifications .....	70,71
Index .....	72



# Safety

**!** Unauthorized modifications to the row-crop head may impair the function and or safety and affect machine life.

## SAFETY DECALS

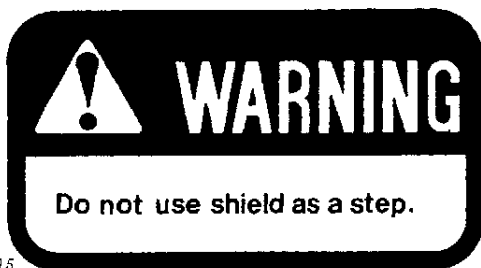


**!** **CAUTION OR WARNING:** Decals with these headings and symbol indicate the possibility of personal injury.

**IMPORTANT:** Decals with this heading indicate the possibility of damage to the machine.

Decals are located in areas where they apply.

## AVOID CONTACT WITH MOVING PARTS

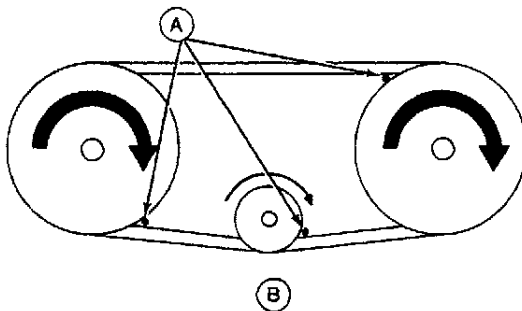 

Keep hands, feet, and clothing away from power-driven parts. Be particularly careful of pinch points on belt and chain drives.

Never clean, lubricate, or adjust the row-crop head when it is running.

Never attempt to clear obstructions off the row-crop head unless the separator is disengaged and the power is shut off.


A—Pinch Points  
B—Belt Drive

## LEAVING COMBINE UNATTENDED

 Before leaving the combine unattended, turn off engine and remove keys. Support the row-crop head with the hydraulic cylinder safety stop or lower it to the ground. Place the gearshift lever in neutral and engage the parking brake. Lock cab doors on 6620, SideHill 6620, 7720 and 8820 Combines.

## TRANSPORTING

Never transport on road with 1253A Row-Crop Header attached to combine faster than 8 mph. It is recommended that you use a Model 25 Transport Frame for these 50A Series Headers.

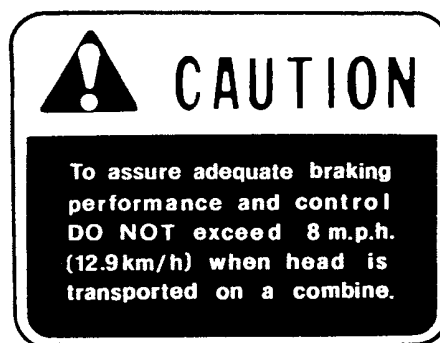


H37374

## OPERATE SAFELY

 Clothing worn by operator must be fairly tight and belted. Loose jackets, shirts, or sleeves must never be worn.


Any time work is being done under row-crop head, the hydraulic cylinder safety stop must be placed in the safety position. Refer to page 17.

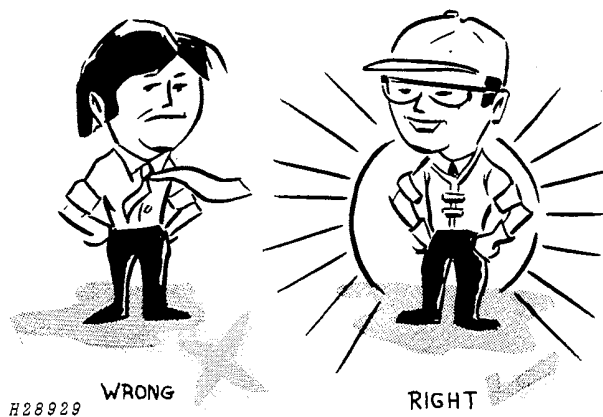

H28929

H28929

 When an 8820 Combine is equipped with a 1253A Row-Crop Head, 30.5L-32 16 PR or 73 x 44.00-32 high flotation tires are required.

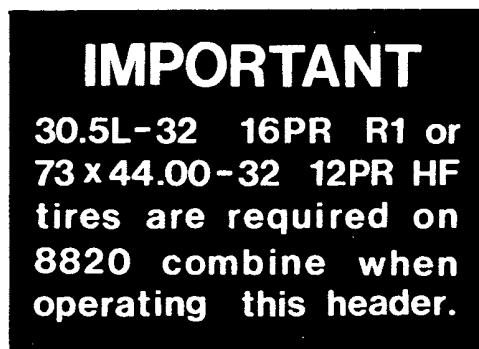

H37375

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)