

# 50A Series Row-Crop Heads



#### **OPERATORS MANUAL**

50A Series Row-Crop Heads

OMH120053 I4 English

John Deere Harvester Works OMH120053 I4

> LITHO IN U.S.A. ENGLISH



#### INTRODUCTION



This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

NOTE: If this row-crop head is attached to any combine, other than a John Deere, be certain all exposed drives are adequately shielded.


Your operator's manual contains SI Metric equivalents which follow immediately after the U.S. customary units of measure.

"Right-hand" and "left-hand" sides are determined by facing in the direction the row-crop head will travel.

Record your row-crop head serial number in the space provided in SPECIFICATIONS.

The warranty on this row-crop head appears on your copy of the purchase order which you should have received from your dealer when making your purchase. This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty.

Warranty and field improvements are a part of John Deere's product support program for customers who operate and maintain their equipment as described in this manual. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied.

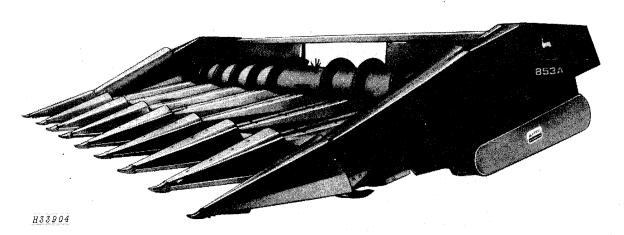



## **Contents**

	Page
Contents	1
Safety	2
Attaching and Detaching	5-35
Transporting	. 36
Operating the Row-Crop Head3	7-67
Lubricants	. 68
Lubrication and Maintenance	. 70
Trouble Shooting	. 72
Service	. 84
Storage	. 88
Crime Prevention	. 89
Attachments	. 92
Specifications	. 95
Indov	07



### Safety

#### SAFETY DECALS






CAUTION, WARNING, OR DANGER: Decals with these headings and symbol indicate the possibility of personal injury.

IMPORTANT: Decals with this heading indicate the possiblity of damage to the machine.

Decals are located in areas where they apply.

H33905

#### **AVOID CONTACT WITH MOVING PARTS**

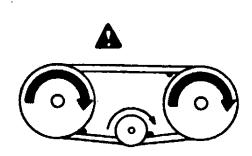

Keep hands, feet, and clothing away from power-driven parts. Be particularly careful of pinch points on belt and chain drives.


Never clean, lubricate, or adjust the row-crop head when it is running.

Never attempt to clear obstructions off the row-crop head unless the separator is disengaged and the power is shut off.

A-Pinch Points B-Belt Drive

H36880

#### LEAVING COMBINE UNATTENDED

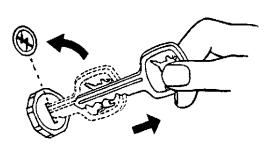


Before leaving the combine unattended, turn off engine and remove keys. Support the row-crop head with the hydraulic cylinder safety stop or lower it to the ground. Place the gearshift lever in neutral and engage the parking brake. Lock cab doors on 6620, SideHill 6620, 7720 and 8820 Combines.

H37524

#### TRANSPORT SAFELY

Never transport on road with 1253A Row-Crop Header attached to combine faster than 8 mph. It is recommended that you use a Model 25 Transport Frame for these 50A Series Headers.

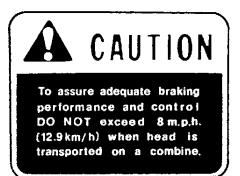

H37374

When an 8820 Combine is equipped with a 1253A Row-Crop Head, 30.5L-32 16 PR or 73 x 44.00-32 high flotation tires are required.

## **IMPORTANT**


30.5L-32 16PR R1 or 73 × 44.00 - 32 12PR HF tires are required on 8820 combine when operating this header.

нз7375

#### **OPERATE SAFELY**

Clothing worn by operator must be fairly tight and belted. Loose jackets, shirts, or sleeves must never be worn.

Any time work is being done under row-crop head, the hydraulic cylinder safety stop must be placed in the safety position.

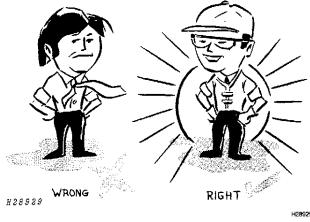

H28929

Thank you so much for reading.

Please click the "Buy Now!"

button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com