

6622 COMBINE



JOHN DEERE

OPERATORS MANUAL

6622
COMBINE

OMH120056 B5 English

JOHN DEERE HARVESTER WORKS
OMH120056 B5

LITHO IN THE U.S.A.
ENGLISH



INTRODUCTION



This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

Your operator's manual contains SI metric equivalents which follow immediately after the U.S. customary units of measure.

"Right-hand" and "left-hand" sides are determined by facing in the direction the combine will travel when in use.

Record the identification number(s) in the space provided following Specifications. Accurately record all of the characters because (should the product be stolen) tracing is sometimes through a computer match of letters and numbers. Also, your dealer needs this information when ordering parts. If you carry your operator's manual on the machine for reference, be sure to also record the identification number(s) on a separate sheet of paper and file it in a secure place not on the machine so you will still have a record in case the machine is stolen.

The warranty on this combine appears on your copy of the purchase order which you should have received from your dealer when making your purchase. This warranty provides you the assurance that John Deere will back its products when defects appear within the warranty period. In some circumstances, John Deere also provided field improvements, often without charge to the customer, even if the product is out of warranty.

The tire manufacturer's warranty supplied with your machine may not apply outside the U.S. and Canada.

Warranty and field improvements are a part of John Deere's product support program for customers who operate and maintain their equipment as described in this manual. Should the equipment be abused or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.



Contents

	Page
Contents	1
Safety	2
Operator's Station	6
Engine Break-In	21
Prestarting Checks	22
Operating the Engine	24
Driving the Combine	29
Transporting	31
Lighting and Signals	32
Fuels and Lubricants	37
Lubrication and Maintenance	42
Fundamentals of Combine Harvesting	56
Platform	72
Feeder House	99
Separator	104
Grain Tank and Unloading Auger	153
Engine Service	162
Electrical System	177
Monitors	183
Hydraulic System	194
Leveling System	197
Power Train	204
Air Conditioner and Heater	214
Trouble Shooting	219
Storage	243
Crime Prevention	246A
Specifications	247
Index	253



Safety

SAFETY DECALS



#28488N


#28488N

! **CAUTION or WARNING:** Decals with these headings and symbol indicate the possibility of personal injury.

IMPORTANT: Decals with this heading indicate the possibility of damage to the machine.

Decals are located in areas where they apply.

AVOID CONTACT WITH MOVING PARTS

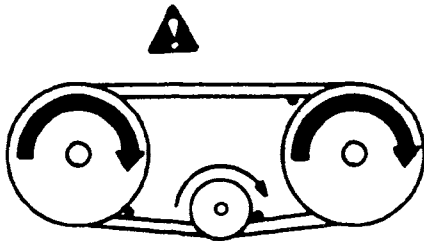

#130980

Keep guards and shields in place at all times while operating the combine. Always disengage separator and shut off engine before removing guards or shields.

Unauthorized modifications to the machine may impair the function and or safety and affect machine life.


Keep hands, feet, and clothing away from power-driven parts.

Never clean, lubricate, or adjust the combine when it is running.

Everyone must be clear before starting engine or running combine.

Never attempt to clear obstructions off the platform unless the separator is disengaged and the engine is shut off.

LEAVING COMBINE UNATTENDED

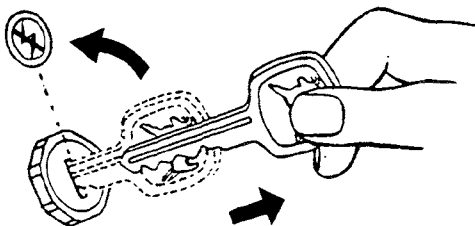


#11/524

Before leaving the combine unattended, turn off engine and remove keys, support the platform with either the hydraulic cylinder safety stop, or lower it to the ground. The gearshift lever must be in neutral and the parking brake engaged. Lock cab doors.

Failure to follow proper procedures when mounting a tire on a wheel or rim can produce an explosion which may result in serious injury or death. Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job. Have it done by your John Deere dealer or a qualified tire repair service.

When sealing tire beads on rims, never exceed 35 psi (2.40 kPa) (2.4 bar) or maximum inflation pressures specified by tire manufacturers for mounting tires. Inflation beyond this maximum pressure may break the bead, or even the rim, with dangerous explosive force. If both beads are not seated when the maximum recommended pressure is reached, deflate, reposition tire, re-lubricate bead, and reinflate.

Detailed tire mounting instructions, including necessary safety precautions, are contained in John Deere Fundamentals of Service (FOS) Manual 55, Tires and Tracks, available through your John Deere dealer. Such information is also available from the Rubber Manufacturers Association and from tire manufacturers.

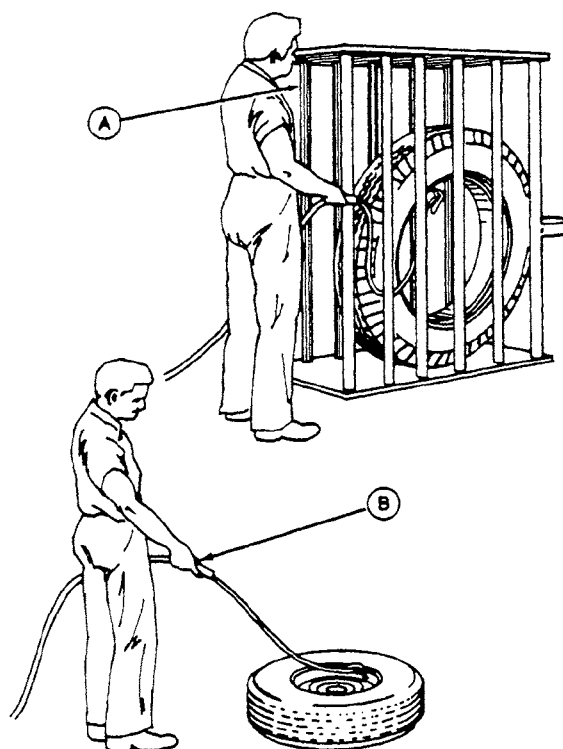


- A—Use a safety cage if available.
- B—Do not stand over tire. Use a clip-on chuck and extension hose.

T5-0123

WASHING FRONT CAB WINDOW


To wash front window of cab, stand on ground and use a long handled squeegee or mop to reach top of window. Do not stand on feeder house or cutting platform top beam as this could result in a fall.

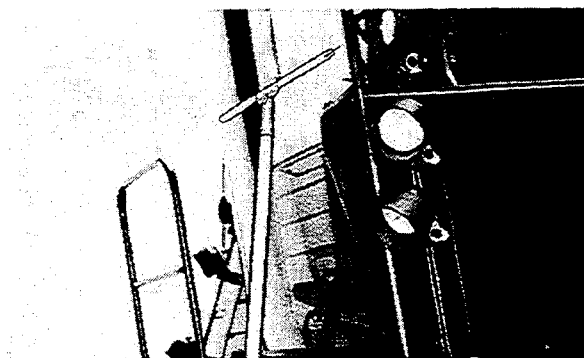

H50157

SERVICING DRIVES AND DRIVE RELATED AREAS

Before servicing the combine in either a belt driven area or any area receiving power from a belt drive, it is recommended that the engine be shut off. Some drives, due to their clutching and declutching characteristics, can be engaged when the engine is running by the applying or removing of outside forces.

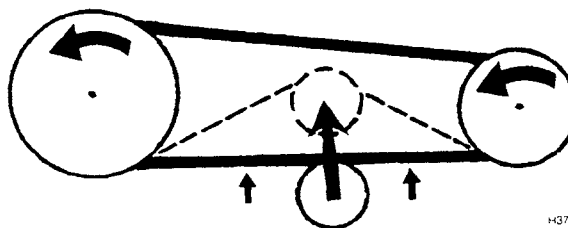

H375G-1

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com