

45 Self-Propelled Combines (Serial No. 45-16401 and up)



JOHN DEERE

OPERATORS MANUAL

45 Self-Propelled Combines (Serial No.
45-16401 and up)

OMH451158 K8 English

OMH451158 K8


LITHO IN U.S.A.
ENGLISH



TO THE PURCHASER

The combine you have just purchased was designed and manufactured to the traditionally high quality standards of all John Deere Farm Equipment. Your combine has been thoroughly inspected and tested not only at the factory but at your dealer's by a trained John Deere Serviceman. We are confident that you will receive years of dependable, economical service from your John Deere Combine.

STUDY THIS MANUAL CAREFULLY,
KEEP IT HANDY, IN A SAFE PLACE,
FOR FUTURE REFERENCE.

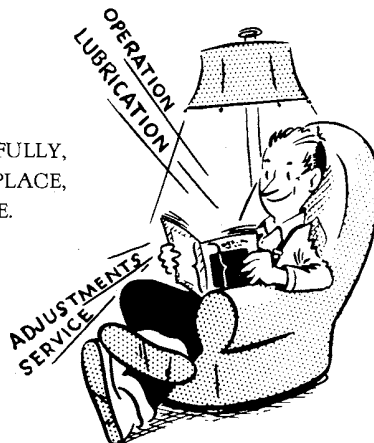

56847

If you should find that you require information not covered in this manual, consult your John Deere dealer. He will be glad to answer any questions that may arise regarding the operation and handling of the combine. He has trained mechanics who are kept informed on the best methods of John Deere Combine servicing and can give you prompt know-how service in the field or in his shop.

KEEP YOUR COMBINE A JOHN DEERE COMBINE

Genuine John Deere parts fit properly and insure satisfactory service because they are made from the original patterns and from the same materials as used in new machines. Should your combine require replacement parts, go to your John Deere dealer where you can obtain Genuine John Deere Parts—**accept no substitutes.**

LOCATION REFERENCE

“Right-hand” and “left-hand” sides are determined by facing in the direction the combine will travel when in use.

“Clockwise” refers to parts turning to the right like the hands of a clock. “Counter-clockwise” refers to parts turning to the left.

Engine Reference Only. Timing gear end of engine is referred to as the “front”; flywheel end as the “rear.”

SERIAL NUMBERS

Your combine, engine, cutting platform and axle are provided with serial numbers.

When ordering parts, always bring with you the model and serial numbers as given on the serial number plates. By doing so, you will assist your John Deere dealer in giving you prompt, efficient service.


Record the serial numbers in the spaces provided below. It is a good plan to copy the serial numbers down on a card to be carried in your bill-fold for quick reference.

The combine serial number is stamped on a plate located on the support bracket at the rear end of the fuel tank.

The engine serial number is stamped on a plate located on top of the fly-wheel housing.

The cutting platform serial number is stamped on a plate located on the outside of the right-hand platform divider.

The axle serial number is stamped on the top, left-hand end of the axle tube.

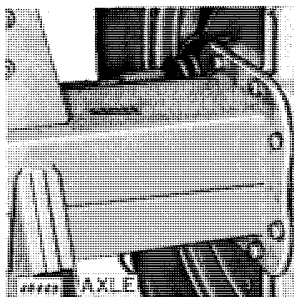

Axle Serial No.....

Combine Serial No.....

Platform Serial No.....

Engine Serial No.....

Date Purchased.....

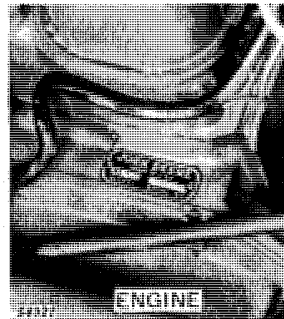
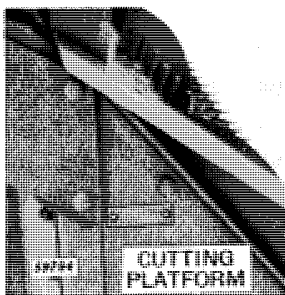


TABLE OF CONTENTS

	<i>Page</i>
SERIAL NUMBERS.....	1
GENERAL VIEWS.....	4
SPECIFICATIONS.....	7
LUBRICATION.....	13
COMBINE CONTROLS.....	28
OPERATOR'S SEAT.....	31
OPERATOR'S PLATFORM HINGED LADDER.....	32
OPERATION.....	33
Breaking In the New Combine.....	33
Engine Break-In.....	33
Before Operation Checks and Adjustments.....	34
Starting the Engine.....	34
Stopping the Engine.....	35
Starting the Combine.....	35
Selecting Proper Ground Speed.....	35
Transporting.....	36
Drive Wheel Tread.....	38
Slip Clutches.....	40
Basic Settings Made at the Factory.....	41
Cross-Sectional View of the 45 Combine.....	42
Safety Suggestions.....	44
Fundamentals of Combine Harvesting.....	46
Operating Suggestions.....	47
Corn Combining Suggestions.....	50
Suggested Setting for Combining Various Crops.....	56
Cold Weather Operation.....	64
Care When the Season Is Over.....	66
Care at the Beginning of the Next Season.....	68
ADJUSTMENTS AND SERVICE.....	69
Reel.....	69
Cutter Bar.....	76
Cutting Platform Auger.....	79
Feeder Conveyor.....	83
Cutting Platform Drive Throw-Out Mechanism.....	84
Loop Dividers and Adjustable Divider Points.....	85
Cutting Platform Lifting Mechanism.....	86
Cutting Platform Leveling Adjustment.....	87

TABLE OF CONTENTS—Continued

	<i>Page</i>
Cutting Platform Special Equipment.....	88
Cylinder and Concave Grate.....	94
Feed Rolls Attachment.....	109
Grain Conveyor.....	110
Cleaning Unit.....	113
Cleaning Fan.....	113
Chaffer and Sieve.....	117
ScourKleen.....	122
Shoe Pitmans.....	123
Straw Walkers.....	124
Clean Grain and Tailings Elevator.....	125
Grain Tank Unloading Auger.....	129
Hydraulic System.....	130
Separator Drive.....	131
Selective Ground Speed Control.....	133
Clutch.....	136
Brakes.....	137
Transmission.....	138
Straw Spreader.....	139
Straw Chopper.....	140
Care of Rubber Tires.....	141
Toe-In Adjustment.....	142
Steering Mechanism.....	143
Lighting Attachment.....	144
Care of Chains and V-Belts.....	146
Service Chart.....	150
ENGINE SERVICE.....	156
Fuel System.....	156
Governor.....	159
Ignition System.....	161
Starting System.....	164
Cooling System.....	167
Valve Tappet Adjustment.....	170
Engine Removal.....	170
Service Chart.....	171
INDEX.....	175

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com