

# 95 SELF-PROPELLED COMBINES (SERIAL NO. 95-4101 AND UP)



 
JOHN DEERE

## OPERATORS MANUAL 95 SELF-PROPELLED COMBINES (SERIAL NO. 95-4101 AND UP)

OMH741158 (01NOV58) English

OMH741158 (01NOV58)

LITHO IN THE U.S.A.  
ENGLISH




## TO THE PURCHASER

The self-propelled combine you have just purchased was designed and manufactured to the traditionally high quality standards of all John Deere Farm Equipment. Your combine has been thoroughly inspected and tested, not only at the factory, but at your dealer's by a trained John Deere Serviceman. We are confident that you will receive years of dependable, economical service from your John Deere 95 Self-Propelled Combine.

If you should find that you require information not covered in this manual, consult your John Deere dealer. He will be glad to answer any questions that may arise regarding the operation and handling of the combine. He has trained mechanics who are kept informed on the best methods of John Deere Combine servicing, and can give you prompt know-how service in the field or in his shop.

**STUDY THIS MANUAL CAREFULLY, KEEP IT HANDY, IN A SAFE PLACE, FOR FUTURE REFERENCE.**

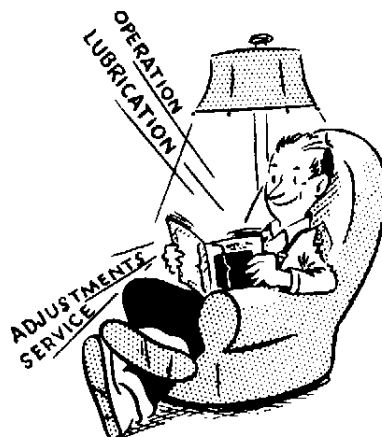

### **KEEP YOUR COMBINE A JOHN DEERE COMBINE**

Genuine John Deere Parts fit properly and insure satisfactory service because they are made from the original patterns and from the same materials as used in new machines. Should your combine require replacement parts, go to your John Deere dealer where you can obtain Genuine John Deere Parts—accept no substitutes.

### **LOCATION REFERENCE**

“Right-hand” and “left-hand” sides are determined by facing in the direction the Combine will travel when in use.


“Clockwise” refers to parts turning to the right like the hands of a clock. “Counter-clockwise” refers to parts turning to the left.

### **Engine Reference Only.**

Timing gear end of the engine is referred to as the “front;” flywheel end as the “rear.”

## SERIAL NUMBERS

Your combine, cutting platform, axle, engine and ScourKleen (optional equipment) have serial numbers.

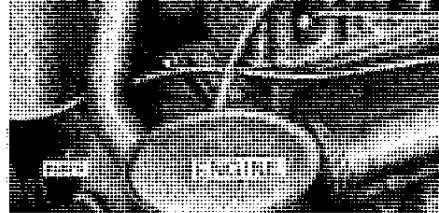

When ordering parts, always bring with you the model and serial numbers as given on the serial number plates. By doing so, you will assist your John Deere dealer in giving you prompt, efficient service.




Record the serial numbers in the spaces provided on this page. It is a good plan to also copy the serial numbers down on a card to be carried in your billfold for quick reference.



The combine serial number is on a plate located on the support bracket at the rear end of the fuel tank.

The engine serial number is on a plate located on top of the flywheel housing.

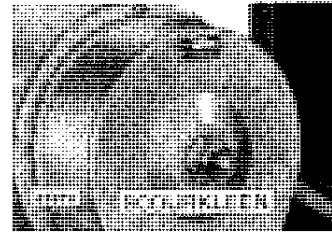

The axle serial number is on the top, left-hand end of the axle tube.

The cutting platform serial number is on a plate located on the outside of the right-hand platform divider.

The ScourKleen (optional equipment) serial number is on a plate located on the discharge end of the ScourKleen.



Combine Serial No.....

Engine Serial No.....

Axle Serial No.....

Cutting Platform Serial No.....

ScourKleen Serial No.....

Date Purchased.....

## TABLE OF CONTENTS

	<i>Page</i>
SERIAL NUMBERS.....	1
GENERAL VIEWS.....	4-5
SPECIFICATIONS.....	6-11
LUBRICATION.....	12-30
OPERATION.....	31-64
Combine Controls.....	32
Operator's Platform Hinged Ladder.....	34
Operator's Seat.....	35
Breaking in the New Combine.....	35
Engine Break-In.....	36
Before Operation Checks and Adjustments.....	36
Starting the Engine.....	37
Stopping the Engine.....	37
Starting the Combine.....	37
Selecting Proper Ground Speed.....	38
Speed of Various Units.....	38
Cutting Platform Height.....	38
Basic Settings Made at the Factory.....	38
Cross-Sectional View of the 95 Combine.....	40-41
Fundamentals of Combine Harvesting.....	42
Operating Suggestions.....	43
Slip Clutches.....	46
Highway Safety Lighting.....	48
Cold Weather Operation.....	50
Weather Brake.....	51
Transporting.....	52
Corn Combining Suggestions.....	53
Suggested Settings for Combining Various Crops.....	56
Safety Suggestions.....	62
Care When the Season Is Over.....	64
Care at the Beginning of the Next Season.....	65
ADJUSTMENTS AND SERVICE.....	67-172
Inspection Doors and Parts.....	67
Reel.....	67
Cutter Bar.....	74
Various Speeds of Cutting Platform and Feeder.....	79
Cutting Platform Auger.....	80
Cutting Platform Auger Stripper.....	80
Beater in Feeder House.....	81
Feeder Conveyor.....	84
Cutting Platform Leveling Adjustment.....	86

## TABLE OF CONTENTS—Continued

	<i>Page</i>
Cutting Platform Height Range Adjustment.....	87
Cutting Platform Special Equipment.....	88
Belt Pickup.....	89
Two-Row Corn Attachment.....	90
Cylinder and Concave Grate.....	91
Beater Behind the Cylinder.....	109
Grain Conveyor.....	112
Feed Rolls Attachment.....	116
Cleaning Fan.....	117
Chaffer and Sieve.....	122
Shoe Pitman.....	128
Clean Grain and Tailings Elevators.....	129
Straw Walkers.....	133
Straw Spreader.....	136
Straw Chopper.....	137
Grain Tank Extension.....	139
ScourKleen.....	140
Grain Tank Unloading Auger.....	141
Separator Drive.....	142
Electromagnetic Throw-Out Clutch.....	144
Selective Ground Speed Control.....	146
Steering Mechanism.....	150
Clutch.....	154
Brakes.....	156
Transmission.....	157
Hydraulic System.....	158
Care of Chains and V-Belts.....	160
Care of Tracks.....	164
Toe-In Adjustment.....	166
Care of Rubber Tires.....	167
Service Chart.....	168
<b>ENGINE SERVICE.....</b>	<b>173-193</b>
Fuel System.....	173
Carburetor.....	174
Governor.....	176
Wiring Diagram.....	179
Ignition System.....	180
Starting System.....	183
Cooling System.....	186
Valve Tappet Adjustment.....	189
Engine Removal.....	189
Service Chart.....	190
<b>INDEX.....</b>	<b>194-198</b>

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)