

6601 COMBINE

 


OPERATORS MANUAL6601 COMBINE

OMH82644 E0 English

JOHN DEERE HARVESTER WORKS OMH82644 E0

> LITHO IN THE U.S.A. ENGLISH





To the Purchaser

This new combine was carefully designed and manufactured to give years of dependable service. To keep it running efficiently, read the instructions in this operator's manual. Each section is clearly identified so you can easily find the information you need—whether it is operation, lubrication, or service. Read the Table of Contents to learn where each section is located. Use the alphabetical index for fast reference.


This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

In addition to the equipment furnished with your combine, attachments are available to help you do a better job in special crop conditions. These are described in the attachments section of this manual and can be purchased from your John Deere dealer.

"Right-hand" and "left-hand" sides are determined by facing in the direction the combine will travel when in use.

Record your combine serial numbers in the space provided on page 69. Your dealer needs this information to give you prompt, efficient service when you order parts or attachments. If your combine requires replacement parts, go to your John Deere dealer where you can obtain Genuine John Deere parts—accept no substitutes.


The warranty on this combine appears on your copy of the purchase order which you should have received from your dealer when you purchased the combine.

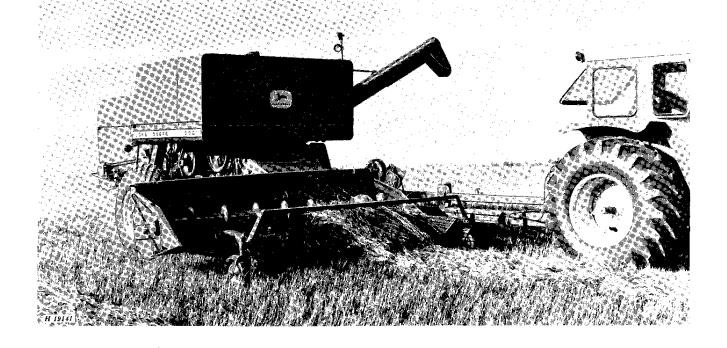



Contents

Controls and instruments	Page 2
Operation	4
Safety suggestions	. 26
Lubrication and periodic service	. 27
Service	. 32
Trouble shooting	. 59
Storage	. 65
Attachments	. 66
Specifications	. 69
Index	. 71
GRAIN TANK FIELD LAMPS UNLOADING TAIL LAMP	
TAIL LAMP	
	1 4.1

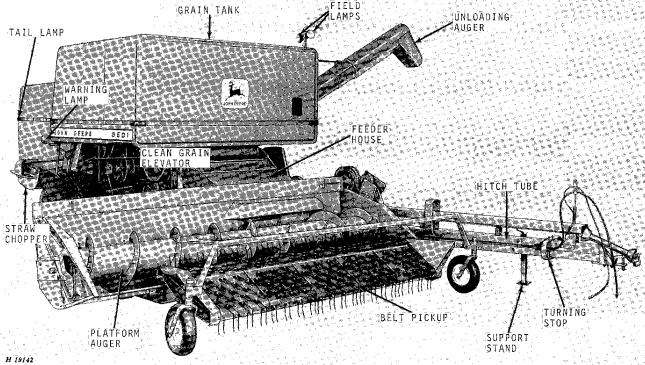

John Deere 6601 Combine with Belt Pickup and Straw Chopper (Special Attachments)




Controls and Instruments

This section illustrates all controls and instruments necessary for successful field operation. For an explanation of each control and instrument, refer to the page reference given.


Before attempting to operate your new combine, become familiar with the location and purpose of its controls and instruments. Study these pages carefully, regardless of your previous combine experience.

SWITCH BOX

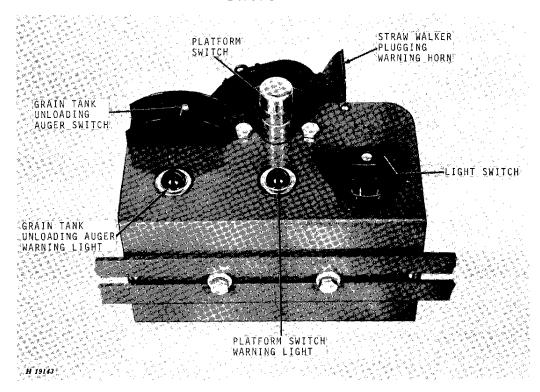


Grain Tank Unloading Auger Switch - Page 21
Grain Tank Unloading Auger Warning Light - Page 21
Platform Switch - Page 11
Platform Switch Warning Light - Page 11
Straw Walker Plugging Warning Horn - Page 67
Light Switch - Page 21

CONCAVE

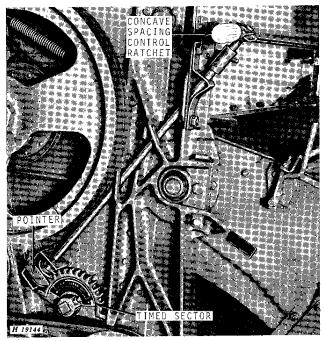


Concave Spacing Control Ratchet - Page 17

CYLINDER

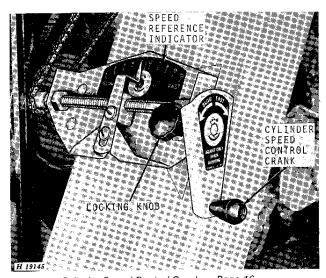


Cylinder Speed Control Crank - Page 16

FAN

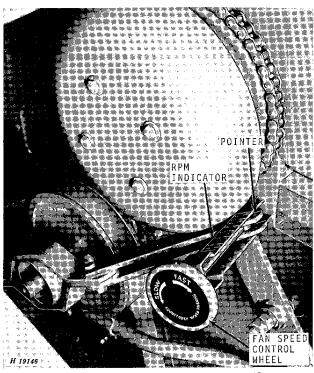

Cleaning Fan Speed Control Wheel - Page 18

CHAFFER AND SIEVE

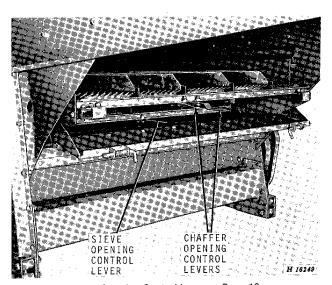

Sieve Opening Control Lever - Page 19 Chaffer Opening Control Levers - Page 19

Thank you so much for reading.

Please click the "Buy Now!"

button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com