



6602 COMBINES



OPERATORS MANUAL 6602 COMBINES

OMH85751 B3 English

OMH85751 B3


LITHO IN THE U.S.A.
ENGLISH





To the Purchaser

This new combine was carefully designed and manufactured to give years of dependable service. To keep it running efficiently, read the instructions in this operator's manual. Each section is clearly identified so you can easily find the information you need—whether it is operation, lubrication, or service. Read the Table of Contents to learn where each section is located. Use the alphabetical index for fast reference.


 This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

In addition to the equipment furnished with your combine, attachments are available to help you do a better job in special crop conditions. These are described in the attachments section of this manual and can be purchased from your John Deere dealer.

"Right-hand" and "left-hand" sides are determined by facing in the direction the combine will travel when in use. The radiator end of the engine is referred to as the "front," the flywheel end as the "rear."

Record your combine serial numbers in the space provided on page 148. Your dealer needs this information to give you prompt, efficient service when you order parts or attachments. If your combine requires replacement parts, go to your John Deere dealer where you can obtain genuine John Deere parts—accept no substitutes.


The warranty on this combine appears on your copy of the purchase order which you should have received from your dealer when you purchased the combine.

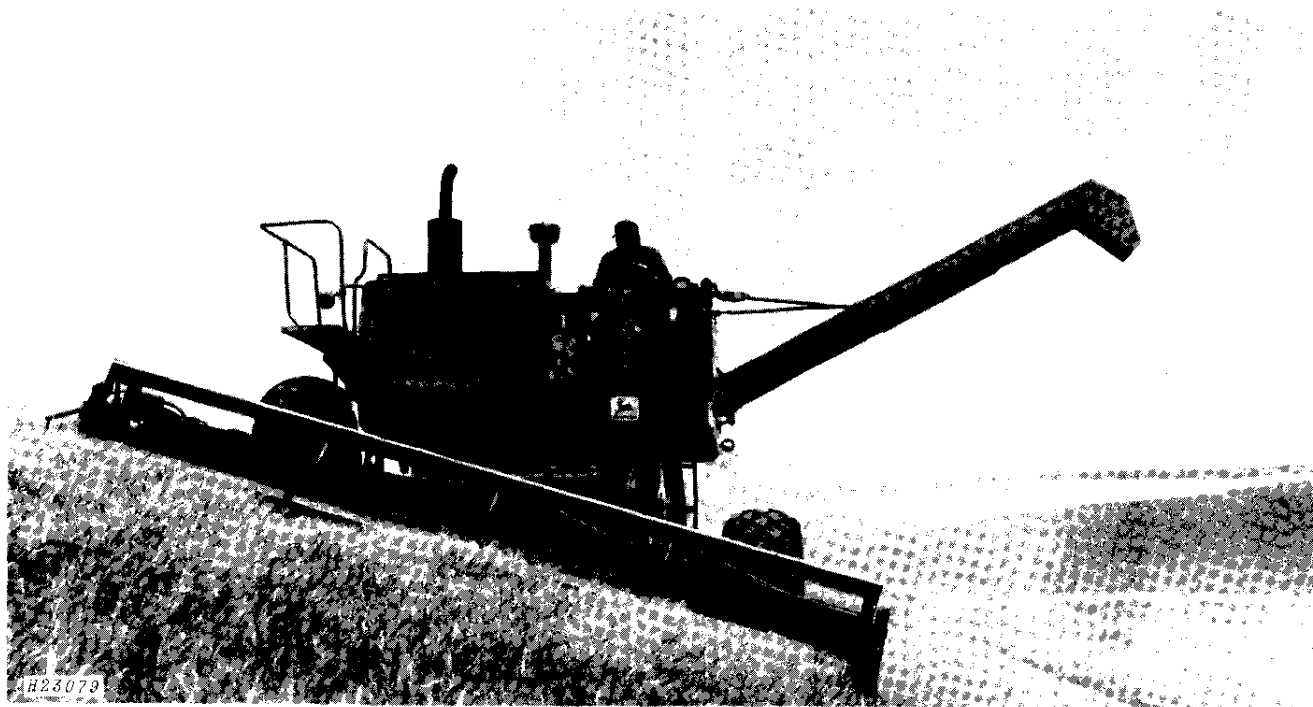



Contents

	Page
Controls and instruments	2-3
Operation	4-35
Safety suggestions	36
Fuels and lubricants	37-38
Lubrication and periodic service	39-53
Service	54-119
Trouble shooting	120-136
Storage	137-139
Attachments	140-142
Specifications	143-146
Index	147

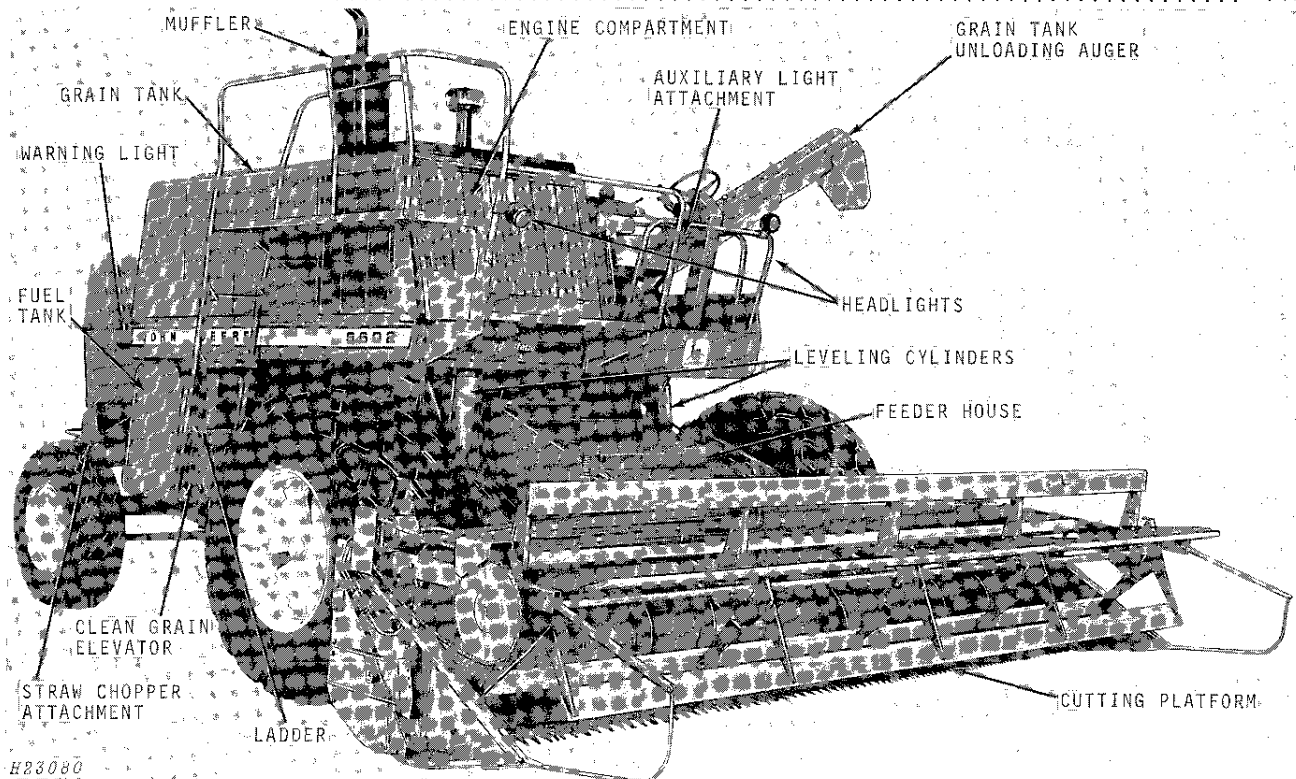

John Deere 6602 Combine



Controls and Instruments


This section illustrates all controls and instruments necessary for successful field operation. For an explanation of each control and instrument, refer to the page reference given.

Before attempting to operate your new combine, become familiar with the location and purpose of its controls and instruments. Study these pages carefully, regardless of your previous combine experience.

The control levers and knobs have different colors and shapes. These have been designed to help you quickly locate the controls while operating the combine. Colors on controls indicate:

RED—Combine movement controls (Throttle, Gearshift Lever, Hydrostatic Speed Range Lever)


OPERATOR'S PLATFORM

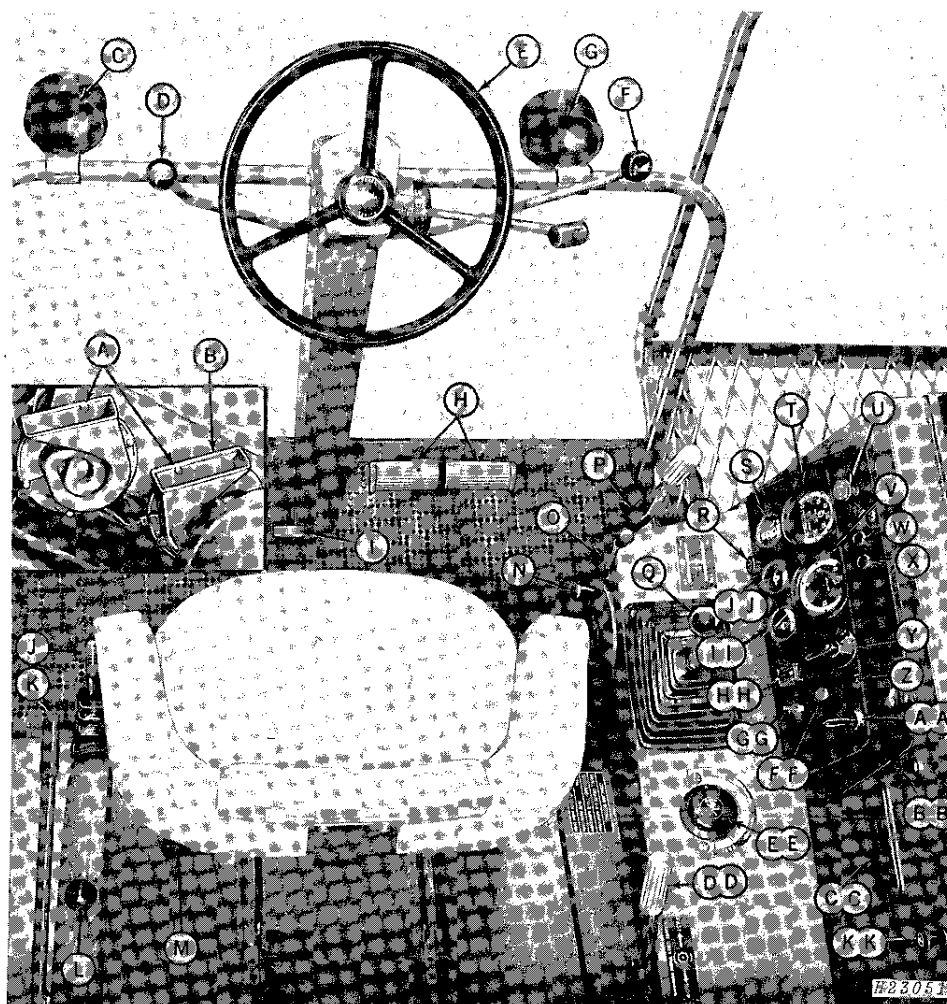

YELLOW—Auxiliary Power Controls (Separator Control Lever, Cylinder Speed Control Ratchet, Platform Electromagnetic Clutch Switch)

BLACK—Miscellaneous Function Controls (Platform Height Control, Hydraulic Lift Reel Control, etc.)



ENGINE - AIR INTAKE

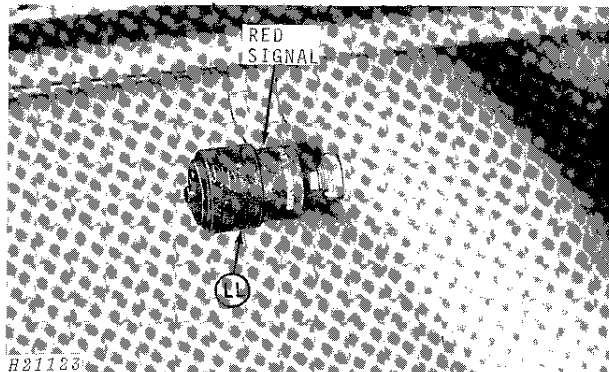

Page

A - Truck Signal Horns	31
B - Coolant Temperature Warning Horn or Straw Walker Warning Horn (Attachment)	7-31
C - Headlight	31
D - Hydraulic Lift Reel Control Lever	14
E - Steering Wheel	25
F - Platform Height Control Lever	12
G - Hydrostatic Drive Speed Range Control Lever	25
H - Brake Pedals	26
I - Steering Column Control	10
J - Parking Brake Lever	25
K - Grain Tank Unloading Auger Lever	24
L - Unloading Auger Swing Control	24
M - Operator's Seat Control	9
N - Concave Opening Control Wheel	19
O - Throttle	6
P - Separator Control Lever	18
Q - Gearshift Lever	25
R - Choke (Gasoline Engine Only)	6
S - Fuel Gauge	7

SEPARATOR

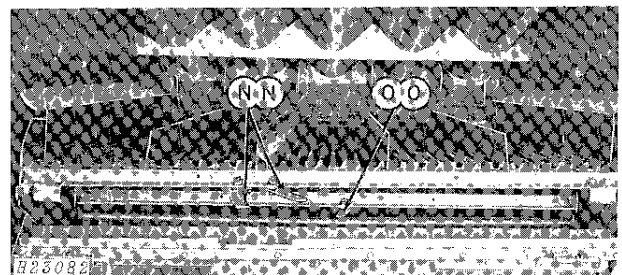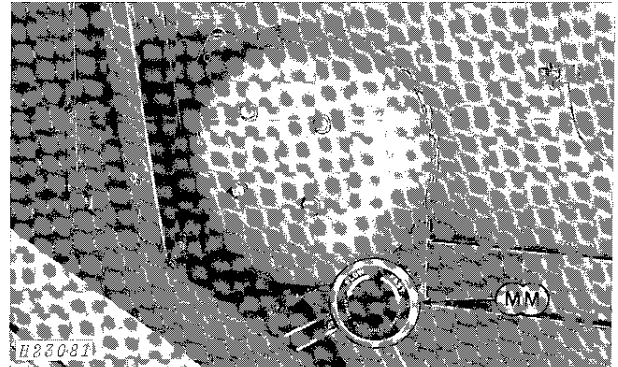

Page

T - Engine Tach-Hour Meter	7
U - Platform Electromagnetic Clutch Switch	12
V - Cylinder Speed Tachometer	18
W - Parking Brake Indicator Light	25
X - Alternator Indicator Light	6
Y - Light Switch	31
Z - Horn Button	31
AA - Key Switch	6
BB - Cigarette Lighter	31
CC - Ash Tray	31
DD - Cylinder Speed Control Ratchet	18
EE - Hydrostatic Drive Reel Control	13
FF - Limit Leveling Warning Light	29
GG - Leveling Control Cut-Out Switch	29
HH - Manual Leveling Control Switch	29
II - Coolant Temperature Gauge	7
JJ - Engine Oil Pressure Gauge	7
KK - Fuel Cut-Off Switch (Diesel)	6
LL - Air Restriction Indicator	7
MM - Fan Speed Control Wheel	22
NN - Chaffer Opening Controls	22
OO - Sieve Opening Control	22

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com