



6602 COMBINES



OPERATORS MANUAL 6602 COMBINES

OMH87004 A4 English

OMH87004 A4


LITHO IN THE U.S.A.
ENGLISH





To the Purchaser

This new combine was carefully designed and manufactured to give years of dependable service. To keep it running efficiently, read the instructions in this operator's manual. Each section is clearly identified so you can easily find the information you need—whether it is operation, lubrication, or service. Read the Table of Contents to learn where each section is located. Use the alphabetical index for fast reference.


 This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

In addition to the equipment furnished with your combine, attachments are available to help you do a better job in special crop conditions. These are described in the attachments section of this manual and can be purchased from your John Deere dealer.

"Right-hand" and "left-hand" sides are determined by facing in the direction the combine will travel when in use. The radiator end of the engine is referred to as the "front," the flywheel end as the "rear."

Record your combine serial numbers in the space provided on page 159. Your dealer needs this information to give you prompt, efficient service when you order parts or attachments. If your combine requires replacement parts, go to your John Deere dealer where you can obtain genuine John Deere parts—accept no substitutes.


The warranty on this combine appears on your copy of the purchase order which you should have received from your dealer when you purchased the combine.

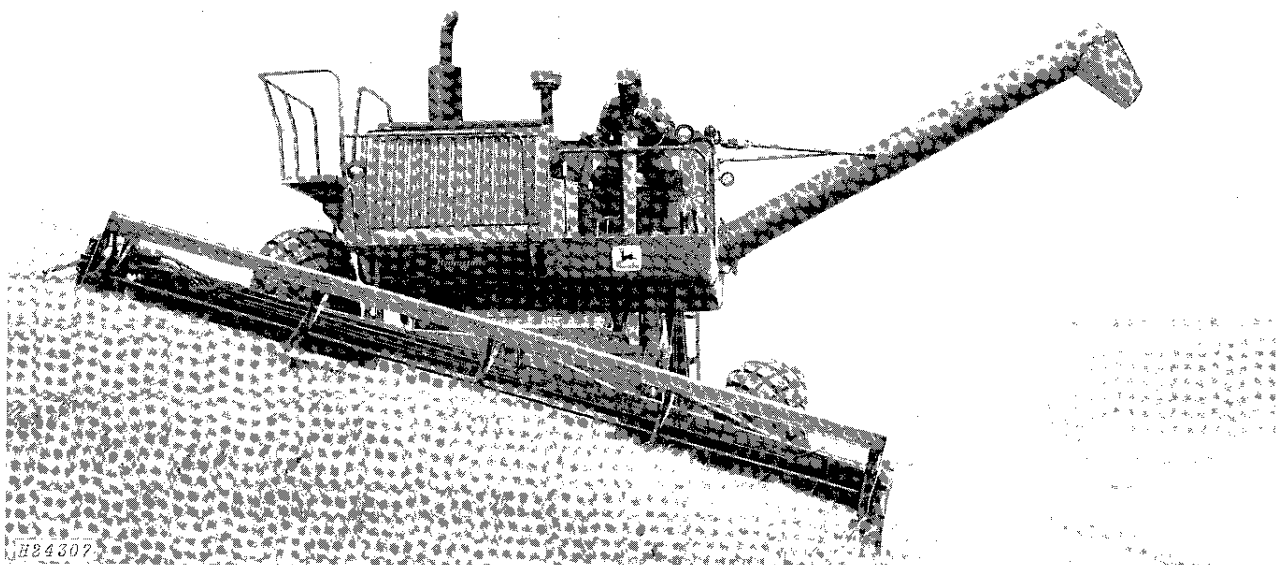



Contents

	Page
Controls and instruments.....	2-3
Operation.....	4-39
Safety suggestions.....	40
Fuels and lubricants.....	41-42
Lubrication and periodic service.....	43-57
Service.....	58-128
Trouble shooting.....	129-148
Storage.....	149-151
Attachments.....	152-155
Specifications.....	156-159
Index.....	160-164

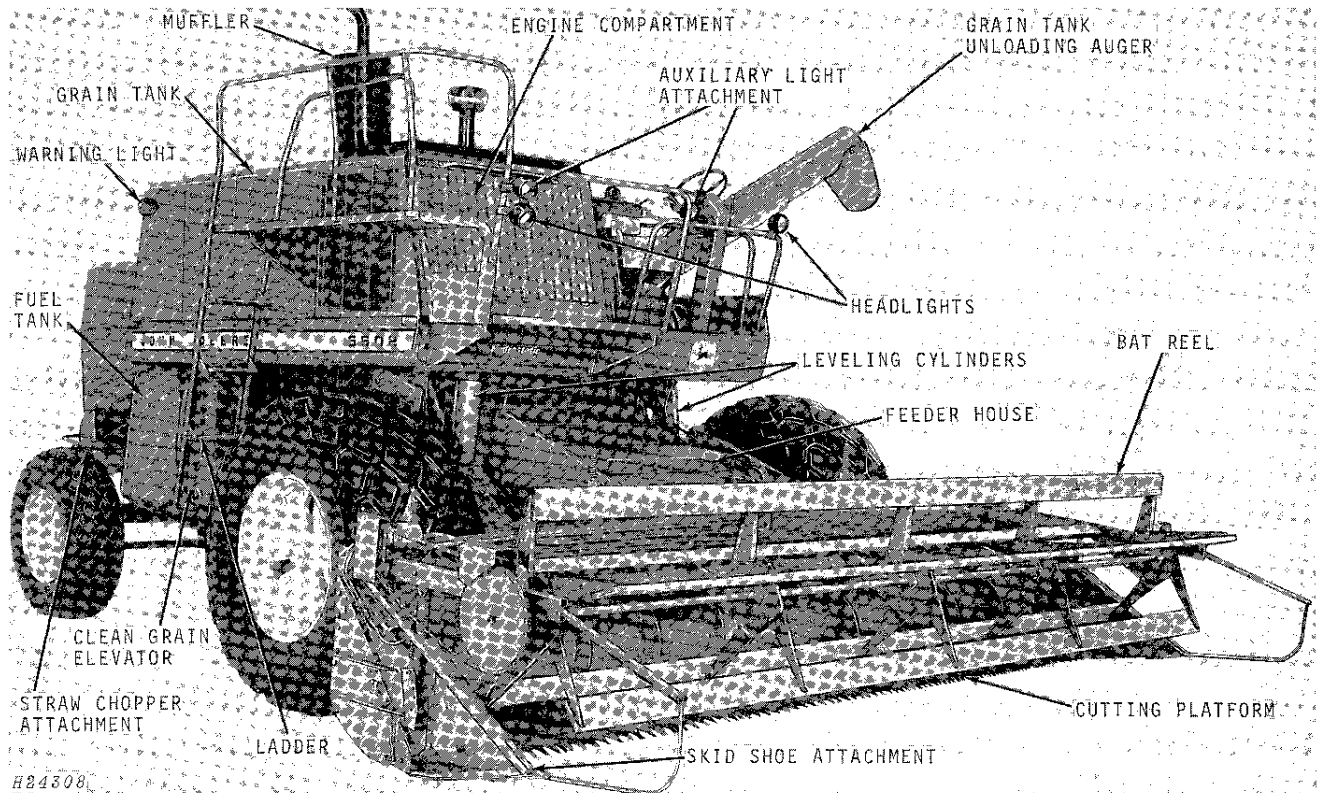

John Deere 6602 Combine



Controls and Instruments


This section illustrates all controls and instruments necessary for successful field operation. For an explanation of each control and instrument, refer to the page reference given.

Before attempting to operate your new combine, become familiar with the location and purpose of its controls and instruments. Study these pages carefully, regardless of your previous combine experience.

The control levers and knobs have different colors and shapes. These have been designed to help you quickly locate the controls while operating the combine. Colors on controls indicate:

RED—Combine movement controls (Throttle, Gearshift Lever, Hydrostatic Speed Range Lever)


OPERATOR'S PLATFORM

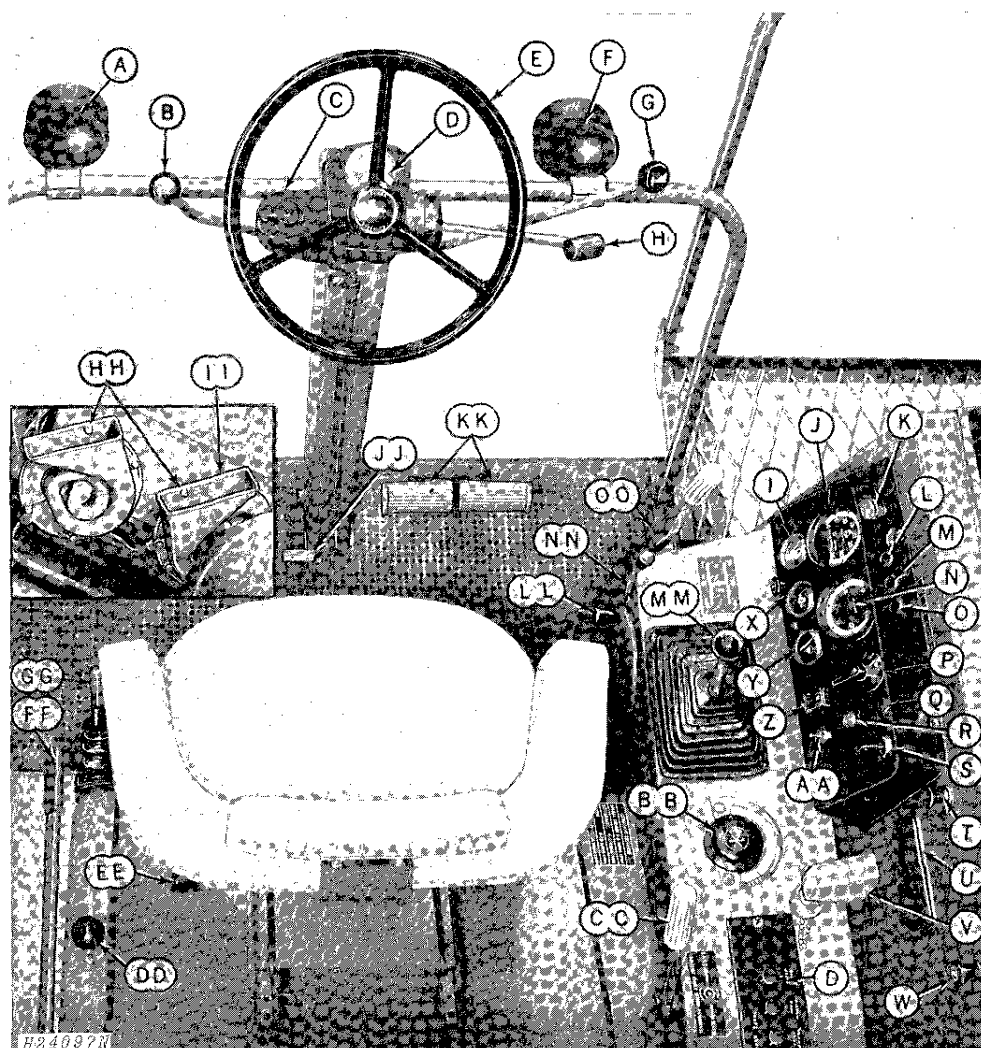

YELLOW—Auxiliary Power Controls (Separator Control Lever, Cylinder Speed Control Ratchet, Platform Electromagnetic Clutch Switch)


BLACK—Miscellaneous Function Controls (Platform Height Control, Hydraulic Lift Reel Control, etc.)

ENGINE - AIR INTAKE

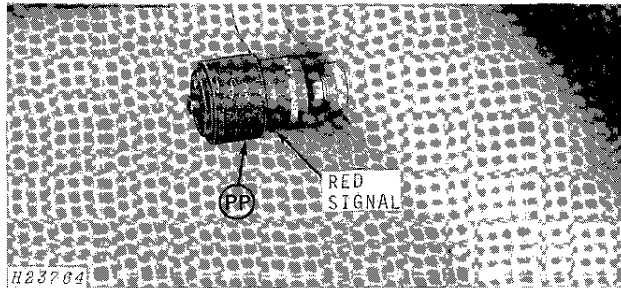

	Page
A—Headlight (L.H. Standard)	35
B—Hydraulic Lift Reel Control Lever	16
C—Turn Signals (Attachment)	35,153
D—Low Shaft Speed Indicator (Attachment)	11,12,116
E—Steering Wheel	29
F—Headlight (Attachment)	35
G—Platform Height Control Lever	14
H—Hydrostatic Drive Speed Range Control Lever	29
I—Fuel Gauge	8
J—Engine Tach-Hour Meter	8
K—Platform Electromagnetic Clutch Switch	14
L—Parking Brake Indicator Light	30
M—Alternator Indicator Light	7
N—Cylinder Speed Tachometer	20
O—Transmission Oil Pressure Light	29
P—Light Switch	35
Q—Horn Button	35
R—Limit Leveling Warning Light	33
S—Key Switch	7
T—Cigarette Lighter	35
U—Ash Tray	35
V—Ether Starting Aid	6

SEPARATOR

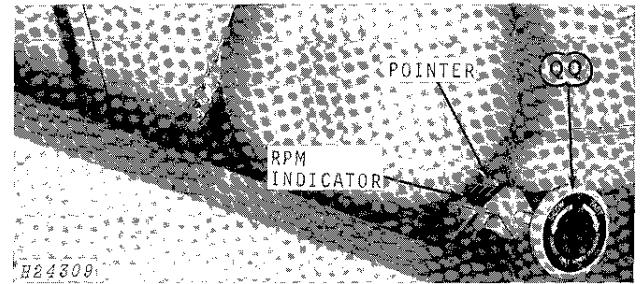

	Page
W—Fuel Shut-Off Switch	6
X—Engine Oil Pressure Gauge	7
Y—Coolant Temperature Gauge	7
Z—Manual Leveling Control Switch	33
AA—Leveling Control Cut-Out Switch	33
BB—Hydrostatic Drive Reel Control	15
CC—Cylinder Speed Control Ratchet	20
DD—Unloading Auger Swing Control	28
EE—Operator's Seat Control	9
FF—Grain Tank Unloading Auger Lever	28
GG—Parking Brake Lever	30
HH—Truck Signal Horns	35
II—Coolant Temperature Warning Horn or Straw Walker Warning Horn (Attachment)	7,19,35
JJ—Steering Column Control	10
KK—Brake Pedals	30
LL—Concave Opening Control Wheel	21
MM—Gearshift Lever	29
NN—Throttle	7
OO—Separator Control Lever	20
PP—Air Restriction Indicator	7,127
QQ—Fan Speed Control Wheel	26
RR—Chaffer Opening Controls	26
SS—Sieve Opening Control	26

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com