

# COMBINE OPERATOR'S CAB



JOHN DEERE

## OPERATORS MANUAL COMBINE OPERATOR'S CAB

OMH90827 (01NOV61) English

OMH90827 (01NOV61)

LITHO IN THE U.S.A.  
ENGLISH



## To the purchaser


This operator's manual contains the necessary information regarding operation and adjustments so that you may obtain maximum service and satisfaction from your operator's cab with either air conditioner, heater, or ventilating fan.

If you should find that you require information not covered in this manual, consult your John Deere dealer. He will be glad to answer any question that may arise.

Your John Deere dealer has trained mechanics who are kept informed on the best John Deere service methods and will render you prompt service if needed.

The operator's cab can be installed on the following John Deere combines:

- 45 combine, serial no. 45-21501 and up
- 55 combine, serial no. 55-46801 and up
- 95 combine, all series, except 95H Hillside

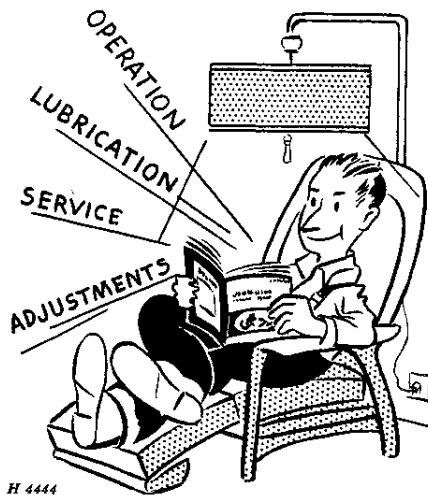

H 4444

Study this manual carefully and keep it handy in a safe place for future reference

### Location reference


"Right-hand" and "left-hand" sides are determined by facing in the direction the combine will travel when in use.

Date of Purchase \_\_\_\_\_

## Contents

Specifications . . . . .	1	Heater Unit . . . . .	5-6
Operator's Cab . . . . .	2	Ventilating Fan . . . . .	6
Air Conditioner . . . . .	3-4	Trouble Shooting . . . . .	7-8


# Specifications

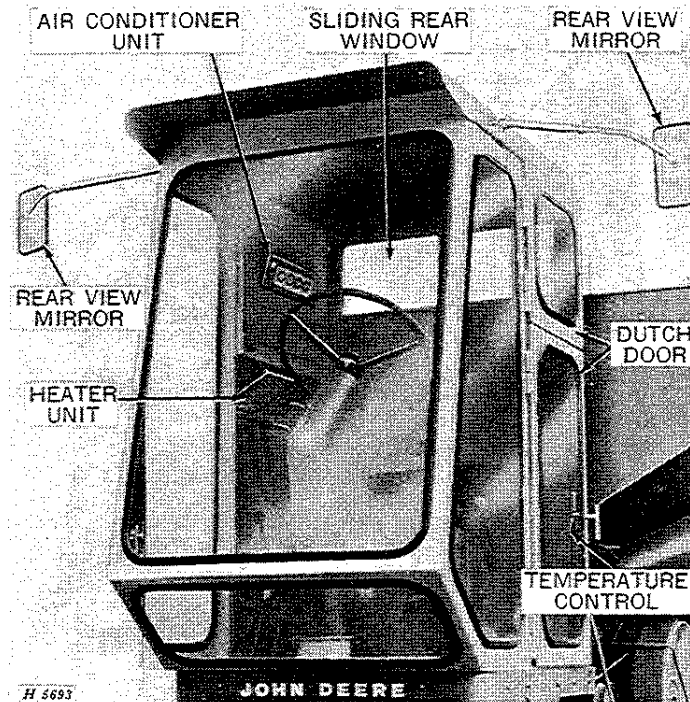

<p>Cab glass</p> <p>45 combine cab area . . . . . 31 square feet</p> <p>55 combine cab area . . . . . 35 square feet</p> <p>95 combine cab area . . . . . 39 square feet</p> <p>Cab filters</p> <p>Outside:</p> <p>Type . . . . . permanent, metal</p> <p>Size . . . . . 13 x 13 x 1-inch thick</p> <p>Inside:</p> <p>Type . . . . . permanent, metal</p> <p>Size . . . . . 22 x 10 x 1-inch thick</p> <p>Cab insulation</p> <p>Top . . . . . sprayed composition</p>	<p>Back . . . . . sprayed composition</p> <p>Floorboard . . . . . sponge rubber matting</p> <p>Air conditioner</p> <p>Capacity . . . . . 1-1/2 tons (334 cfm)</p> <p>Controls . . . . . located inside of cab</p> <p>Heater</p> <p>Capacity . . . . . 12,000 B.T.U.</p> <p>Controls . . . . . located inside of cab</p> <p>Ventilating fan</p> <p>Capacity . . . . . 400 cfm.</p> <p>Controls . . . . . located inside of cab</p>
---	---

*(Specifications and design subject to change without notice.)*

## Operator's cab

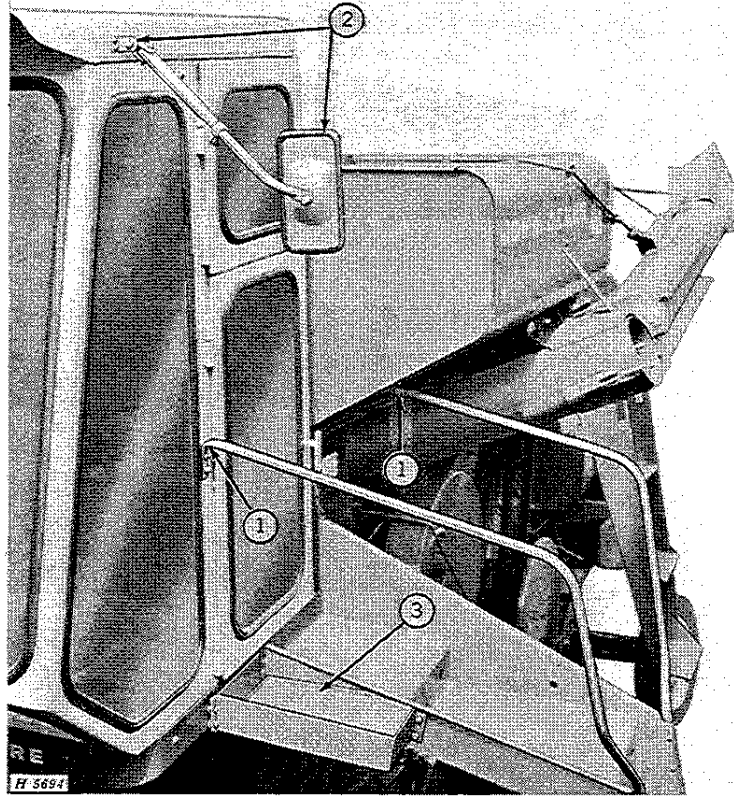

45 Combine illustrated

### Assembly

1. Bolt new front ladder hand rail to ladder and cab with hardware furnished.
2. Attach mirrors to brackets on cab with hardware furnished.
3. (45 combines only) Bolt auxiliary step to operator's platform and ladder with two 5/16-inch machine bolts furnished.

*NOTE: On combines equipped with rigid ladder it will be necessary to drill two 11/32-inch holes in ladder using step as template.*

### Operation

The operator's cab has a dutch door on the left-hand side which may be opened when the ventilating fan is used.

On the right-hand side of the cab there is one door which also may be opened when the ventilating fan is being used.

Sliding glass windows in the rear of cab are for access to the grain tank.

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)