



JOHN DEERE 6600, SIDEHILL 6600 AND 7700 COMBINES



JOHN DEERE

OPERATORS MANUAL JOHN DEERE 6600, SIDEHILL 6600 AND 7700 COMBINES

OMH92873 J5 English

JOHN DEERE HARVESTER WORKS
OMH92873 J5


LITHO IN THE U.S.A.
ENGLISH





To the Purchaser

This new combine was carefully designed and manufactured to give years of dependable service. To keep it running efficiently, read this operator's manual, which is divided into sections, for easy location of information. The Table of Contents explains where each section is located and the alphabetical index gives detailed listings.

 This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.


Your Operator's manual contains SI Metric equivalents which follow immediately after the U.S. customary units of measure.

This operator's manual covers the feeder house and separator areas of the combine. For header information, see the separate operator's manuals furnished with that equipment.

"Right-Hand" and "left-hand" sides are determined by facing in the direction the combine will travel when in use. The radiator end of the engine is referred to as the "front," the flywheel end as the "rear."

Record your combine serial numbers in the space provided on page 208. Your dealer needs this information to give you prompt, efficient service when you order parts or attachments. If your combine requires replacement parts, go to your John Deere dealer where you can obtain Genuine John Deere parts—accept no substitutes.

The warranty on this combine appears on your copy of the purchase order which you received from your dealer when you purchased the combine.

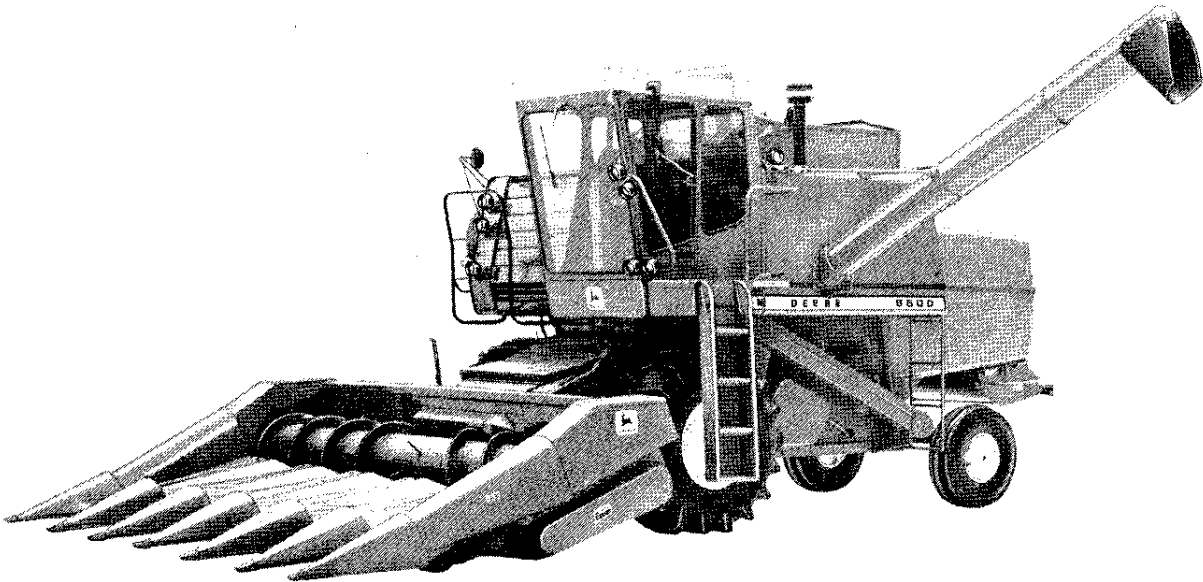

H26307

John Deere 6600 Combine with 653 Row-Crop Head



Contents

	Page
Safety suggestions	1
Controls and instruments	2, 3
Operation	4-51
Fuels and lubricants	52, 53
Lubrication and periodic service	54-71
Service	72-168
Trouble shooting	169-196
Storage	197-200
Attachments	201-205
Specifications	206-213
Index	214-216

Safety Suggestions

⚠ Safety of the operator was one of the prime considerations in the minds of John Deere engineers when this combine was designed. Shielding, simple adjustments, and other safety features were built into the combine wherever possible.

All machinery should be operated only by responsible persons who have been properly instructed and delegated to do so.

No riders should be allowed on the operator's platform when combine is in operation.

Be sure shields and guards are in place and in good condition before starting in the field.

Escaping fluid under pressure can have sufficient force to penetrate the skin, causing serious personal injury. Before disconnecting lines be sure to relieve all pressure. Before applying pressure to system, be sure all connections are tight and that lines, pipes and hoses are not damaged. Fluid escaping from a very small hole can be almost invisible. Use a piece of cardboard or wood, rather than hands, to search for suspected leaks.

Clothing worn by combine operator should be fairly tight and belted. Loose jackets, shirts, or sleeves should never be worn because of the danger of getting into moving parts.

Make certain everyone is clear of the combine before starting so they cannot be struck by moving parts or caught in a drive belt or chain.

Never clean, lubricate, or adjust the combine when it is running.

Be especially careful when operating on hillsides because combine may tip sideways if it strikes a hole, ditch, or other irregularity.

Never attempt to clear obstructions off the header unless the combine is stopped and the engine shut off.

Keep the operator's platform clean. Do not use it as a place to carry loose tools, lunch boxes, etc.

Maintain a fire extinguisher in an easily accessible location and be familiar with its' correct use.

Before leaving combine unattended, lower the header to the ground or support it with either the hydraulic cylinder safety stop or with blocks.



Controls and Instruments

Before attempting to operate your new combine, become familiar with the location and purpose of all controls and instruments. Study these pages carefully, regardless of your previous combine experience.


Control levers and knobs have different colors and shapes to help you quickly locate them while operating the combine. Colors on controls indicate:

RED—Combine movement controls (Throttle, Gearshift Lever, Selective Ground Speed Control)

YELLOW—Auxiliary Power Controls (Separator Control Lever, Cylinder Speed Control Ratchet, Header Electromagnetic Clutch Switch)


BLACK—Combine Function Controls Header Height Control, Hydraulic Lift Reel Control, etc.)

OPERATOR'S PLATFORM

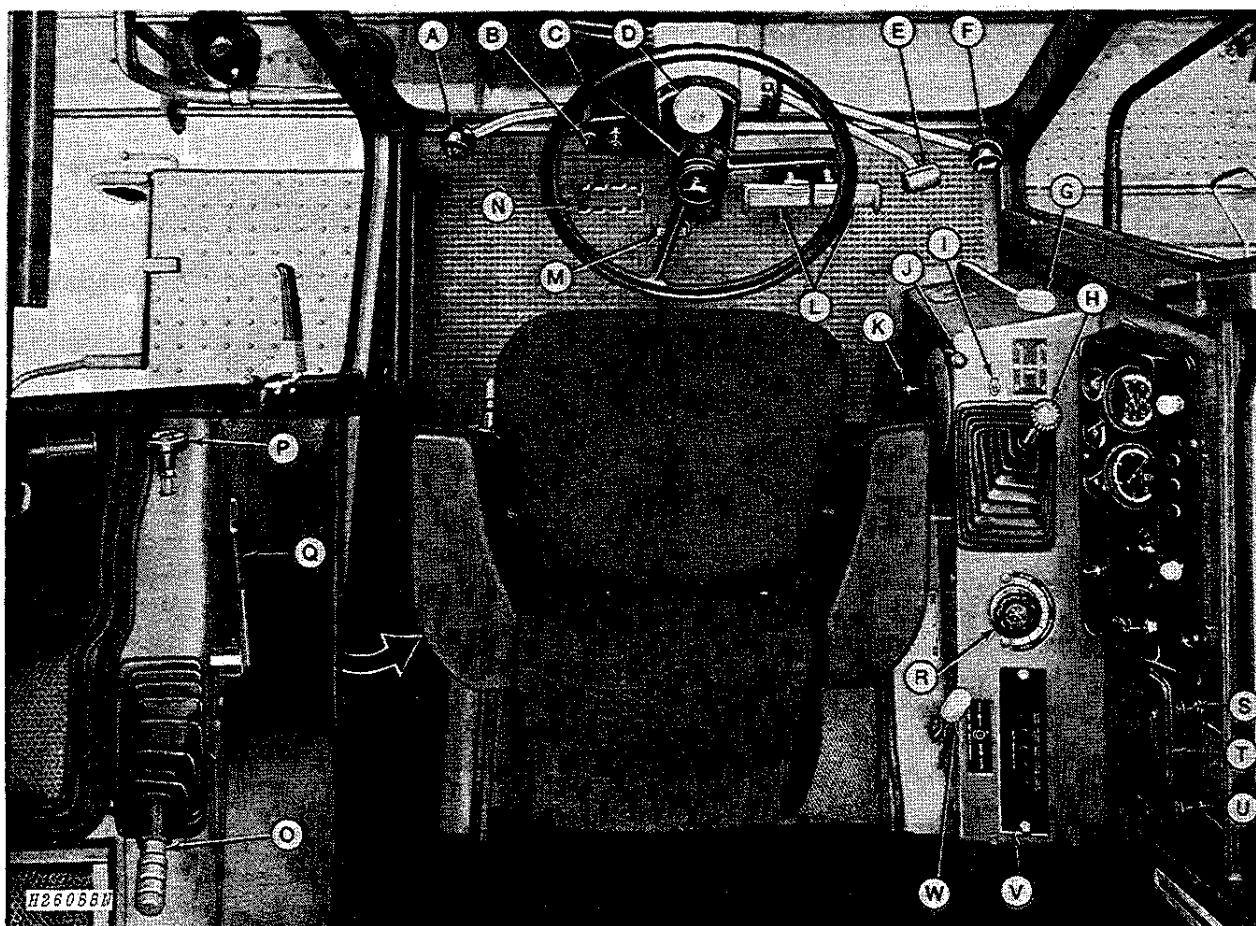


	Page		Page		Page
A—Hydraulic Lift Reel or Variable Speed Feeder House Control	17	G—Separator Control	18	Q—Grain Tank Unloading Auger Lever	19
B—Directional Turn Signals	16	H—Gearshift	12	R—Hydrostatic Drive Reel or Hydrostatic Drive Belt Pickup Control	17
C—Steering Wheel	—	I—Power Rear Wheel Drive (Optional)	50	S—Cigarette Lighter	—
D—Low Shaft Speed Monitor (Optional)	39	J—Throttle	4	T—Ash Tray	—
E—Hydrostatic Drive Speed Range Control (Optional) or Selective Ground Speed Control	12	K—Concave Opening Control	18	U—Fuel Shut-Off (404 Engine)	4
F—Header Lift Control	17	L—Brake Pedals	14	V—Low Shaft Speed Monitor (Optional)	39
		M—Steering Column Pedal	11	W—Cylinder Speed Control	18
		N—Clutch Pedal (Posi-Torq)	14		
		O—Parking Brake	13		
		P—Unloading Auger Hydraulic Swing Control	19		

Instrument Panel Controls and Instruments

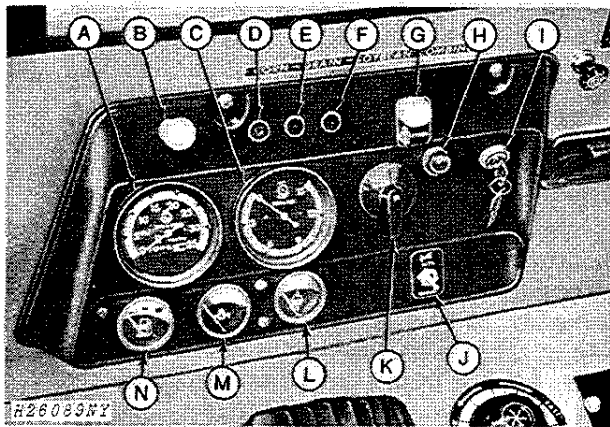

	Page
A—Engine Tach-Hour Meter	5
B—Header Electromagnetic Clutch Switch (Optional)	17
C—Cylinder Speed Tachometer	30
D—Parking Brake Indicator Light	13
E—Alternator Indicator Light	5
F—Transmission Oil Pressure Indicator Light	13
G—Cold Weather Starting Aid Button	7
H—Horn Button	--
I—Ignition Switch	4
J—Automatic Header Height Control Switch (Optional)	28
K—Light Switch	16
L—Coolant Temperature Gauge	5
M—Engine Oil Pressure Gauge	5
N—Fuel Gauge	5

Operator's Cab Controls

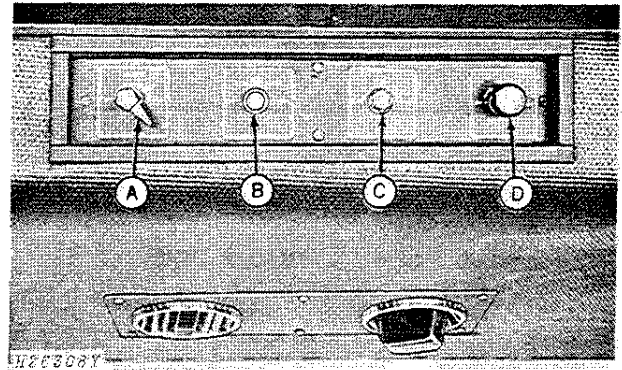

Page

A—Heater Temperature Control Switch	9
B—Pressurizer Fans Switch	9
C—Air Conditioner Temperature Control Switch	9
D—Windshield Wiper Switch	--

The operator's cab controls are located in the cab headliner. The radio is located in the rear right-hand corner of the cab.

NOTE: For controls not located on the operator's platform (fan speed control, chaffer and sieve opening controls) see page 19.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com