

JOHN DEERE 6602 COMBINES

 


OPERATORS MANUAL JOHN DEERE 6602 COMBINES

OMH92874 A6 English

OMH92874 A6


LITHO IN THE U.S.A.
ENGLISH





To the Purchaser

This new combine was carefully designed and manufactured to give years of dependable service. To keep it running efficiently, read the instructions in this operator's manual. Each section is clearly identified so you can easily find the information you need—whether it is operation, lubrication, or service. Read the Table of Contents to learn where each section is located. Use the alphabetical index for fast reference.

 This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

In addition to the equipment furnished with your combine, attachments are available to help you do a better job in special crop conditions. These are described in the attachments section of this manual and can be purchased from your John Deere dealer.

"Right-hand" and "left-hand" sides are determined by facing in the direction the combine will travel when in use. The radiator end of the engine is referred to as the "front," the flywheel end as the "rear."

Record your combine serial numbers in the space provided on page 175. Your dealer needs this information to give you prompt, efficient service when you order parts or attachments. If your combine requires replacement parts, go to your John Deere dealer where you can obtain genuine John Deere parts—accept no substitutes.

The warranty on this combine appears on your copy of the purchase order which you should have received from your dealer when you purchased the combine.





Contents

| | Page |
|--|---------|
| Safety suggestions | 1 |
| Controls and instruments | 2, 3 |
| Operation | 4-41 |
| Fuels and lubricants | 44-45 |
| Lubrication and periodic service | 46-61 |
| Service | 62-138 |
| Trouble shooting | 139-163 |
| Storage | 164-167 |
| Attachments | 168-170 |
| Specifications | 171-175 |
| Index | 176-180 |

Safety Suggestions

! Safety of the operator was one of the prime considerations in the minds of John Deere engineers when this combine was designed. Shielding, simple adjustments, and other safety features were built into the combine wherever possible.

All machinery should be operated only by responsible persons who have been properly instructed and delegated to do so.

No riders should be allowed on the operator's platform when combine is in operation.

Be certain shields and guards are in place and in good condition before starting in the field.

Escaping fluid under pressure can have sufficient force to penetrate the skin, causing serious personal injury. Before disconnecting lines be certain to relieve all pressure. Before applying pressure to system, be certain all connections are tight and that lines, pipes and hoses are not damaged. Fluid escaping from a very small hole can be almost invisible. Use a piece of cardboard or wood, rather than hands, to search for suspected leaks.

Clothing worn by combine operator should be fairly tight and belted. Loose jackets, shirts, or sleeves should never be worn because of the danger of getting into moving parts.

Make certain everyone is clear of the combine before starting so they cannot be struck by moving parts or caught in a drive belt or chain.

Never clean, lubricate, or adjust the combine when it is running.

Be especially careful when operating on hillsides because combine may tip sideways if it strikes a hole, ditch, or other irregularity.

Never attempt to clear obstructions off the header unless the combine is stopped and the engine shut off.

Keep the operator's platform clean. Do not use it as a place to carry loose tools, lunch boxes, etc.

Maintain a fire extinguisher in an easily accessible location and be familiar with its correct use.

Before leaving combine unattended, lower the header to the ground or support it with either the hydraulic cylinder safety stop or with blocks.



Controls and Instruments

Before attempting to operate your new combine, become familiar with the location and purpose of all controls and instruments. Study these pages carefully, regardless of your previous combine experience.


Control levers and knobs have different colors and shapes to help you quickly locate them while operating the combine. Colors on controls indicate:

RED—Combine movement controls (Throttle, Gearshift Lever, Selective Ground Speed Control)

YELLOW—Auxiliary Power Controls (Separator Control Lever, Cylinder Speed Control Ratchet, Header Electromagnetic Clutch Switch)


BLACK—Combine Function Controls (Header Height Control, Hydraulic Lift Reel Control, etc.)

OPERATOR'S PLATFORM

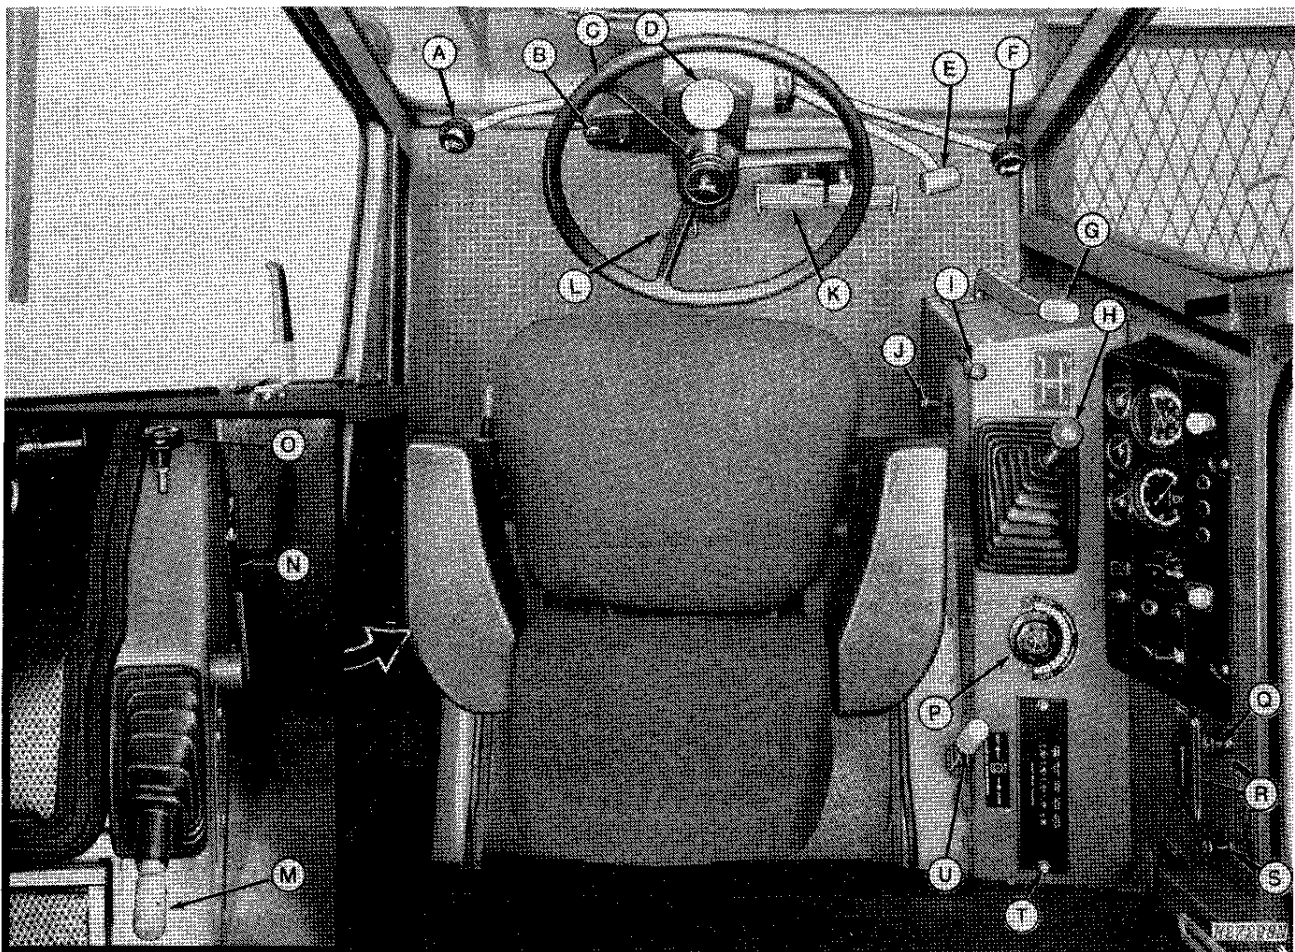


| | Page | | Page | | Page |
|---|------|---|------|------------------------------------|------|
| A—Hydraulic Lift Reel Control | 16 | I—Throttle | 4 | N—Grain Tank Unloading Auger Lever | 18 |
| B—Directional Turn Signals | 15 | J—Concave Opening Control | 17 | P—Hydrostatic Drive Reel Control | 16 |
| C—Steering Wheel | — | K—Brake Pedals | 13 | Q—Cigarette Lighter | — |
| D—Low Shaft Speed Monitor (Opt.) | 35 | L—Steering Column Pedal | 11 | R—Ash Tray | — |
| E—Hydrostatic Drive Speed Range Control Lever | 12 | M—Parking Brake | 12 | S—Fuel Shut-Off | 4 |
| F—Header Lift Control | 16 | O—Unloading Auger Hydraulic Swing Control | 18 | T—Low Shaft Speed Monitor (Opt.) | 35 |
| G—Separator Control | 17 | | | U—Cylinder Speed Control | 17 |
| H—Gearshift | 12 | | | | |

Instrument Panel Controls and Instruments

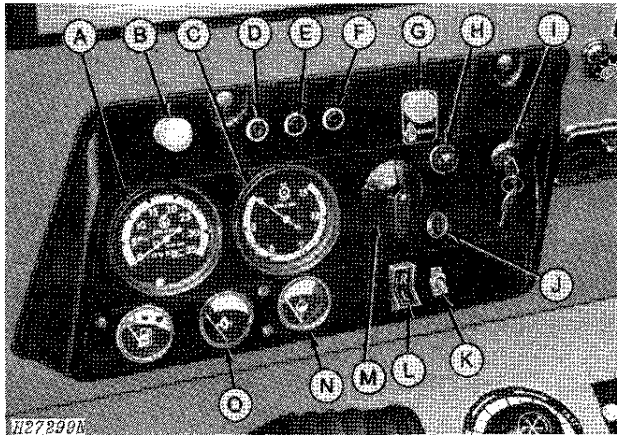

| | Page |
|---|------|
| A—Engine Tach-Hour Meter | 5 |
| B—Header Electromagnetic Clutch Switch | 16 |
| C—Cylinder Speed Tachometer | 27 |
| D—Parking Brake Indicator Light | 12 |
| E—Alternator Indicator Light | 4 |
| F—Transmission Oil Pressure Indicator Light | 12 |
| G—Cold Weather Starting Aid Button | 7 |
| H—Horn Button | -- |
| I—Ignition Switch | 4 |
| J—Limit Leveling Warning Light | 43 |
| K—Leveling Control Cut Out Switch | 43 |
| L—Manual Leveling Control Switch | 43 |
| M—Light Switch | 15 |
| N—Coolant Temperature Gauge | 4 |
| O—Engine Oil Pressure Gauge | 5 |
| P—Fuel Gauge | 5 |

Operator's Cab Controls

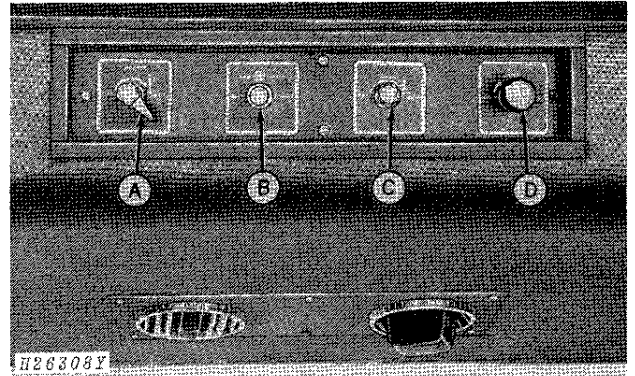

Page

| | |
|--|----|
| A—Heater Temperature Control Switch | 9 |
| B—Pressurizer Fans Switch | 9 |
| C—Air Conditioner Temperature Control Switch | 9 |
| D—Windshield Wiper Switch | -- |

The operator's cab controls are located in the cab headliner. The radio is located in the rear right-hand corner of the cab.

NOTE: For controls not located on the operator's platform (fan speed control, chaffer and sieve opening controls) see page 18.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com