

2350 and 2550 Tractors



OPERATORS MANUAL 2350 and 2550 Tractors

OML39648 Issue J5 English

John Deere Werke Mannheim
OML39648 Issue J5

LITHO IN U.S.A.
ENGLISH





INSPECTIONS

We appreciate the confidence you have shown in John Deere and your John Deere dealer for the purchase of this equipment.

We want you to have the best performance from your new machine. To accomplish this, your dealer will perform a Predelivery Inspection and will familiarize you with the proper and safe operation of this machine.

After the machine has operated the first 100 hours, you should contact your dealer and arrange an appropriate date at which the After-Sale Inspection will be performed. It will be performed most effectively in the workshop of your dealer.

IMPORTANT WARRANTY INFORMATION

The warranty on this tractor appears on your copy of the purchase order which you should have received from your dealer when making your purchase. This warranty provides you the assurance that JOHN DEERE will back its products where defects appear within the warranty period. In some circumstances, JOHN DEERE also provides field improvements, often without charge to the customer, even if the product is out of warranty.

Warranty and field improvements are a part of John Deere's product support program for customers who operate and maintain their equipment as described in this manual. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery beyond specifications or otherwise over-powering machines will result in such action.

The tire manufacturer's warranty supplied with your machine may not apply outside the U.S.A. and Canada.

©Deere & Co., European Office
D-6800 Mannheim

All information, illustrations, and specifications contained in this operator's manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

SAFETY



CAUTION: This safety alert symbol indicates important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

IMPORTANT: This machine is designed and manufactured according to JOHN DEERE specifications. To avoid accidents and to assure optimum performance the machine must not be modified or altered in ways not approved by JOHN DEERE, nor must it be used in conditions or for purposes it is not designed for.

To assure safe operation of this machine, read the Safety Rules on the first pages of this manual.

MEASUREMENTS

Your operator's manual contains the international standardized SI metric measurement system.


DIRECTION

Right-hand and left-hand sides of this machine are determined by facing in the direction of forward travel.


PRODUCT IDENTIFICATION NUMBERS

Record the identification number(s) in the spaces provided following Specifications. Accurately record all of the characters because (should the product be stolen) tracing is sometimes through a computer match of letters and numbers. Also, your dealer needs this information when ordering parts. If you carry your operators manual on the machine for reference, be sure to also record the identification number(s) on a separate sheet of paper in a secure place not on the machine so you will still have a record in case the machine is stolen.

Identification Views

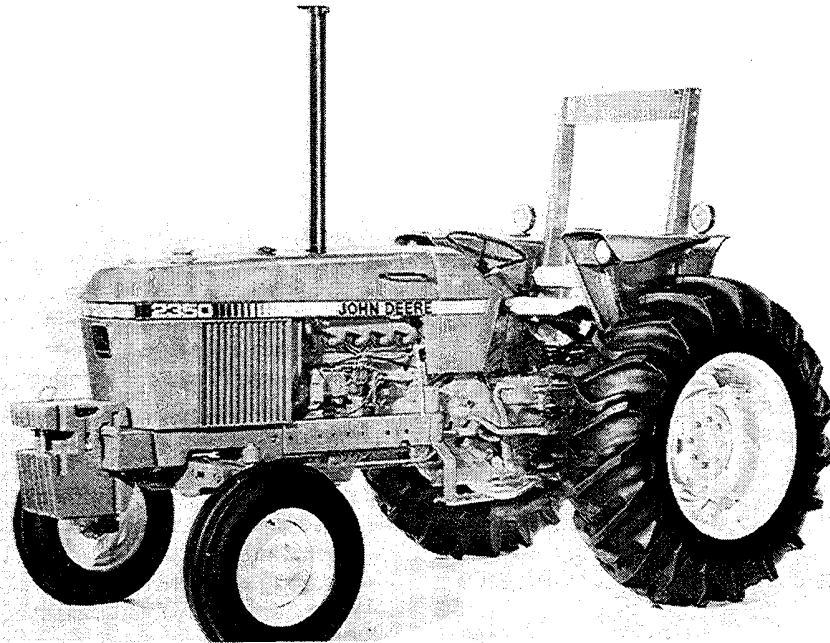

L100 001A

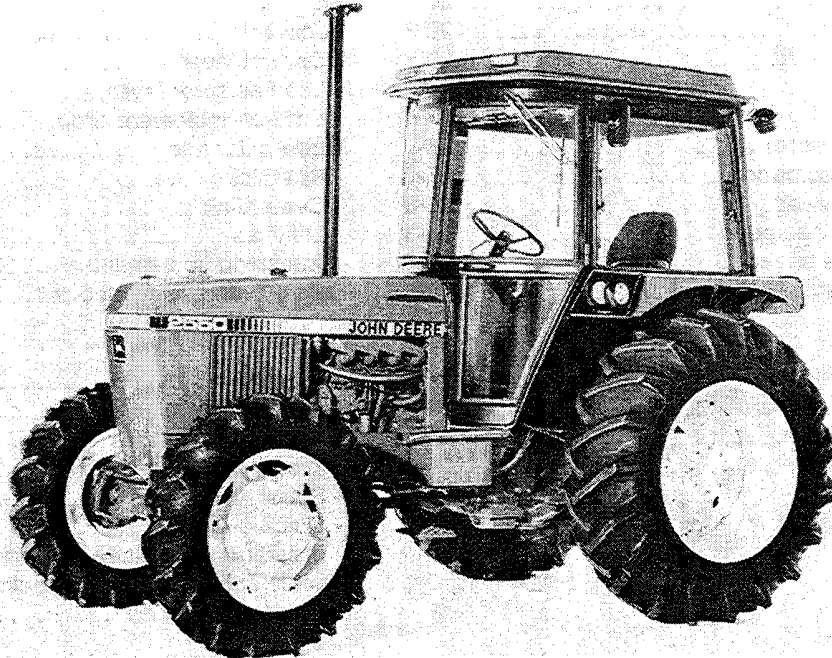

L104 642

L100001A,L104642-2350ALE-081183

Contents

Index	00-	Operator's Station	30-
– Index	00-5	– Lighting system	30-1
Safety	05-	– Seats	30-3
– Safety	05-1	– Roll guard	30-5
Controls and Instruments	10-	– Seat belt	30-5
– Controls	10-1	– Windshield wipers	30-6
– Control lights	10-2	– Fan, air louvers, heater	30-6
– Instruments	10-3	– Air conditioning system	30-6
Break-In Period	15-	– Steering wheel adjustment	30-7
– After the first 4 and 8 hours	15-1	Treads, Tires, Ballast	35-
– After the first 50 hours	15-1	Wheel treads	35-1
– Within the first 100 hours	15-2	– Adjusting front wheel tread	35-2
– After the first 100 hours	15-2	– Checking front wheel toe-in	35-3
Operating the Engine	20-	– Adjusting front wheel toe-in	35-3
– Prestarting check	20-1	– Rear wheel tread adjustment	35-4
– Starting the engine	20-2	Tires	35-10
– Thermostart aid	20-3	– Tire pressures	35-10
– Ether starting aid	20-4	– Servicing tires	35-10
– Starting with a booster battery	20-6	Ballast	35-11
– Towing the tractor to start	20-7	– Measuring rear wheel slip	35-12
– Towing the tractor	20-7	– Rear wheel weights	35-12
– Parking the tractor	20-8	– Installing rear wheel weights	35-13
– Stopping the engine	20-8	– Filling tires with liquid ballast	35-14
Operating the Tractor	25-	– Front weights	35-15
Reduce fuel consumption	25-1	Rockshaft, Three-Point Hitch	40-
Ground travel speeds	25-3	Rockshaft	40-1
– At desired engine speed	25-3	– Control lever	40-1
– At rated engine speed	25-4	– Load selector lever	40-3
Operating the tractor	25-6	– Rate-of-implementation drop	40-4
– Shifting gears	25-6	Three-point hitch	40-5
– Hi-Lo shift unit	25-7	– Draft links	40-5
– Creeper transmission	25-7	– Center link	40-7
– Reverser transmission	25-8	– Lift links	40-7
– Differential lock	25-8	– Attaching implements	40-8
– Foot brakes	25-9	– Positioning sway blocks	40-9
		Accessories	45-
		Selective control valves	45-1
		– Poppet type valves	45-1
		– Breakaway couplers	45-7
		– Spool type valves	45-10
		– Quick couplers	45-10
		– Maximum permissible oil withdrawal	45-11
		Double acting remote hydraulic cylinder	45-12
		Swinging drawbar	45-13

Contents

Power Take-Off	50-	Service-Clutch	85-
– PTO guard	50-1	– Adjusting clutch	85-1
– Operation of PTO (continuous-running)	50-2	– Adding fluid to clutch reservoir	85-2
– Operation of independent PTO	50-2	– Clutch throw-out bearing	85-2
– Attaching PTO driven equipment	50-3		
 Front-Wheel Drive	55-	Service-Engine	90-
– Operation	55-1	– Engine oil	90-1
– Front wheel steering angle	55-2	– Engine filter	90-2
– Adjusting front wheel tread	55-3	– Alternator V-belt	90-2
– Tires	55-5	– Engine speeds	90-2
 Fuel, Lubricants, Coolant	60-	Service-Cooling System	95-
Fuel	60-1	– Checking coolant level	95-1
– Fuel specifications	60-1	– Replacing coolant	95-2
– Fuel storage	60-1		
Lubricants	60-2	Service-Axles and Wheels	100-
– Engine oil	60-2	– Lubricating front axle	100-1
– Fluid for hydraulically operated clutch	60-2	– Lubricating drive housings and shafts	100-2
– Transmission/hydraulic oil	60-3	– Lubricating rear axles	100-2
– Transmission oil for MFWD front axle	60-4	– Checking front axle oil level	100-3
– Multipurpose grease	60-4	– Changing front axle oil	100-4
Engine coolant	60-5		
 Removing Access Covers	65-	Service-Fuel System	105-
– Hood	65-1	– Checking fuel filter	105-1
– Grille screens	65-1	– Replacing fuel filter	105-2
– Battery box covers	65-1	– Draining water trap	105-2
		– Bleeding fuel system	105-3
 Lubrication and Periodic Service	70-	Service-Transmission/Hydraulic	110-
– Service intervals	70-1	– Checking oil level	110-1
– Time table	70-2	– Replacing filter element	110-1
		– Changing oil	110-2
 Service-Air Intake System	75-	– Replacing steering filter	110-2
– Primary air filter	75-1		
– Secondary air filter	75-2	Service-Miscellaneous	115-
– Dust unloading valve	75-3	– Operator's seat	115-1
– Air intake hoses	75-3	– 3-Point hitch	115-1
		– Compressor V-belt	115-1
 Service-Brakes	80-	– SGB-air filter	115-2
– Bleeding brakes	80-1		
– Adjusting hand brake	80-1		

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com