

# JOHN DEERE 2750 TRACTOR



JOHN DEERE

## OPERATORS MANUAL JOHN DEERE 2750 TRACTOR

OML55482 L4 English

JOHN DEERE WERKE MANNHEIM  
OML55482 L4

LITHO IN THE U.S.A.  
ENGLISH





Read this manual carefully to learn how to operate and service your machine correctly.

## SAFETY



**CAUTION: This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury, and carefully read the message that follows.**

## DIRECTIONS

Left, right, front and rear in this manual are seen from the operator's seat facing the direction of forward travel.

## MEASUREMENTS

This machine is of metric design.

For your convenience, most specifications are given in metric measurement with the customary U.S. measurement following.

Some specifications cannot be converted. These appear in metric only.

Most hardware is metric. Specified metric hardware must be used for replacement.



**CAUTION: Use only metric tools. Other tools may not fit properly. They may slip and cause injury.**

## WARRANTY

The warranty on this machine appears on your copy of the purchase order which you should have received from your dealer when making your purchase. This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty.

Warranty and field improvements are a part of John Deere's product support program for customers who operate and maintain their equipment as described in this manual. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.


## MACHINE NUMBERS

Write your product identification number (PIN) and serial numbers on the pages provided at the end of this manual, and provide this information to your dealer when ordering spare parts.

# Identification Views



L106 066

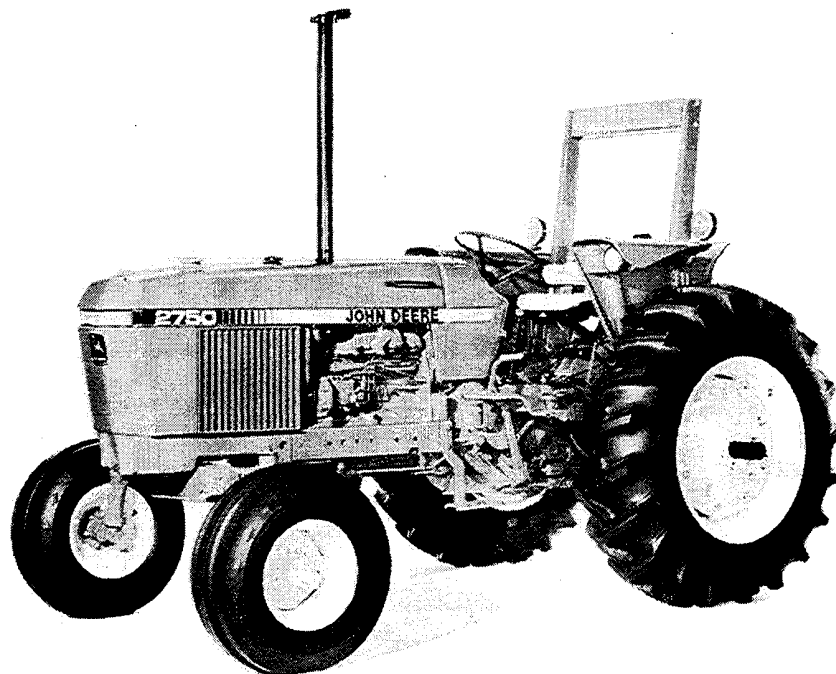

L100 071

L100071,L106066-2750ALE-070284

# Contents

<b>Safety</b> .....	<b>05-</b>	<b>Operator's Station</b> .....	<b>30-</b>
- Safety .....	05-1	- Lighting system .....	30-1
<b>Crime Prevention Tips</b> .....	<b>05-</b>	- Seats .....	30-3
- Crime prevention tips .....	05-9	- Roll guard .....	30-5
<b>Controls and Instruments</b> .....	<b>10-</b>	- Seat belt .....	30-5
- Controls .....	10-1	- Windshield wipers .....	30-6
- Control lights .....	10-2	- Fan, air louvers, heater .....	30-6
- Instruments .....	10-3	- Air conditioning system .....	30-6
<b>Break-In Period</b> .....	<b>15-</b>	- Steering wheel adjustment .....	30-7
- After the first 4 and 8 hours .....	15-1	<b>Treads, Tires, Ballast</b> .....	<b>35-</b>
- After the first 50 hours .....	15-1	Wheel treads .....	35-1
- After the first 100 hours .....	15-2	- Adjusting front wheel tread .....	35-2
- Within the first 100 hours .....	15-2	- Checking front wheel toe-in .....	35-3
<b>Operating the Engine</b> .....	<b>20-</b>	- Adjusting front wheel toe-in .....	35-3
- Prestarting check .....	20-1	- Rear wheel tread adjustment .....	35-4
- Starting the engine .....	20-2	Tires .....	35-8
- Thermostart aid .....	20-3	- Tire pressures .....	35-8
- Ether starting aid .....	20-4	- Servicing tires .....	35-8
- Starting with a booster battery .....	20-6	Ballast .....	35-9
- Towing the tractor to start .....	20-7	- Measuring rear wheel slip .....	35-10
- Towing the tractor .....	20-7	- Rear wheel weights .....	35-10
- Parking the tractor .....	20-8	- Installing rear wheel weights .....	35-11
- Stopping the engine .....	20-8	- Filling tires with liquid ballast .....	35-12
<b>Operating the Tractor</b> .....	<b>25-</b>	- Front weights .....	35-13
Reduce fuel consumption .....	25-1	<b>Rockshaft, Three-Point Hitch</b> .....	<b>40-</b>
Ground travel speeds .....	25-3	Rockshaft .....	40-1
- At desired engine speed .....	25-3	- Control lever .....	40-1
- At rated engine speed .....	25-4	- Load selector lever .....	40-3
Operating the tractor .....	25-5	- Rate-of-implement drop .....	40-4
- Shifting gears .....	25-5	Three-point hitch .....	40-5
- Hi-Lo shift unit .....	25-6	- Draft links .....	40-5
- Creeper transmission .....	25-6	- Center link .....	40-7
- Differential lock .....	25-7	- Lift links .....	40-7
- Foot brakes .....	25-7	- Attaching implements .....	40-8
		- Positioning sway blocks .....	40-9
		<b>Accessories</b> .....	<b>45-</b>
		Selective control valves .....	45-1
		- Tractors without SOUND-GARD body .....	45-1
		- Tractors with SOUND-GARD body .....	45-5
		- Breakaway couplers .....	45-7
		- Maximum permissible oil withdrawal .....	45-9
		Double acting remote hydraulic cylinder .....	45-10
		Swinging drawbar .....	45-11

*Contents*

<b>Power Take-Off</b> .....	<b>50-</b>	<b>Service-Clutch</b> .....	<b>85-</b>
– PTO guard .....	50-1	– Adjusting clutch .....	85-1
– Operation of PTO .....	50-2	– Adding fluid to clutch reservoir .....	85-1
– Attaching PTO driven equipment .....	50-3	– Lubricating clutch throw-out bearing .....	85-2
<b>Front-Wheel Drive</b> .....	<b>55-</b>	<b>Service-Engine</b> .....	<b>90-</b>
– Operation .....	55-1	– Engine oil .....	90-1
– Front wheel steering angle .....	55-2	– Engine filter .....	90-2
– Adjusting front wheel tread .....	55-3	– Alternator V-belt .....	90-2
– Tires .....	55-5	– Engine speeds .....	90-2
<b>Fuel, Lubricants, Coolant</b> .....	<b>60-</b>	<b>Service-Cooling System</b> .....	<b>95-</b>
Fuel .....	60-1	– Checking coolant level .....	95-1
– Fuel specifications .....	60-1	– Replacing coolant .....	95-2
– Fuel storage .....	60-1		
Lubricants .....	60-2	<b>Service-Axles and Wheels</b> .....	<b>100-</b>
– Fluid for hydraulically operated clutch .....	60-2	– Lubricating front axle .....	100-1
– Engine oil .....	60-2	– Lubricating drive housings and shafts .....	100-2
– Transmission/hydraulic oil .....	60-3	– Lubricating rear axles .....	100-2
– Transmission oil for MFWD front axle .....	60-3	– Checking front axle oil level .....	100-3
– Multipurpose grease .....	60-4	– Changing front axle oil .....	100-4
Engine coolant .....	60-4		
<b>Removing Access Covers</b> .....	<b>65-</b>	<b>Service-Fuel System</b> .....	<b>105-</b>
– Hood .....	65-1	– Checking fuel filter .....	105-1
– Grille screens .....	65-1	– Replacing fuel filter .....	105-2
– Battery box covers .....	65-1	– Draining water trap .....	105-2
		– Bleeding fuel system .....	105-3
<b>Lubrication and Periodic Service</b> .....	<b>70-</b>	<b>Service-Transmission/Hydraulic</b> .....	<b>110-</b>
– Service intervals .....	70-1	– Checking oil level .....	110-1
– Time table .....	70-2	– Replacing filter element .....	110-1
		– Changing oil .....	110-2
		– Replacing steering filter .....	100-2
<b>Service-Air Intake System</b> .....	<b>75-</b>	<b>Service-Miscellaneous</b> .....	<b>115-</b>
– Primary air filter .....	75-1	– Operator's seat .....	115-1
– Secondary air filter .....	75-2	– 3-Point hitch .....	115-1
– Dust unloading valve .....	75-3	– SGB-air filter .....	115-2
– Air intake hoses .....	75-3		
<b>Service-Brakes</b> .....	<b>80-</b>		
– Bleeding brakes .....	80-1		
– Adjusting handbrake .....	80-1		

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)