



3150 Tractor



OPERATORS MANUAL 3150 Tractor

OML57483 J5 English

John Deere Werke Mannheim
OML57483 J5

LITHO IN U.S.A.
ENGLISH



Identification View



L112 004

L112004-3150ALE-200985

Contents

Safety	05-	Operator's Station	30-
– Safety	05-1	– Lighting system	30-1
Controls and Instruments	10-	– Seats	30-2
– Controls	10-1	– Roll guard	30-4
– Control lights	10-2	– Seat belt	30-4
– Instruments	10-3	– Windshield wipers	30-5
Break-In Period	15-	– Fan, air louvers, heater	30-5
– After the first 4 and 8 hours	15-1	– Air conditioning system	30-5
– After the first 50 hours	15-1	– Steering wheel adjustment	30-6
– Within the first 100 hours	15-2	Treads, Tires, Ballast	35-
– After the first 100 hours	15-2	Wheel treads	35-1
Operating the Engine	20-	– Adjusting front wheel tread	35-1
– Prestarting check	20-1	– Checking front wheel toe-in	35-2
– Starting the engine	20-2	– Adjusting front wheel toe-in	35-2
– Ether starting aid	20-3	– Rear wheel tread adjustment	35-3
– Thermostart aid	20-4	Tires	35-6
– Starting with a booster battery	20-4	– Tire pressures	35-6
– Towing the tractor to start	20-5	– Servicing tires	35-6
– Towing the tractor	20-6	– Use correct tire combinations	35-7
– Parking the tractor	20-6	Ballast	35-8
– Stopping the engine	20-7	– Measuring rear wheel slip	35-9
Operating the Tractor	25-	– Installing rear wheel weights	35-9
Reduce fuel consumption	25-1	– Filling tires with liquid ballast	35-11
Ground travel speeds	25-3	– Front weights	35-12
– At desired engine speed	25-3	Rockshaft, Three-Point Hitch	40-
– At rated engine speed	25-4	Rockshaft	40-1
Operating the tractor	25-5	– Control lever	40-1
– Shifting gears	25-5	– Load selector lever	40-2
– Hi-Lo shift unit	25-6	– Rate-of-implement drop	40-3
– Differential lock	25-6	Three-point hitch	40-4
– Foot brakes	25-7	– Draft links	40-4
– Front-wheel drive	25-7	– Center link	40-4
		– Lift links	40-5
		– Attaching implements	40-6
		– Positioning sway blocks	40-6
		Accessories	45-
		Selective control valves	45-1
		– Control lever	45-1
		– Breakaway couplers	45-3
		– Maximum permissible oil withdrawal	45-5
		Double acting remote hydraulic cylinder	45-6
		Swinging drawbar	45-7

Contents

Power Take-Off	50-	Service-Engine	80-
– PTO guard	50-1	– Engine oil	80-1
– Operation of PTO	50-2	– Engine filter	80-2
– Attaching PTO driven equipment	50-3	– Alternator V-belt	80-2
		– Engine speeds	80-2
Fuel, Lubricants, Coolant	55-	Service-Cooling System	85-
Fuel	55-1	– Checking coolant level	85-1
– Fuel specifications	55-1	– Replacing coolant	85-2
– Fuel storage	55-1		
Lubricants	55-2	Service-Axles and Wheels	90-
– Fluid for hydraulically operated clutch	55-2	– Lubricating front axle	90-1
– Engine oil	55-2	– Lubricating rear axle	90-1
– Transmission/hydraulic oil	55-3	– Checking front axle oil level	90-2
– Transmission oil for MFWD front axle	55-4	– Changing front axle oil	90-3
– Extreme pressure grease	55-4		
– Engine coolant	55-5	Service-Fuel System	95-
		– Checking fuel filter	95-1
Removing Access Covers	60-	– Replacing fuel filter	95-1
– Hood	60-1	– Bleeding fuel system	95-2
– Grille screens	60-1		
– Battery box covers	60-1	Service-Transmission/Hydraulic	100-
		– Checking oil level	100-1
Lubrication and Periodic Service	65-	– Replacing filter element	100-1
– Service intervals	65-1	– Changing oil	100-2
– Time-table	65-2		
Service-Air Intake System	70-	Service-Miscellaneous	105-
– Primary air filter	70-1	– Adding fluid to clutch reservoir	105-1
– Secondary air filter	70-2	– Operator's seat	105-1
– Dust unloading valve	70-3	– 3-Point hitch	105-1
– Air intake hoses	70-3	– Compressor V-Belt	105-1
		– SGB-air filter	105-2
Service-Brakes	75-		
– Bleeding brakes	75-1		
– Adjusting hand brake	75-2		

Contents

Service-Electrical System	110-	Troubleshooting	125-
– Batteries	110-1	– Hydraulic system	125-1
– Checking specific gravity	110-1	– Engine	125-2
– Level of electrolyte	110-2	– Electrical system	125-3
– Removing batteries	110-2		
– Starting motor	110-3	Specifications	130-
– Neutral start system	110-3	– Engine	130-1
– Alternator	110-4	– Weights	130-2
– Lamps	110-5	– Electrical system	130-3
– Circuit breaker	110-7	– Capacities	130-3
Service-Heater and Air Conditioning System .	115-	Identification Numbers	135-
– Air conditioning system	115-1	– Identification numbers	135-1
– Heater	115-2		
Tractor Storage	120-	Lubrication and Maintenance Records	140-
– Storage	120-1	– Lubrication and maintenance records	140-1
– Removing tractor from storage	120-2		
Crime Prevention Tips	120-3		
– Crime prevention tips	120-3	Index	145-
		– Index	145-1

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.
You can download the most
perfect and complete manual in
the world immediately.

Our support email:
ebooklibonline@outlook.com