

2155 TRACTOR



OPERATORS MANUAL

2155
TRACTOR

OML57718 B7 English

JOHN DEERE WERKE MANNHEIM
OML57718 B7

LITHO IN THE U.S.A.
ENGLISH





INSPECTIONS

We appreciate the confidence you have shown in John Deere and your John Deere dealer for the purchase of this equipment.

We want you to have the best performance from your new machine. To accomplish this, your dealer will perform a Predelivery Inspection and will familiarize you with the proper and safe operation of this machine.

After the machine has operated the first 100 hours, you should contact your dealer and arrange an appropriate date at which the After-Sale Inspection will be performed. It will be performed most effectively in the workshop of your dealer.

IMPORTANT WARRANTY INFORMATION

The warranty on this tractor appears on your copy of the purchase order which you should have received from your dealer when making your purchase. This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty.

Warranty and field improvements are a part of John Deere's product support program for customers who operate and maintain their equipment as described in this manual. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery beyond specifications or otherwise overpowering machines will result in such action.

The tire manufacturer's warranty supplied with your machine may not apply outside the U.S.A. and Canada.

© Deere & Co., European Office,
D-6800 Mannheim

SAFETY



CAUTION: This safety alert symbol indicates important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

IMPORTANT: This machine is designed and manufactured according to JOHN DEERE specifications. To avoid accidents and to assure optimum performance, the machine must not be modified or altered in any way not approved by JOHN DEERE, nor must it be used under any conditions or for any purpose for which it has not been designed.

To assure safe operation of this machine, read the Safety Rules on the first pages of this manual.

MEASUREMENTS

Your operator's manual contains the international standardized SI metric measurement system.

DIRECTION

Right-hand and left-hand sides of this machine are determined by facing in the direction of forward travel.

PRODUCT IDENTIFICATION NUMBERS

Record the identification number(s) in the spaces provided following Specifications. Accurately record all of the characters because (should the product be stolen) tracing is sometimes through a computer match of letters and numbers. Also, your dealer needs this information when ordering parts. If you carry your operators manual on the machine for reference, be sure to also record the identification number(s) on a separate sheet of paper in a secure place not on the machine so you will still have a record in case the machine is stolen.

All information, illustrations, and specifications contained in this operator's manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

Identification View



L112961

L112961-2155ALE-011286

Contents

Safety	05-	Operator's Station	30-
– Safety	05-1	– Lighting system	30-1
		– Roll guard	30-2
		– Seats	30-3
Controls and Instruments	10-		
– Controls	10-1	Treads, Tires, Ballast	35-
– Instrument cluster	10-2	Wheel treads	35-1
		– Adjusting front wheel tread	35-2
Break-In Period	15-	– Checking front wheel toe-in	35-2
– After the first 4 and 8 hours	15-1	– Adjusting front wheel toe-in	35-3
– After the first 50 hours	15-2	– Rear wheel tread adjustment	35-4
– After the first 100 hours	15-3	Tires	35-7
– Within the first 100 hours	15-3	– Tire pressures	35-7
		– Servicing tires	35-7
		– Use correct tire combinations	35-8
Operating the Engine	20-	Ballast	35-8
– Prestarting check	20-1	– Measuring rear wheel slip	35-9
– Starting the engine	20-2	– Rear wheel weights	35-9
– Electric starting aid	20-3	– Installing rear wheel weights	35-10
– Ether starting aid	20-4	– Filling tires with liquid ballast	35-11
– Starting with a booster battery	20-5	– Front weights	35-12
– Towing the tractor to start	20-6		
– Towing the tractor	20-6	Rockshaft, Three-Point Hitch	40-
– Parking the tractor	20-7	Rockshaft	40-1
– Stopping the engine	20-7	– Control lever	40-1
		– Load selector lever	40-2
Operating the Tractor	25-	– Rate-of-implementation drop	40-3
Reduce fuel consumption	25-1	Three-point hitch	40-4
Ground travel speeds	25-3	– Draft links	40-4
– At desired engine speed	25-3	– Center link	40-4
– At rated engine speed	25-4	– Lift links	40-5
– Shifting transmission	25-5	– Attaching implements	40-6
– Hi-Lo shift unit	25-6	– Positioning sway blocks	40-7
– Reverser transmission	25-6		
– Differential lock	25-7	Accessories	45-
– Foot brakes	25-7	Selective control valves	45-1
		– Poppet type valves	45-1
		– Breakaway couplers	45-3
		– Spool type valves	45-5
		– Quick couplers	45-5
		– Maximum permissible oil withdrawal	45-6
		Double acting remote hydraulic cylinder	45-7
		Swinging drawbar	45-8

Contents

Power Take-Off	50-	Service-Clutch	85-
– PTO guard	50-1	– Adjusting clutch	85-1
– Operation of PTO	50-2	– Lubricating clutch throw-out bearing	85-2
– Attaching PTO driven equipment	50-3		
Fuel, Lubricants, Coolant	60-	Service-Engine	90-
Fuel	60-1	– Engine oil	90-1
– Fuel specifications	60-1	– Engine filter	90-2
– Fuel storage	60-1	– Alternator V-belt	90-2
Lubricants	60-2	– Engine speeds	90-2
– Engine oil	60-2		
– Transmission/hydraulic oil	60-3	Service-Cooling System	95-
– Extreme pressure grease	60-4	– Checking coolant level	95-1
– Engine coolant	60-5	– Replacing coolant	95-2
Removing Access Covers	65-	Service-Axles and Wheels	100-
– Hood	65-1	– Lubricating front axle	100-1
– Grille screens	65-1	– Lubricating rear axles	100-1
– Battery box covers	65-1		
		Service-Fuel System	105-
Lubrication and Periodic Service	70-	– Checking fuel filter	105-1
– Service intervals	70-1	– Replacing fuel filter	105-2
– Time-table	70-2	– Bleeding fuel system	105-3
Service-Air Intake System	75-	Service-Transmission/Hydraulics	110-
– Primary air filter	75-1	– Checking oil level	110-1
– Secondary air filter	75-3	– Replacing filter element	110-2
– Dust unloading valve	75-4	– Changing oil	110-3
– Air intake hoses	75-4		
		Service-Miscellaneous	115-
Service-Brakes	80-	– Operator's seat	115-1
– Bleeding brakes	80-1	– 3-Point hitch	115-1
– Adjusting hand brake	80-1		

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com