

# 2955 TRACTOR (740000- )



 
JOHN DEERE

## OPERATORS MANUAL 2955 TRACTOR (740000- )

OML64487 G1 English

**JOHN DEERE WERKE MANNHEIM**  
**OML64487 G1**  
**(Mark old manual OML57755 L0 for**  
**machines up to Serial No. above.)**

LITHO IN THE U.S.A.  
ENGLISH



# Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts.

File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S.



L115176

L115176  
-UN-

LX,OIFC 001318-19-01JUL81

# Contents

	Page		Page
<b>Safety</b> .....	05-1	Windshield wipers .....	35-6
<b>Safety Signs</b> .....	10-1	Fan, air louvers, heater .....	35-7
<b>Controls and Instruments</b>		Air conditioning system .....	35-7
Controls .....	15-1	Steering wheels adjustment .....	35-8
Control Lights .....	15-3	<b>Treads, Tires, Ballast</b>	
Instruments .....	15-4	Front wheel treads .....	40-1
<b>Break-In Period</b>		Front wheel toe-in .....	40-3
After the first 4 and 8 hours .....	20-1	Rear wheel tread .....	40-4
After the first 50 hours .....	20-1	Tires .....	40-8
Within the first 100 hours .....	20-2	Ballast .....	40-9
After the first 100 hours .....	20-2	Measuring rear wheel slip .....	40-10
<b>Operating the Engine</b>		Rear wheel weights .....	40-11
Prestarting check .....	25-1	Filling tires with liquid ballast .....	40-13
Starting the engine .....	25-2	Installing front weights .....	40-14
Electric starting aid .....	25-3	<b>Rockshaft and 3-Point Hitch</b>	
Starting with a booster battery .....	25-3	Control lever .....	45-1
Engine coolant heater .....	25-4	Load selector lever .....	45-3
Towing the tractor to start .....	25-4	Rate-of-implement-drop .....	45-4
Towing the tractor .....	25-5	Three-point hitch .....	45-5
Parking the tractor .....	25-5	Draft links .....	45-5
Stopping the engine .....	25-5	Center link .....	45-6
<b>Operating the Tractor</b>		Lift links .....	45-7
Reduce fuel consumption .....	30-1	Attaching implements .....	45-9
Ground travel speeds .....	30-3	Sway blocks .....	45-10
Shifting transmission .....	30-5	<b>Accessories</b>	
Shifting Hi-Lo unit .....	30-6	Selective control valves .....	50-1
Engaging Creeper Transmission .....	30-6	Poppet type valves .....	50-1
Differential lock .....	30-7	Breakaway couplers .....	50-6
Foot brakes .....	30-8	Spool type valves .....	50-8
<b>Operator's Station</b>		Quick couplers .....	50-8
Lighting system .....	35-1	Maximum permissible oil withdrawal .....	50-9
Seat .....	35-4	Double acting remote hydraulic cylinder .....	50-10
Roll guard .....	35-5	Swinging drawbar .....	50-11
Seat belt .....	35-6	<b>Power Take-Off</b>	
		PTO master shield .....	55-1

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

OML64467 G1-18-05JUL91

COPYRIGHT© 1991  
DEERE & COMPANY  
European Office Mannheim  
All rights reserved  
A John Deere ILLUSTRATION® Manual  
Previous Editions  
Copyright© 1990, 1989, 1988, 1986 Deere & Company

## Contents

	<b>Page</b>		<b>Page</b>
Operating of PTO .....	55-2	Changing front axle oil .....	100-3
Attaching PTO-driven equipment .....	55-3		
<b>Front-Wheel Drive</b>			
Operation .....	60-1	<b>Service - Fuel System</b>	
Front wheel steering angle .....	60-2	Checking fuel filter .....	105-1
Adjusting front wheel tread .....	60-3	Replacing fuel filter .....	105-1
Tires .....	60-5	Bleeding fuel system .....	105-2
<b>Fuel, Lubricants and Coolant</b>			
Fuel .....	65-1	<b>Service - Transmission/Hydraulics</b>	
Engine oil .....	65-2	Checking oil level .....	110-1
Fluid for hydraulically operated clutch .....	65-3	Replacing filter element .....	110-2
Transmission/hydraulic oil .....	65-3	Changing oil .....	110-3
Transmission oil for MFWD front axle .....	65-4		
Multipurpose grease .....	65-5	<b>Service - Clutch</b>	
Engine coolant .....	65-5	Adjusting clutch .....	115-1
<b>Removing Access Covers</b>			
Grille screens .....	70-1	Adding fluid to reservoir .....	115-1
Hood .....	70-1	Lubricating clutch throw-out bearing .....	115-1
Battery box covers .....	70-2		
<b>Lubrication and Periodic Service</b>			
Service intervals .....	75-1	<b>Service - Miscellaneous</b>	
Timetables .....	75-2	Operator's seat .....	120-1
<b>Service - Air Intake System</b>			
Primary air filter .....	80-1	3-Point hitch .....	120-1
Secondary air filter .....	80-3	Compressor V-belt .....	120-1
Air intake hoses .....	80-4	SGB air filter .....	120-2
<b>Service - Brakes</b>			
Bleeding brakes .....	85-1	<b>Service - Electrical System</b>	
Adjusting hand brake .....	85-2	Batteries .....	125-1
<b>Service - Engine</b>			
Engine oil .....	90-1	Neutral start system .....	125-4
Engine filter .....	90-1	Starting motor .....	125-4
Alternator V-belt .....	90-2	Removing batteries .....	125-5
Engine speeds .....	90-2	Alternator .....	125-7
<b>Service - Cooling System</b>			
Replacing coolant .....	95-1	Lamps .....	125-8
<b>Service - Axles and Wheels</b>			
Lubricate front axle and wheels .....	100-1	Fuses .....	125-11
Lubricate rear axle .....	100-2	<b>Service - Heater/Air Conditioning System</b>	
Checking front axle oil level .....	100-3	Air conditioning system .....	130-1
<b>Service - Fuel System</b>			
<b>Service - Transmission/Hydraulics</b>			
<b>Service - Clutch</b>			
<b>Service - Miscellaneous</b>			
<b>Service - Electrical System</b>			
<b>Service - Heater/Air Conditioning System</b>			
<b>Tractor Storage</b>			
<b>Crime Prevention Tips</b>			
<b>Troubleshooting</b>			
<b>Specifications</b>			
<b>Engine</b>			

Continued on next page

*Contents*

	<b>Page</b>
Weights .....	150-2
Electrical System .....	150-2
Capacities .....	150-3
<b>Identification Numbers</b> .....	<b>155-1</b>
<b>Lubrication and Maintenance Records</b> . . .	<b>160-1</b>
<b>Attachments</b> .....	<b>165-1</b>

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)