

3055 and 3255 Tractors



JOHN DEERE

 
OPERATORS MANUAL

3055 and 3255
Tractors

OML64489 Issue E1 English

John Deere Werke Mannheim
OML64489 Issue E1

LITHO IN U.S.A.
ENGLISH



Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File

the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S.



LX001191

LX 001191
-UN-

LX,OIFC 001318-19-01MAY91

Contents

| | Page | | Page |
|---------------------------------------|------|---|-------|
| Safety | 05-1 | Air conditioning system | 35-5 |
| Safety Signs | 10-1 | Steering wheels adjustment | 35-5 |
| Controls and Instruments | | Treads, Tires, Ballast | |
| Controls | 15-1 | Front wheel treads | 40-1 |
| Control Lights | 15-2 | Front wheel toe-in | 40-3 |
| Instruments | 15-3 | Rear wheel tread | 40-4 |
| Break-In Period | | Tires | 40-7 |
| After the first 4 and 8 hours | 20-1 | Ballast | 40-8 |
| After the first 50 hours | 20-1 | Measuring rear wheel slip | 40-9 |
| Within the first 100 hours | 20-2 | Rear wheel weights | 40-10 |
| After the first 100 hours | 20-2 | Filling tires with liquid ballast | 40-12 |
| Operating the Engine | | Installing front weights | 40-13 |
| Prestarting check | 25-1 | Rockshaft and 3-Point Hitch | |
| Starting the engine | 25-2 | Control lever | 45-1 |
| Electric starting aid | 25-3 | Load selector lever | 45-2 |
| Starting with a booster battery | 25-3 | Rate-of-implement-drop | 45-3 |
| Engine coolant heater | 25-4 | Three-point hitch | 45-4 |
| Towing the tractor to start | 25-4 | Draft links | 45-4 |
| Towing the tractor | 25-5 | Center link | 45-5 |
| Parking the tractor | 25-5 | Lift links | 45-6 |
| Stopping the engine | 25-5 | Attaching implements | 45-8 |
| Operating the Tractor | | Sway blocks | 45-9 |
| Reduce fuel consumption | 30-1 | Accessories | |
| Ground travel speeds | 30-3 | Selective control valves | 50-1 |
| Shifting transmission | 30-5 | Poppet type valves | 50-1 |
| Shifting Hi-Lo unit | 30-6 | Breakaway couplers | 50-4 |
| Differential lock | 30-6 | Spool type valves | 50-6 |
| Foot brakes | 30-7 | Quick couplers | 50-6 |
| Operator's Station | | Maximum permissible oil withdrawal | 50-7 |
| Lighting system | 35-1 | Double acting remote hydraulic cylinder | 50-8 |
| Seat | 35-2 | Swinging drawbar | 50-9 |
| Roll guard | 35-3 | Power Take-Off | |
| Seat belt | 35-3 | PTO master shield | 55-1 |
| Windshield wipers | 35-4 | Operating of PTO | 55-2 |
| Fan, air louvers, heater | 35-4 | Attaching PTO-driven equipment | 55-3 |

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OML64469 E1-19-20JUN91

COPYRIGHT© 1991
DEERE & COMPANY
European Office Mannheim
All rights reserved
A John Deere ILLUSTRATION® Manual

Contents

| | Page | | Page |
|---|-------|---|--------|
| Front-Wheel Drive | | | |
| Operation | 60-1 | Service - Fuel System | |
| Front wheel steering angle | 60-2 | Checking fuel filter | 105-1 |
| Adjusting front wheel tread | 60-3 | Replacing fuel filter | 105-1 |
| Tires | 60-4 | Bleeding fuel system | 105-2 |
| Fuel, Lubricants and Coolant | | | |
| Fuel | 65-1 | Service - Transmission/Hydraulics | |
| Engine oil | 65-2 | Checking oil level | 110-1 |
| Fluid for hydraulically operated clutch | 65-3 | Replacing filter element | 110-2 |
| Transmission/hydraulic oil | 65-3 | Changing oil | 110-3 |
| Transmission oil for MFWD front axle | 65-4 | Service - Miscellaneous | |
| Multipurpose grease | 65-5 | Adding fluid to clutch reservoir | 115-1 |
| Engine coolant | 65-5 | Operator's seat | 115-1 |
| Removing Access Covers | | | |
| Grille screens | 70-1 | 3-Point hitch | 115-1 |
| Hood | 70-1 | Compressor V-belt | 115-2 |
| Battery box covers | 70-2 | SGB air filter | 115-2 |
| Lubrication and Periodic Service | | | |
| Service intervals | 75-1 | Service - Electrical System | |
| Timetables | 75-2 | Batteries | 120-1 |
| Service - Air Intake System | | | |
| Primary air filter | 80-1 | Neutral start system | 120-4 |
| Secondary air filter | 80-3 | Starting motor | 120-4 |
| Air intake hoses | 80-4 | Removing batteries | 120-5 |
| Service - Brakes | | | |
| Bleeding brakes | 85-1 | Alternator | 120-6 |
| Adjusting hand brake | 85-2 | Lamps | 120-7 |
| Service - Engine | | | |
| Engine oil | 90-1 | Fuses | 120-10 |
| Engine filter | 90-1 | Service - Heater and Air Conditioning System | |
| Alternator V-belt | 90-2 | Air conditioning system | 125-1 |
| Engine speeds | 90-2 | Heater | 125-2 |
| Service - Cooling System | | | |
| Replacing coolant | 95-1 | Tractor Storage | |
| Service - Axles and Wheels | | | |
| Lubricate front axle and wheels | 100-1 | Storage | 130-1 |
| Lubricate rear axle | 100-2 | Removing tractor from storage | 130-2 |
| Checking front axle oil level | 100-3 | Crime Prevention Tips | |
| Changing front axle oil | 100-3 | 135-1 | |
| Troubleshooting | | | |
| Specifications | | | |
| Hydraulic system | | | |
| Engine | | | |
| Electrical system | | | |
| Electrical System | | | |
| Capacities | | | |
| Identification Numbers | | | |
| 150-1 | | | |

Continued on next page

Contents

| | Page |
|--|-------|
| Lubrication and Maintenance Records . . . | 155-1 |
| Attachments | 160-1 |

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com