

**2155, 2355,
2555 AND 2755
TRACTORS
(FROM SERIAL NO.
755 000L)**



JOHN DEERE

OPERATORS MANUAL
2155, 2355, 2555 AND 2755
TRACTORS (FROM SERIAL NO. 755
000L)

OML64491 E2 English

**JOHN DEERE WERKE MANNHEIM
OML64491 E2**

LITHO IN THE U.S.A.
ENGLISH



Introduction

READ THIS MANUAL CAREFULLY to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are U.S. customary units and their metric equivalents.

RIGHT-HAND AND LEFT-HAND SIDES are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS in the Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S.

All information, illustrations, and specifications contained in this operator's manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT© 1992 DEERE & COMPANY
European Office Mannheim
All rights reserved
A John Deere ILLUSTRATION™ Manual
PREVIOUS EDITIONS
COPYRIGHT© 1987, 1989, 1990, 1991

Contents

Identification Views	00-4	Operator's Station	30-
		– Lighting system	30-1
Safety	05-	– Seats	30-3
– Safety	05-1	– Roll guard	30-5
		– Seat belt	30-6
Safety-Decals	06-	– Windshield wipers	30-6
– Safety-Decals	06-1	– Fan, air louvers, heater	30-7
		– Air conditioning system	30-7
		– Steering wheel adjustment	30-8
Controls and Instruments	10-	Treads, Tires, Ballast	35-
– Controls	10-1	Wheel treads	35-1
– Control lights	10-2	– Adjusting front wheel tread	35-2
– Instruments	10-3	– Checking front wheel toe-in	35-2
		– Adjusting front wheel toe-in	35-3
Break-In Period	15-	– Rear wheel tread adjustment	35-4
– After the first 4 and 8 hours	15-1	Tires	35-6
– After the first 50 hours	15-2	– Tire pressures	35-6
– Within the first 100 hours	15-2	– Servicing tires	35-6
– After the first 100 hours	15-2	– Use correct tire combinations	35-7
		Ballast	35-7
Operating the Engine	20-	– Measuring rear wheel slip	35-8
– Prestarting check	20-1	– Filling tires with liquid ballast	35-9
– Starting the engine	20-2	– Front weights	35-10
– Electric starting aid	20-3	Rockshaft, Three-Point Hitch	40-
– Starting with a booster battery	20-3	Rockshaft	40-1
– Towing the tractor to start	20-4	– Control lever	40-1
– Towing the tractor	20-5	– Load selector lever	40-3
– Parking the tractor	20-5	– Rate-of-implement drop	40-4
– Stopping the engine	20-6	Three-point hitch	40-5
		– Draft links	40-5
Operating the Tractor	25-	– Center link	40-6
Reduce fuel consumption	25-1	– Lift links	40-7
Ground travel speeds	25-3	– Attaching implements	40-8
– At desired engine speed	25-3	– Positioning sway blocks	40-9
– At rated engine speed	25-4	Accessories	45-
– Shifting transmission	25-6	Selective control valves	45-1
– Hi-Lo shift unit	25-7	– Poppet type valves	45-1
– Creeper transmission	25-7	– Spool type valves	45-6
– Reverser transmission	25-8	– Quick couplers	45-6
– Foot brakes	25-8	– Maximum permissible oil withdrawal	45-7
– Differential lock	25-9	Double acting remote hydraulic cylinder	45-8
		Swinging drawbar	45-9
		Power Take-Off	50-
		– PTO guard	50-1
		– Operation of PTO	50-2
		– Attaching PTO driven equipment	50-3

Contents

Front-Wheel Drive	55-	Service-Cooling System	95-
– Operation	55-1	– Replacing coolant	95-1
– Adjusting front wheel tread	55-2		
– Tires	55-3		
Fuel, Lubricants, Coolant	60-	Service-Axles and Wheels	100-
Fuel	60-1	– Lubricating front axle	100-1
– Fuel specifications	60-1	– Lubricating drive housings and shafts	100-2
– Fuel storage	60-1	– Lubricating rear axles	100-2
Lubricants	60-2	– Checking front axle oil level	100-3
– Engine oil	60-2	– Changing front axle oil	100-4
– Fluid for hydraulically operated clutch	60-2		
– Transmission/hydraulic oil	60-3	Service-Fuel System	105-
– Gear oil for front wheel drive	60-4	– Checking fuel filter	105-1
– Extreme pressure or multipurpose grease	60-4	– Replacing fuel filter	105-2
– Engine coolant	60-6	– Cleaning fuel transfer pump	105-2
		– Bleeding fuel system	105-3
Removing Access Covers	65-	Service-Transmission/Hydraulics	110-
– Hood	65-1	– Checking oil level	110-1
– Grille screens	65-1	– Replacing filter element	110-2
– Battery box covers	65-2	– Changing oil	110-3
		– Replacing steering filter	110-3
Lubrication and Periodic Service	70-	Service-Miscellaneous	115-
– Service intervals	70-1	– Operator's seat	115-1
– Time-table	70-2	– 3-Point hitch	115-1
		– SGB-air filter	115-2
Service-Air Intake System	75-	Service-Electrical System	120-
– Primary air filter	75-1	– Batteries	120-1
– Secondary air filter	75-3	– Checking specific gravity	120-2
– Dust unloading valve	75-4	– Level of electrolyte	120-3
– Air intake hoses	75-4	– Neutral start system	120-4
		– Starting motor	120-4
Service-Brakes	80-	– Removing batteries	120-5
– Bleeding brakes	80-1	– Alternator	120-7
– Adjusting hand brake	80-1	– Lamps	120-8
		– Fuses	120-10
Service-Clutch	85-	Service-Heater and Air Conditioning System .	125-
– Adjusting clutch	85-1	– Air conditioning system	125-1
– Adding fluid to clutch reservoir	85-2	– Heater	125-2
– Lubricating clutch throw-out bearing	85-2		
Service-Engine	90-		
– Engine oil	90-1		
– Engine filter	90-2		
– Alternator V-belt	90-2		
– Engine speeds	90-2		

Contents

Tractor Storage	130-	Identification Numbers	145-
– Storage	130-1	– Identification numbers	145-1
– Removing tractor from storage	130-2		
Crime Prevention	130-3	Lubrication and Maintenance Records	150-
– Vandal Protection Equipment	130-3	– Lubrication and maintenance records	150-1
– Crime prevention tips	130-4		
Troubleshooting	135-	Attachments	155-
– Hydraulic system	135-1	– Attachments	155-1
– Engine	135-2		
– Electrical system	135-3	Index	160-
		– Index	160-1
Specifications	140-		
– Engine	140-1		
– Weights	140-3		
– Electrical system	140-4		
– Capacities	140-4		

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com