



5400N and 5500N Narrow Tractors



JOHN DEERE

OPERATORS MANUAL

5400N and 5500N
Narrow Tractors

OMLV62124 H6 English

John Deere Augusta
OMLV62124 H6
(This manual replaces OMLV62124 H4)
European Edition

LITHO IN U.S.A.
ENGLISH



Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages (see your John Deere dealer to order).

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

SETTING FUEL DELIVERY BEYOND PUBLISHED factory specifications or otherwise overpowering will result in loss of warranty protection for this machine.

BEFORE DELIVERING THIS MACHINE, your dealer performed a predelivery inspection. After operating for the first 100 hours, schedule an after-sale inspection with your dealer to ensure best performance.

THIS TRACTOR IS DESIGNED SOLELY for use in customary agricultural or similar operations ("INTENDED USE").

Use in any other way is considered as contrary to the intended use. The manufacturer accepts no liability for damage or injury resulting from this misuse, and these risks must be borne solely by the user.


Compliance with and strict adherence to the conditions of operation, service and repair as specified by the manufacturer also constitute essential elements for the intended use.

THIS TRACTOR SHOULD BE OPERATED, serviced and repaired only by persons familiar with all its particular characteristics and acquainted with the relevant safety rules (accident prevention).

The accident prevention regulations, all other generally recognized regulations on safety and occupational medicine and the road traffic regulations must be observed at all times.


Any arbitrary modifications carried out on this tractor will relieve the manufacturer of all liability for any resulting damage or injury.

IDENTIFICATION VIEWS

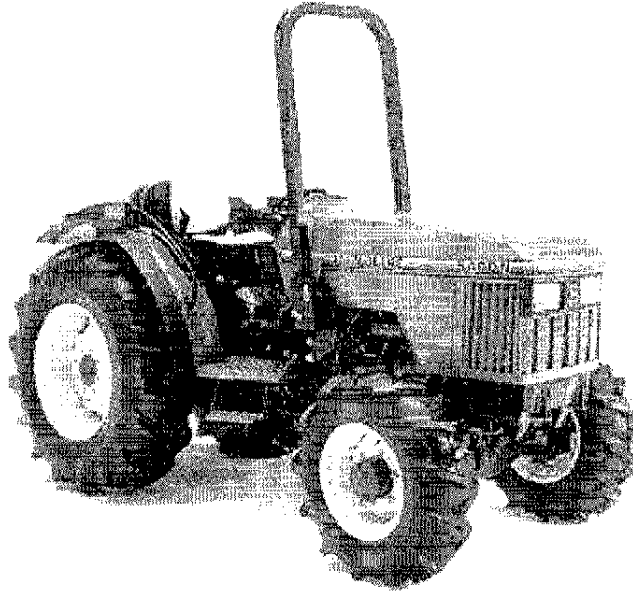

LV617
-UN-18JUN94

John Deere 5400N Tractor—Open Station

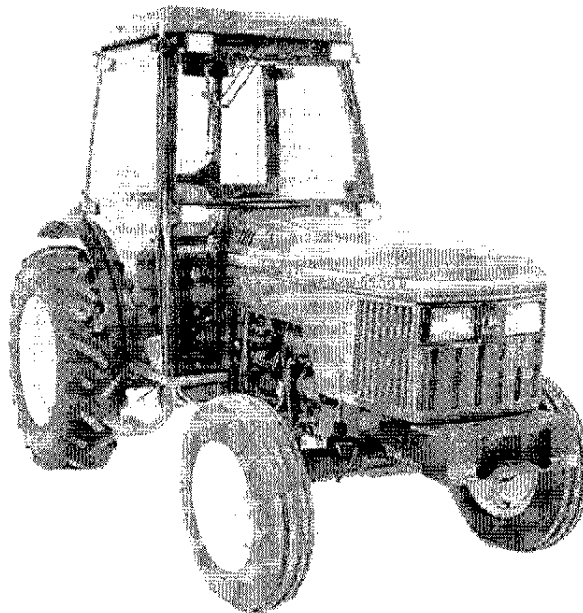

LV1648
-UN-05JUN96

John Deere 5500N Tractor—Cab

Contents

Page	Page		
Safety	05-1	Storage Compartment	30-4
Safety Signs	10-1	Using Horn	30-5
Controls and Instruments	15-1	Break-In Period	35-1
Lights		Prestarting Checks	40-1
Light Switch Positions	20-1	Operating the Engine	
Using Head Lamps	20-2	Before Starting the Engine	45-1
Full Beam Indicator	20-2	Starting the Engine	45-3
Using Front Position and Rear Tail Lamps	20-3	Check Instruments After Starting	45-4
Rear Flood Lamp—Open Station		Air Restriction Indicator	45-4
Using	20-4	Watch Fuel Level	45-5
Adjusting	20-4	Changing Engine Speeds	45-5
Using Flood Lamps—Cab	20-5	Warming Up the Engine	45-6
Using Turn Signals	20-6	Restart Stalled Engine	45-6
Using License Plate Light	20-7	Avoid Idling the Engine	45-6
Attaching and Using Warning Lights		Observe Engine Work and Idle Speeds	45-7
Open Station	20-7	Working With Speed-Hour Meter	45-7
Cab	20-8	Stopping the Engine	45-8
Seven-Terminal Outlet	20-10	Cold Weather Starting Procedure	45-8
Operator's Platform (Open Station)		Using Booster Battery	45-9
Operating Foldable ROPS	25-1	Starting Engine With Slave Battery	45-9
Using Seat Belt	25-2	Driving the Tractor	
Selecting Seat Position	25-2	Avoid Contact With Pesticides	50-1
Adjusting Ride Comfort	25-3	Observe Maximum Travel Speeds	50-2
Using Horn	25-3	Reduce Fuel Consumption	50-2
Operator's Station (Cab)		Selecting a Gear	50-3
Using Seat Belt	30-1	Shifting Transmission	50-4
Selecting Seat Position	30-1	Using Brakes	50-5
Adjusting Ride Comfort	30-2	Using Differential Lock	50-5
Adjusting Blower Speed	30-2	Operating Front-Wheel Drive	50-6
Controlling Temperature	30-3	Driving Tractor On Roads	50-7
Operating Wiper(s)	30-3	Stopping the Tractor	50-11
Accessory Electrical Outlet	30-3	Rockshaft and 3-Point Hitch	
Radio	30-4	Match Tractor Power to Implement	55-1
Using Dome Lamp	30-4	3-Point Hitch Components	55-1

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMLV62124 H6-19-22AUG96

COPYRIGHT© 1996
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION Manual
Previous Editions
Copyright 1994 Deere & Company

Contents

	Page		Page
Rockshaft Control Levers	55-2	Installing Rear Cast Iron Weights	70-6
Using Rockshaft Position Control	55-2	Using Liquid Weight	70-7
Setting Position Control Lever Stop	55-4	Filling Tires with Liquid Ballast	70-8
Using Draft Control	55-5	Draining the Tires	70-8
Adjusting Rockshaft Speed-of-Drop	55-6		
Preparing Implement	55-6	Wheels, Tires and Treads	
Converting Hitch Category	55-7	Check Implement-to-Tire Clearance	75-1
Positioning Draft Link Ends	55-8	Tire Inflation Pressure	
Positioning Center Link	55-9	Check	75-2
Attaching Implements	55-10	Chart	75-3
Adjusting Sway Blocks	55-11	Tighten Bolts	
Leveling the Hitch	55-11	Correctly	75-3
Adjusting Rockshaft Control Lever Friction	55-13	Adjustable Front Axle	75-4
Warming Hydraulic System Oil	55-13	MFWD Axle	75-4
		Rear Axle	75-5
		Observe Rear Wheel Tread Width	
Remote Hydraulic Cylinders		Limitations	75-5
Use Correct Hose Tips	60-1	Tread Settings	
SCV Control Lever and Coupler		Two-Position Rear Wheels	75-6
Identification	60-1	Multi-Position Rear Wheels	75-6
Installing Remote Outlet Oil Manifolds		Two-Position MFWD Wheels	75-8
(Optional)	60-2	Adjustable Front Axle	75-9
Connecting Cylinder Hoses	60-3	Selecting Front Tire Rolling Direction	75-10
Operating SCV Controls	60-5	Adjusting Front Axle Tread Width	75-10
Adjusting Cylinder Stop	60-5	Toe-In	
Power Beyond Connections	60-6	Checking Two-Wheel Drive Tractor	75-11
Disconnecting Cylinder Hoses	60-8	Adjusting Two-Wheel Drive Tractor	75-11
		Checking MFWD Tractor	75-12
		Adjusting MFWD Tractor	75-12
Drawbar and PTO		Setting Steering Stops	
Drawbar Load Limitations	65-1	Adjustable Front Axle	75-13
Selecting Drawbar Position	65-1	MFWD Axle	75-14
Adjusting Drawbar	65-2	Use Correct Tire Combinations	75-14
Attaching PTO-Driven Implement	65-2	Tire Compatibility Chart	75-15
Selecting Correct PTO Speeds	65-4		
Operating Tractor PTO	65-4	Transporting	
Adjusting PTO Clutch Lever	65-5	Use Safety Lights and Devices	80-1
		Use a Safety Chain	80-1
Ballast		Observe Maximum Travel Speeds	80-2
Selecting Ballast	70-1	Transport on Carrier	80-2
Matching Ballast to Load Work	70-1	Towing Tractor	80-3
Checking for Correct Ballast	70-1		
Measuring Wheel Slip (Manually)	70-2	Fuels, Lubricants, and Coolant	
Ballast Limitations	70-3	Fuel	85-2
Ballasting		Handling and Storing Diesel Fuel	85-2
Front End for Transport	70-3	Fill Fuel Tank	85-3
Two-Wheel Drive Tractors Tractors	70-4	Alternative and Synthetic Lubricants	85-4
MFWD-Equipped Tractors	70-4	Lubricant Storage	85-4
Determining Maximum Ballast		Diesel Engine Oil	85-5
Rear	70-5	Oil Filters	85-5
Front	70-5		
Using Cast Iron Weights	70-6		

Continued on next page

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com