JOHN DEERE WORLDWIDE COMMERCIAL & CONSUMER EQUIPMENT DIVISION

Compact Utility Tractors 2520

OMLVU18901 B7 OPERATOR'S MANUAL



JOHN DEERE

WARNING: Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

California Proposition 65 Warning

North American Version Litho in U.S.A.

INTRODUCTION

Thank You for Purchasing a John Deere Product

We appreciate having you as a customer and wish you many years of safe and satisfied use of your machine.

Using Your Operator's Manual

This manual is an important part of your machine and should remain with the machine when you sell it.

Reading your operator's manual will help you and others avoid personal injury or damage to the machine. Information given in this manual will provide the operator with the safest and most effective use of the machine. Knowing how to operate this machine safely and correctly will allow you to train others who may operate this machine.

If you have an attachment, use the safety and operating information in the attachment operator's manual along with the machine operator's manual to operate the attachment safely and correctly.

This manual and safety signs on your machine may also be available in other languages (see your authorized dealer to order).

Sections in your operator's manual are placed in a specific order to help you understand all the safety messages and learn the controls so you can operate this machine safely. You can also use this manual to answer any specific operating or servicing questions. A convenient index located at the end of this book will help you to find needed information quickly.

The machine shown in this manual may differ slightly from your machine, but will be similar enough to help you understand our instructions.

RIGHT-HAND and LEFT-HAND sides are determined by facing in the direction the machine will travel when going forward. When you see a broken line (-----), the item referred to is hidden from view.

Before delivering this machine, your dealer performed a predelivery inspection to ensure best performance.

Special Messages

Your manual contains special messages to bring attention to potential safety concerns, machine damage as well as helpful operating and servicing information. Please read all the information carefully to avoid injury and machine damage.



CAUTION: Avoid injury! This symbol and text highlight potential hazards or death to the operator or bystanders that may occur if the hazards or procedures are ignored.

IMPORTANT: Avoid damage! This text is used to tell the operator of actions or conditions that might result in damage to the machine.

NOTE: General information is given throughout the manual that may help the operator in the operation or service of the machine.

Attachments for Your Machine

There's a John Deere attachment or kit to make your new machine perform more tasks or be more versatile, whether your machine is a lawn tractor or compact utility tractor or a utility vehicle.

You can check out the entire line of attachments for your machine at JohnDeere.com or ask your John Deere dealer. From aerators to electric lift kits to tillers, there's a John Deere attachment or kit to fill every need.

PRODUCT IDENTIFICATION

Record Identification Numbers

Compact Utility Tractor

2520 PIN (106001-)


If you need to contact an Authorized Service Center for information on servicing, always provide the product model and identification numbers.

You will need to locate the identifications numbers for the product. Record the information in the spaces provided below.

DATE OF PURCHASE:


DEALER NAME:

DEALER PHONE:

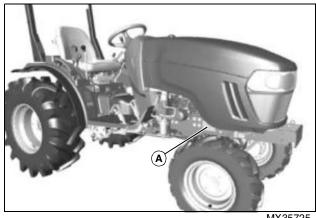

MX35725

PRODUCT IDENTIFICATION NUMBER (A):

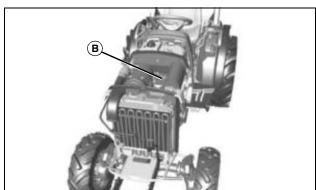

MX35726

ENGINE SERIAL NUMBER (B):

TABLE OF CONTENTS

Safety Labels	
Safety	
Operating	
Replacement Parts	31
Service Intervals	32
Service Lubrication	
Service Engine	36
Service Transmission	45
Service Electrical	49
Service Miscellaneous	
Troubleshooting	
Storage	62
Specifications	63
Warranty	67
Index	70

All information, illustrations and specifications in this manual are based on the latest information at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT© 2007
Deere & Co.
John Deere Worldwide Commercial and
Consumer Equipment Division
All rights reserved
Previous Editions
COPYRIGHT© 2005, 2006

OMLVU18901 B7 - English

SAFETY LABELS




Understanding The Machine Safety Labels

The machine safety labels shown in this section are placed in important areas on your machine to draw attention to potential safety hazards.

On your machine safety labels, the words DANGER, WARNING, and CAUTION are used with this safety-alert symbol. DANGER identifies the most serious hazards.

The operator's manual also explains any potential safety hazards whenever necessary in special safety messages that are identified with the word, CAUTION, and the safety-alert symbol.

Safety Labels

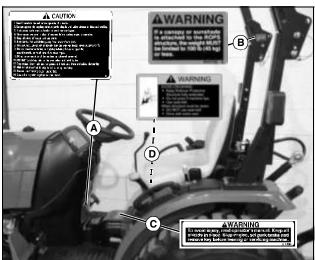

MX22561

CAUTION (A)

- 1. Read Operator's Manual before operating this tractor.
- 2. Do not operate the machine without guards, shields, and safety devices in place and working.
- 3. Hitch towed loads only to drawbar to avoid rearward upset.
- 4. Make certain everyone is clear of machine before starting engine or operation.
- 5. Keep all riders off tractor and equipment.
- 6. Keep hands, feet and clothing away from power-driven parts.
- 7. Use seat belt. Extend belt completely from any wind-up device before adjusting to fit.
- 8. Reduce speed when turning or applying individual brakes or operating around hazards, on rough ground or steep slopes.

- 9. Do not allow operation of the machine by untrained personnel.
- 10. Use flashing warning lights on highway unless prohibited by law.
- 11. Stop engine, lower implement to ground, and lock park brake before dismounting.
- 12. Wait for all movement to stop before servicing machinery.
- 13. Remove key if leaving tractor unattended.
- 14. Couple brake pedals together for road travel.

WARNING (B)


If a canopy or sunshade is attached to the ROPS structure, the weight MUST be limited to 100 lb (45 kg) or less.

WARNING (C)

To avoid injury, read operator's manual. Keep all shields in place. Stop engine, set park brake and remove key before leaving or servicing machine.

WARNING: AVOID CRUSHING (D)

- Keep Rollover Protective Structure fully extended.
- Do not jump if machine tips.
- Use seat belt.
- When structure must be down:
 - DO NOT use seat belt.
 - · Drive with extra care.

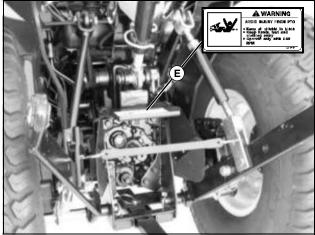

MX35670

WARNING: AVOID INJURY FROM PTO (E)

- Keep all shields in place.
- · Keep hands, feet and clothing away.
- Operate only with 540 RPM.

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com