



GATOR™ 6X4
Diesel
Utility Vehicle
North American



John Deere Welland Works
OMM128787 Issue G6
(This manual replaces OM125961 A6)

LITHO IN U.S.A.
ENGLISH



Introduction

THANK YOU for purchasing a John Deere product.

READ THIS MANUAL carefully to learn how to operate and service your vehicle correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order).

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your vehicle and should remain with the vehicle when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of the machine or implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the vehicle should it be stolen. Your dealer also needs these numbers when you order parts. File

the identification numbers in a secure place off the vehicle.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering vehicles will result in such action.

TIRE WARRANTY - John Deere warranty applies for tires available through the John Deere parts system. For tires not available through the John Deere parts system, the tire manufacturer's warranty applicable to your vehicle may not apply outside the U.S. (See your John Deere dealer for specific information).

CALIFORNIA PROPOSITION 65 WARNING

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.



W02263 -UN-29OCT95

WX,DGATOR,IFC1 -19-15NOV95

Checklists

OWNER REGISTER

See your shipping invoice for Serial Numbers, also record numbers in Specification Section.

Name _____ Date Sold _____

Address _____ Utility Vehicle: _____

City _____ Product Identification Number _____

State/Prov _____ Engine Serial Number _____

Mail Code _____ Transaxle Serial Number _____

WX,GATOR,A -19-18FEB93

AFTER-SALE CHECKLIST

It is suggested that the following items be checked sometime during the first six months operation of the vehicle.

- ☐ Check the entire vehicle for loose or missing hardware.
- ☐ Check for broken or damaged parts. Make necessary repairs.
- ☐ Check for fluid leaks. Make necessary repairs.
- ☐ Check and adjust all operator controls; brakes, steering and throttle.
- ☐ Acquaint the customer with any special attachments that will help do a better job.
- ☐ Check with the customer as to the performance of the vehicle.
- ☐ If possible, run the vehicle to see if it is functioning properly.
- ☐ Review the entire operator's manual with the customer and stress the importance of proper and regular lubrication and safety precautions.

Date Visited: _____

Signature: _____

WX,GATOR,D -19-18FEB93

PREDELIVERY

Check off each item as it is found satisfactory or after proper adjustment is made.

☐ All safety guards and shields fastened in place.

☐ All decals in place and readable.

☐ Inflate tires to 34—41 kPa (5—6 psi).

☐ Lubricate. (See Service section.)

☐ Check air cleaner. (See Service section.)

☐ Check engine and transmission oil level.

☐ Check battery electrolyte level.

☐ Check battery charge.

☐ Add fuel. Start engine. Test drive.



☐ Check for creep at idle speed with park brake unlocked. (See Technical Manual)



☐ Check safety start system. (See Checkout Procedure.)

☐ Check steering.



☐ Check controls: throttle, brake, park brake.

☐ Check for fluid leaks: coolant, fuel or oil.

☐ Check vehicle for damage and touch up any scratches.



☐ Clean utility vehicle.

☐ Check brake adjustment, differential lock and drive chain slack.

Signature: _____

Date Set Up: _____



WX,DGATOR,B1 -19-11DEC95



DELIVERY CHECKLIST

Review the Operator's Manual with the customer explaining the following:

- ☐ John Deere warranty
- ☐ Review safety information and safe operation
- ☐ How to use controls
- ☐ Review service section
- ☐ Operating the vehicle correctly
- ☐ Hauling the utility vehicle on a trailer or truck
- ☐ Correct fuel and lubricants
- ☐ Daily and periodic inspections, including the Operational Checkout Procedure



- ☐ Servicing the utility vehicle regularly and correctly
- ☐ Storing the utility vehicle correctly

- ☐ John Deere parts and service



- ☐ Record vehicle numbers in the Product Identification Number section

- ☐ Remove and file this page



- ☐ Give the customer the Operator's Manual and Videotape. Encourage the customer to read the manual and view the video before operating the vehicle

Date Delivered: _____



Signature: _____

WX,GATOR,C -19-18FEB93

CLEANING AND POLISHING PLASTIC HOOD AND FENDERS

IMPORTANT: To keep scratches on plastic parts to minimum, do not rub or brush off any parts with bare hands, use a soft cloth (i.e. cheesecloth) or a light flow of compressed air. For dirt, wash with steady stream of water only (no detergent), then blow off excess water with air.



1. Remove excess dust or dirt.
2. When surface is dry, spray on PLEDGE® and leave for 30 to 60 seconds.
3. Using a dry soft cloth (i.e. cheesecloth) wipe off to bring up lustre.



PLEDGE® is a Registered Trademark of S.C Johnson, Co.

WX,GATOR,AS,P -19-22SEP93



Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.



Follow recommended precautions and safe operating practices.



DX,ALERT -19-03MAR93

T81389 -UN-07DEC88

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.



DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88


FOLLOW SAFETY INSTRUCTIONS

View the videotape provided with the machine for safe operating practices and carefully read all safety messages in this manual and on machine safety signs.



Keep safety signs in good condition and replace any safety signs that are damaged or missing.

Keep your machine in proper working condition.

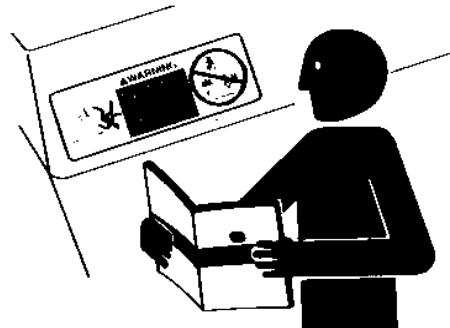

WX,626,4SY,A1 -19-27FEB91


W15211 -UN-18NOV89

DO NOT MODIFY MACHINE

Do not make any unauthorized modifications to the machine in any way.



Modifications can result in making the machine unstable, increasing the possibility of roll-over causing severe bodily injury or death.

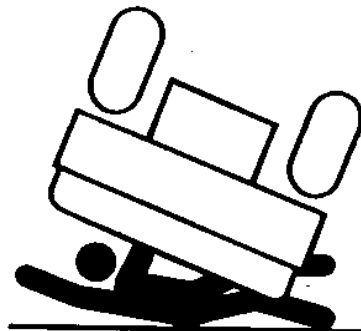

WX,622,4SY,A2 -19-01DEC89

W15212 -UN-18NOV89




INSPECT UTILITY VEHICLE

Inspect mechanical condition of your utility vehicle before each use to minimize chance of injury or being stranded. Remember, you can ride farther in an hour than you can walk in a day.

Be sure to check condition of tires and wheels, wheel hardware torque, and maintain proper tire pressure.

Keep all shields in place.

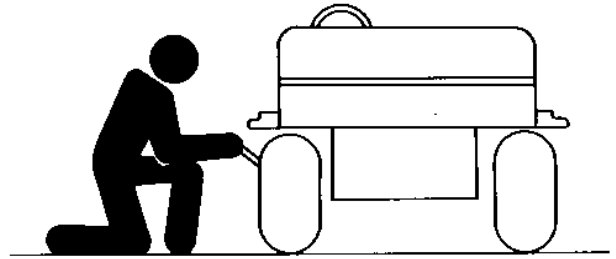

WX,GATOR,SY,A1 -19-16APR93



W00501 -UN-21JAN93

PROTECT CHILDREN

NEVER carry children in cargo area. DO NOT let children ride in cargo box of utility vehicle or any attachment.

Keep children and others away when you operate vehicle.

Before you back up or turn, look behind and around utility vehicle for children.

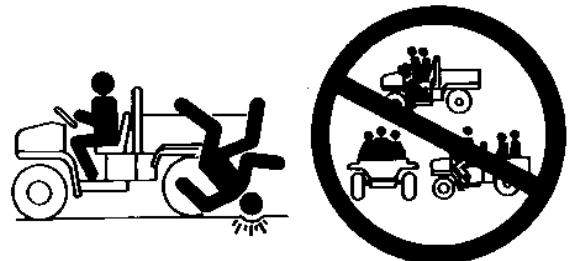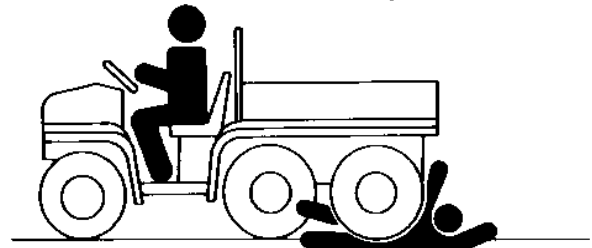

WX,GATOR,SY,B -19-18FEB93

W00900 -UN-21JAN93

W00910 -UN-21JAN93

ADULT OPERATORS ONLY

The utility vehicle is NOT a toy.

Young drivers may not have the strength or experience to control the utility vehicle. This increases their chances of roll-over resulting in severe bodily injury or death.

The utility vehicle should not be operated by anyone under the age of 16 years.



UNDER 16

WX,GATOR,SY,C -19-18FEB93

W00909 -UN-21JAN93



Our support email:

ebooklibonline@outlook.com