


GATOR®
Diesel
Utility Vehicle

Serial No. (008807-)

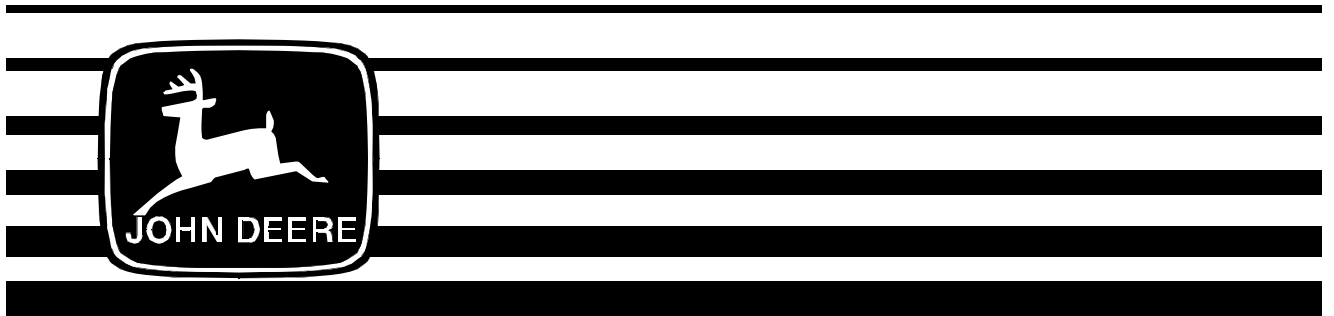

OPERATOR'S MANUAL


John Deere
Worldwide Commercial And
Consumer Equipment Division
OMM136975 A9

North American Version
Litho in U.S.A.
English

INTRODUCTION

THANK YOU for purchasing a John Deere product.

Read this manual and your attachment manuals thoroughly. Failure to do so could result in personal injury or equipment damage.

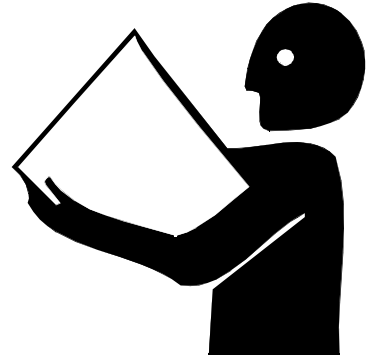

WARNING: The Engine Exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

CALIFORNIA Proposition 65 Warning

This manual should be considered a permanent part of your machine and should remain with the machine when you sell it.

Measurements in this manual are metric units and their U.S. customary equivalents. RIGHT-HAND and LEFT-HAND sides are determined by facing in the direction the machine will travel when going forward. When you see a broken line arrow (----->), it indicates the part it is pointing to is hidden.

Record identification numbers below. Be sure to record all the numbers to help in tracing the machine if it is stolen. You also need to give these numbers to your dealer when you order parts.

DATE OF PURCHASE:

DEALER NAME:

DEALER PHONE:

PRODUCT IDENTIFICATION NUMBER (A):

ENGINE SERIAL NUMBER (B):

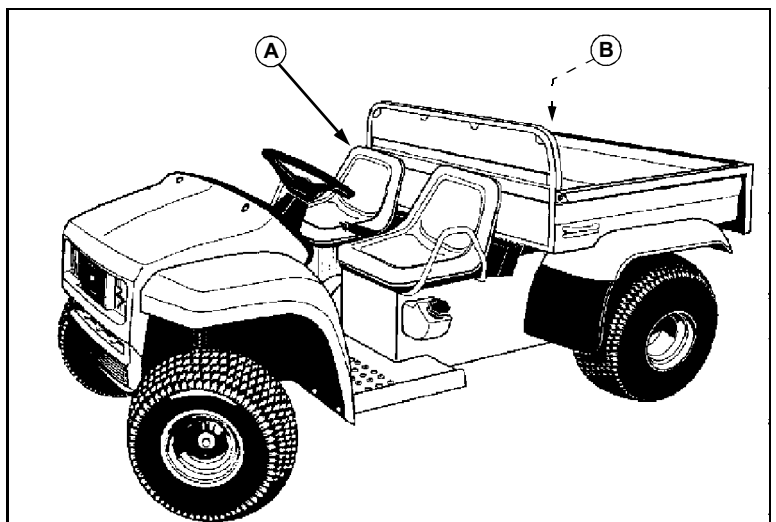


TABLE OF CONTENTS

Safety Signs	1
Controls	3
Operating	5
Replacement Parts	33
Service Machine Safely	34
Service Interval Chart	38
Service Engine	41
Service Transmission	58
Service Electrical	66
Service Miscellaneous	73
Troubleshooting	80
Storing Machine	83
Assembly	86
Specifications	96
Warranty	105
Index	110
John Deere Service Literature	115

All information, illustrations and specifications in this manual are based on the latest information at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT© 1998
Deere & Co.

John Deere Worldwide Commercial and
Consumer Equipment Division
Horicon, WI

All rights reserved
Previous Editions
COPYRIGHT© 1996, 1995

 
OMM136975 A9

SAFETY SIGNS

Safety-Alert Symbol

Read and recognize safety information. Be alert to the potential for personal injury when you see this safety-alert symbol.

On your vehicle safety labels, the words DANGER, WARNING, and CAUTION are used with this safety-alert symbol. DANGER identifies the most serious hazards. In this manual, the word CAUTION and this symbol call attention to safety messages.

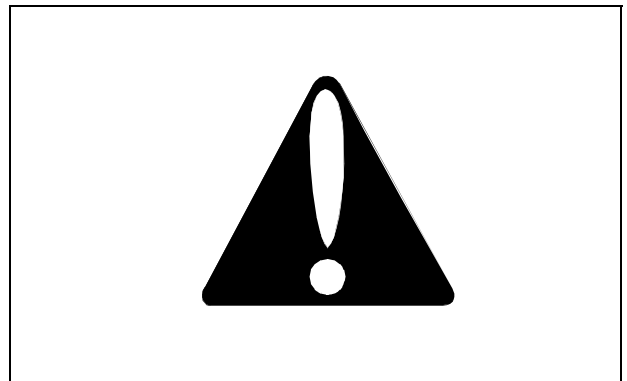

Machine Safety Labels

WARNING

RIDERS CAN FALL OFF AND BE KILLED

- Maximum of one person to a seat
- No riders in box or anywhere else



WARNING

YOUNG DRIVERS INCREASE CHANCE OF DEATH

- Young drivers may not be able to control vehicle
- No drivers younger than 16 years old

CAUTION

Before leaving vehicle:

- Stop engine
- Set park brake
- Remove key

WARNING

ROLLOVER OR FALLING OFF MAY CAUSE DEATH

- Read operator's manual.
- Drive very slowly when turning.
- Always use brakes going down a slope. Vehicle can take-off (freewheel) downhill.
- No loads heavier than 500 lbs (227 kg) in 4x2, 800 lbs (363 kg) in 6x4 and 1000 lbs (454 kg) in 6x4 DIESEL. Spread load evenly. Tie loads down.
- Reduce speed and load on rough or hilly ground.



SAFETY SIGNS

DANGER

EXPLOSIVE GASES

Cigarettes, flames or sparks could cause battery to explode. Always shield eyes and face from battery. Do not charge or use booster cables or adjust post connections without proper instruction and training. Keep vent caps tight and level.

POISON

CAUSES SEVERE BURNS

Contains sulfuric acid. Avoid contact with skin, eyes or clothing. In event of accident, flush with water and call a physician immediately. Keep out of reach of children.



NOTE: The following caution only applies to units equipped with a power lift for the cargo box.

CAUTION

HELP PREVENT INJURY WHEN DUMPING LOADS

 
 
 
 
- Operate dump with machine stationary and parking brake locked:
Never dump while moving
- Operate dump on level ground only
- Operate dump from operator's seat only
- Do not place hands behind seat when lowering box
- Refer to Operator's Manual for correct load distribution



CONTROLS

Operator Controls

- A - Warning Light Switch (Optional)
- B - Indicator Panel
- C - Hourmeter
- D - Headlight Switch
- E - Horn (Optional)
- F - Accelerator
- G - Brake Pedal
- H - Key Switch
- I - Turn Signal Switch and Indicator (Optional)
- J - Cargo Box Dump Switch (Optional)
- K - Differential Lock Lever
- L - Transaxle Shift Lever
- M - Parking Brake Lever
- N - Fuel Shutoff Valve
- O - Fuel Shut Off Valve-Fuel Filter

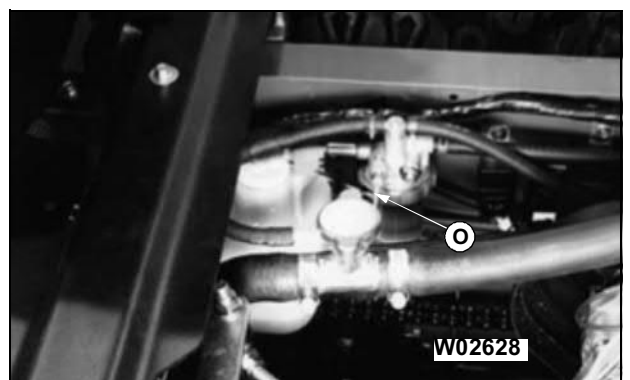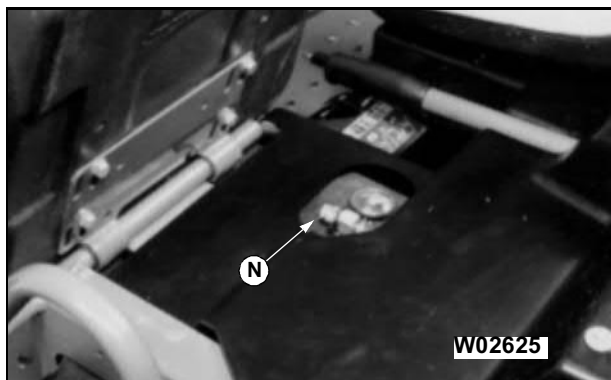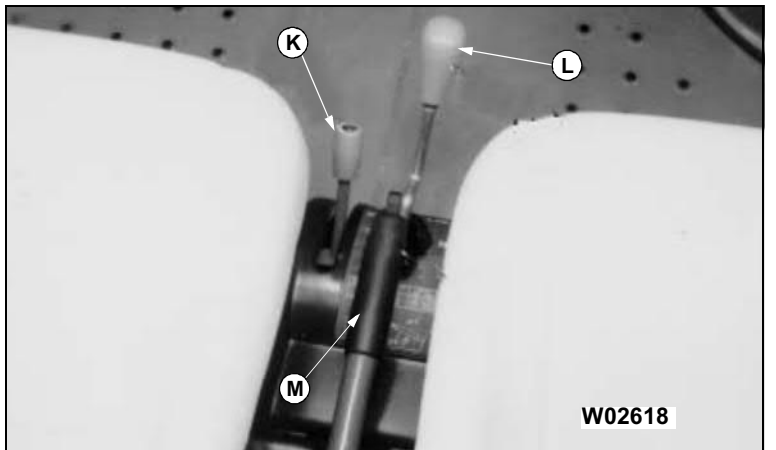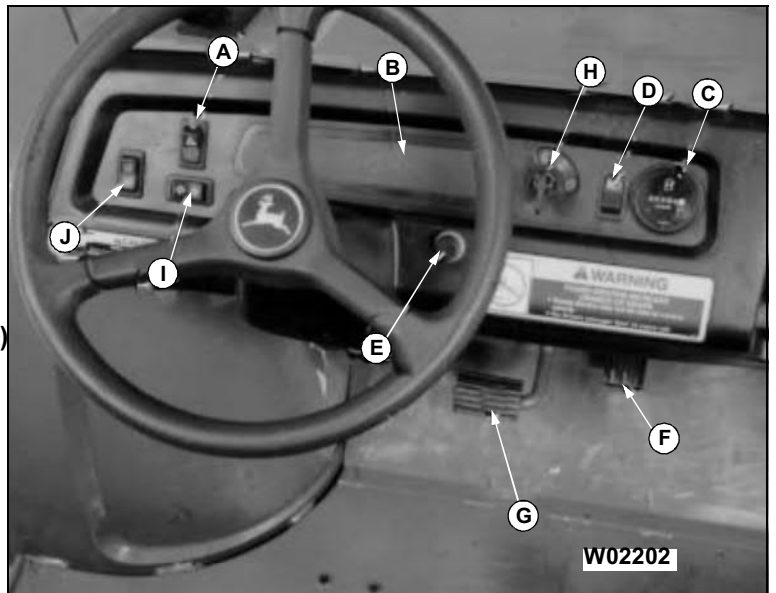


CONTROLS

Indicator Panel

- A - Battery
- B - Oil Pressure
- C - Coolant Temperature
- D - Engine Preheat
- E - Parking Brake
- F - Differential Lock

 NOTE: Only one indicator bulb illuminates both Coolant Temperature (C) and Engine Preheat (D) Indicators at the same time.

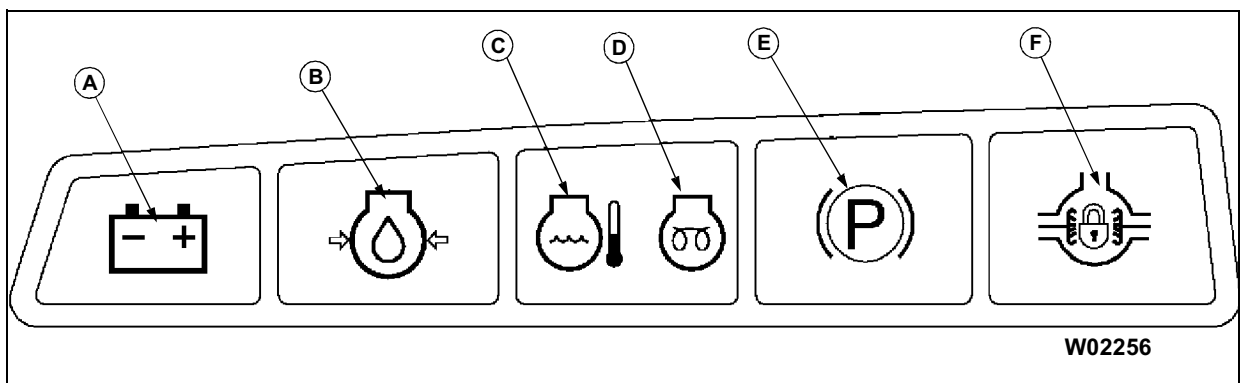

OPERATING MACHINE

Operate Safely

- View the videotape provided with the vehicle for safe operating practices.
- DO NOT misuse the GATOR[®], it is a utility vehicle NOT a recreation vehicle.
- Sit on the center of the seat and keep both feet within the foot platform perimeter. Clean foot platform if dirty, and remove any debris from around foot controls.
- Check for debris in engine compartment, especially around brake linkage on each side of the transaxle.
- Always use both hands for steering.
- Know location of controls and how and what they operate.
- Never operate utility vehicle while standing.
- Never operate utility vehicle with the cargo box raised.
- Check brake action before beginning vehicle operation. Adjust or service the brakes as necessary.
- To provide adequate braking ability and traction, DO NOT tow any attachment or loaded trailer unless the utility vehicle cargo box is loaded.
- Inspect vehicle before operating. Be sure hardware is tight. Repair or replace damaged, badly worn, or missing parts. Be sure guards and shields are in good condition and fastened in place. Make any necessary adjustments before operating.
- Keep people and pets out of the work area. Stop the vehicle if anyone enters the area. If an object is hit, stop and inspect the vehicle for damage. Make repairs before operating.
- Keep headlight lenses clean.
- DO NOT leave vehicle unattended when it is running.
- Only operate during daylight or with good artificial light.
- Be careful of traffic when operating near or crossing roadways.
- This vehicle is NOT intended for use on highways or public roadways. It is to be used for off-road use only.
- Avoid sudden starts, stops, or turns.
- Always use a level turn-around area.
- DO NOT wear headphones while operating.

Buy Now



Our support email:

ebooklibonline@outlook.com