

Utility Vehicle ProGator®

2020 Serial No. (010001 -)

2030 Serial No. (010001 -)



OPERATOR'S MANUAL

John Deere
Worldwide Commercial And
Consumer Equipment Division
OMM141589 J9

North American
Litho in U.S.A.
English

INTRODUCTION

THANK YOU for purchasing a John Deere product.

Read this manual thoroughly. Failure to do so could result in personal injury or equipment damage.



WARNING: The Engine Exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

CALIFORNIA Proposition 65 Warning

This manual should be considered a permanent part of your machine and should remain with the machine when you sell it.

Measurements in this manual are metric units and their U.S. customary equivalents. RIGHT-HAND and LEFT-HAND sides are determined by facing in the direction the machine will travel when going forward. When you see a broken line arrow (----->), it indicates the part it is pointing to is hidden.

Product warranty is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The product warranty is explained on the warranty certificate you received from your dealer.

Record identification numbers below. Be sure to record all the numbers to help in tracing the machine if it is stolen. You also need to give these numbers to your dealer when you order parts.

DATE OF PURCHASE:

DEALER NAME:

DEALER PHONE:

PRODUCT IDENTIFICATION NUMBER (A):

ENGINE SERIAL NUMBER (B):

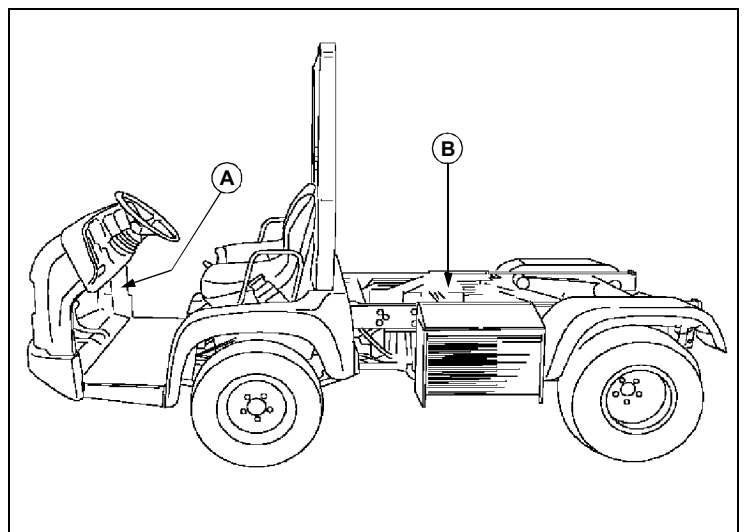 


TABLE OF CONTENTS

Safety Signs	1
Controls	4
Operating	5
Replacement Parts	26
Service Machine Safely	27
Service Interval Chart	30
Service-Engine	33
Service-Transmission	52
Service-Hydraulics	56
Service-Steering & Brakes	60
Service-Electrical	63
Service-Miscellaneous	68
Troubleshooting	76
Storing Machine	80
Assembly	83
Specifications	84
Warranty	88
Index	92
Service Literature	97

All information, illustrations and specifications in this manual are based on the latest information at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT© 1999
Deere & Co.
John Deere Worldwide Commercial and
Consumer Equipment Division
Horicon, WI
All rights reserved

 
OMM141589 J9

SAFETY SIGNS

Safety-Alert Symbol

Read and recognize safety information. Be alert to the potential for personal injury when you see this safety-alert symbol.

On your machine safety labels, the words DANGER, WARNING, and CAUTION are used with this safety-alert symbol. DANGER identifies the most serious hazards. In this manual, the word CAUTION and this symbol call attention to safety messages.

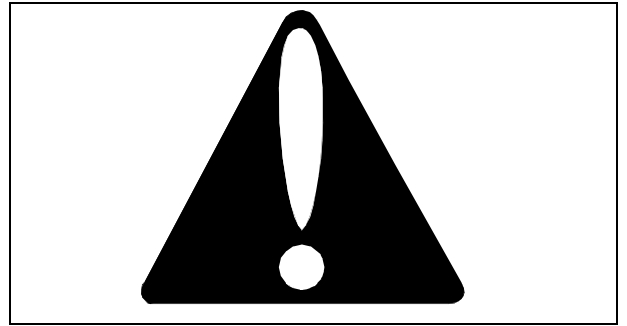


Machine Safety Labels

WARNING


RIDERS CAN FALL OFF AND BE KILLED

 - Maximum of one person to a seat
- No riders in box or anywhere else

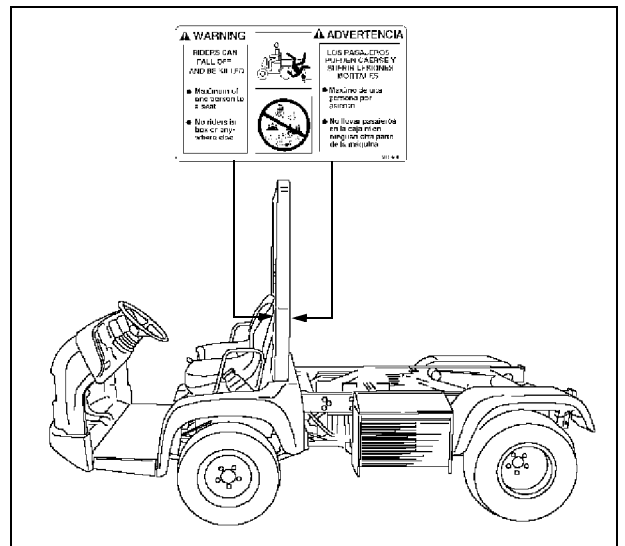

CAUTION

 Read operator's manual. Before leaving machine: Stop engine, set park brake and remove key.

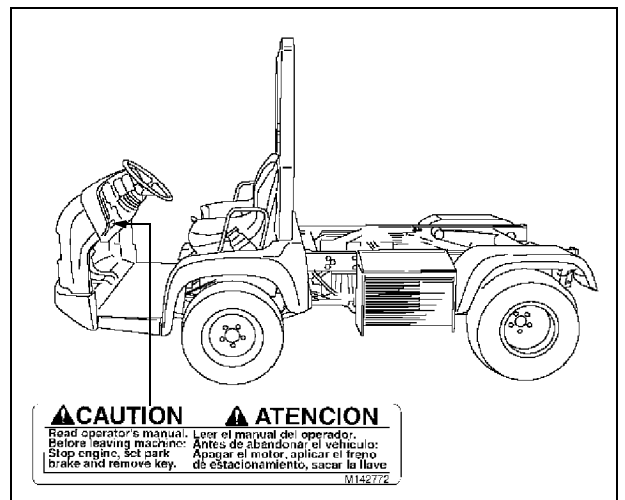


SAFETY SIGNS

WARNING—HOT SURFACE

Picture Note: “HOT” muffler warning stamped into the top of the vehicle muffler.

 
DO NOT touch the vehicle muffler, it may be hot.

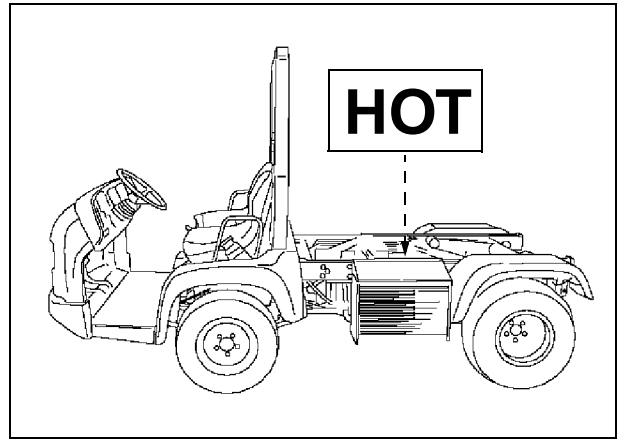

WARNING

USE SEAT BELT

 
To avoid injury from crushing always wear seat belt. Do not jump from machine.

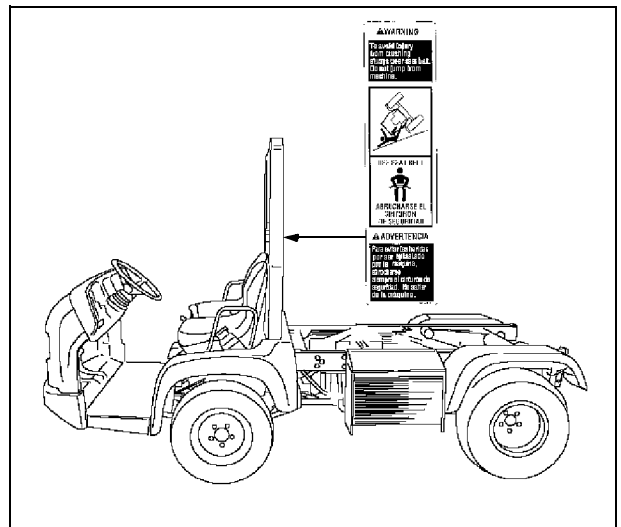

WARNING

Picture Note: Labels are located on each vehicle frame side rail.

 Avoid injury from crushing: Always use safety support when working on a raised bed or attachment.

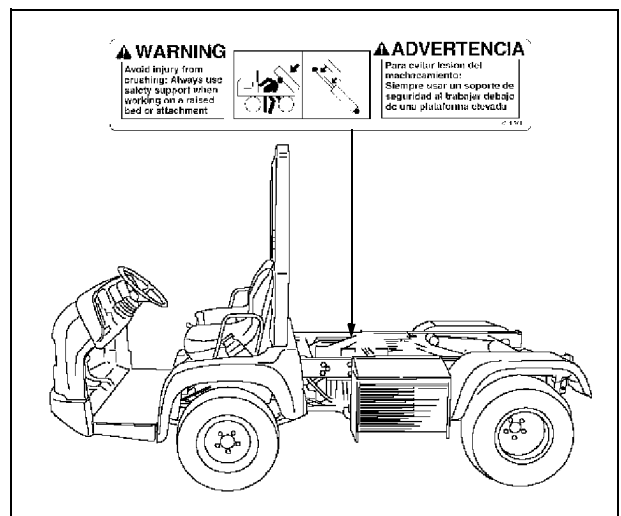


SAFETY SIGNS

WARNING

Picture Note: English WARNING information (A) molded into the top of the brake master cylinder. Spanish WARNING label (B) located behind the front grill.

 
To avoid brake failure use brake fluid specified in the Operating Manual.

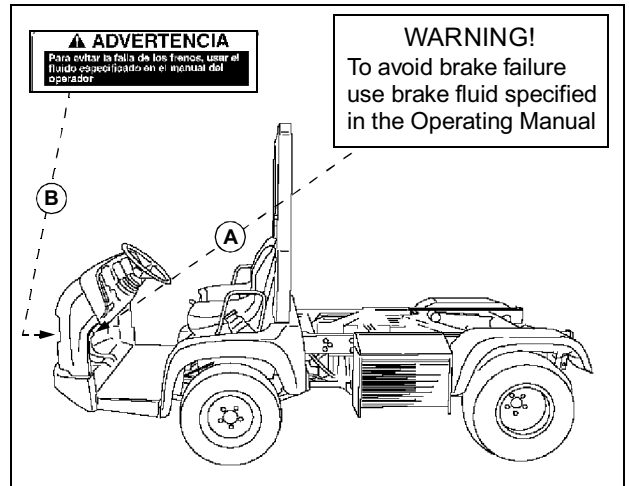

WARNING

Picture Note: English WARNING information (A) molded into the brake master cylinder fill cap. Spanish WARNING label (B) located behind the front grill.

 CLEAN FILLER CAP BEFORE REMOVING. USE ONLY DOT3 BRAKE FLUID FROM A SEALED CONTAINER.

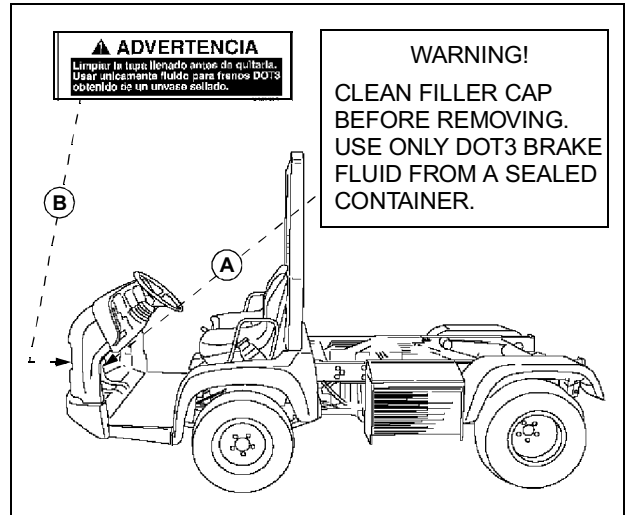

DANGER/POISON

 
Picture Note: English DANGER/POISON information (A) molded into vehicle battery caps. Spanish DANGER/POISON label (B) is located on the vehicle frame.

Explosive Gases

Cigarettes, flames or sparks could cause the batteries to explode. Always shield eyes and face from the batteries. Do not charge or use booster cables or adjust poor connections without proper instruction and training. Keep vent caps tight and level.

Causes Severe Burns

Contains sulfuric acid. Avoid contact with skin, eyes or clothing. In event of an accident, flush with water and call a physician immediately. Keep out of reach of children.

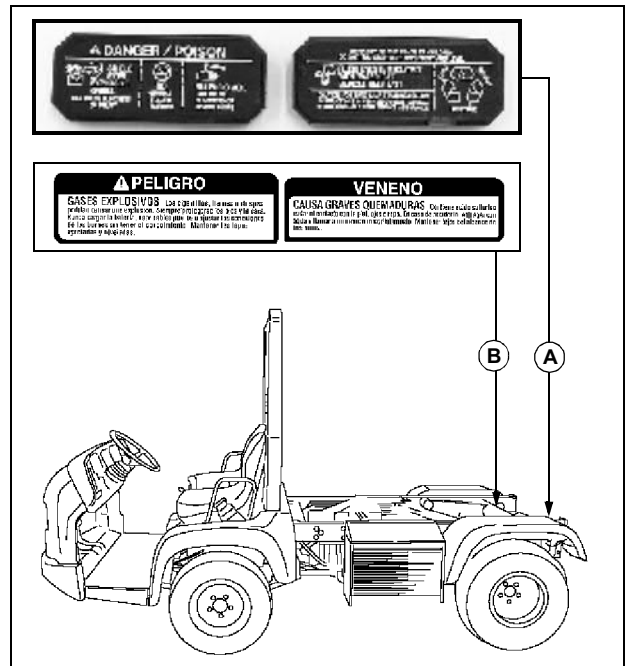

CONTROLS

 
Dash and Foot Controls

- A - Instrument Panel
- B - Horn
- C - Light Switch
- D - Key Switch
- E - Clutch Pedal
- F - Brake Pedal
- G - Accelerator Pedal



Console and Miscellaneous Controls

- A - Gear Shift Lever
- B - 5th Gear Lockout Switch
- C - Park Brake Lever
- D - Differential Lock Lever
- E - Hydraulic PTO Lever (Optional)
- F - Lift Cylinder Lever
- G - Passenger Seat Adjustment Lever
- H - Operator Seat Adjustment Lever
- I - Seat Belt

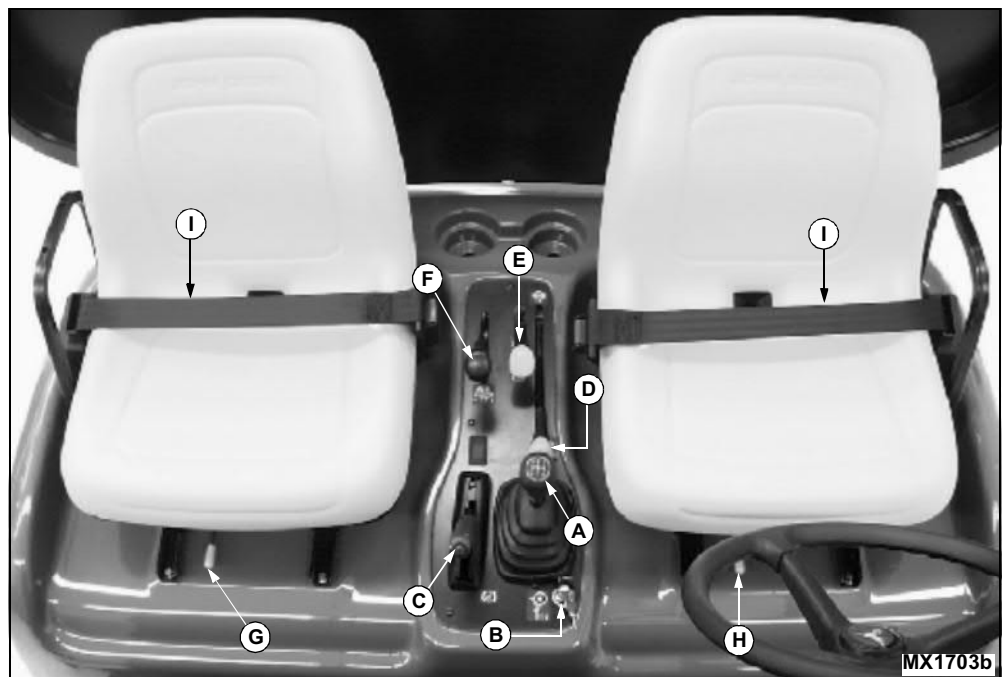

OPERATING

Operate Safely

- View the videotape provided with the vehicle for safe operating practices.
- DO NOT misuse the ProGator® Utility Vehicle, it is a utility vehicle NOT a recreation vehicle.
- Sit on the center of the seat and keep both feet within the foot platform perimeter. Clean foot platform if dirty, and remove any debris from around foot controls.
- Check for debris or refuse in the battery storage compartment, especially around brake linkage which attaches to axle housing on each side of the transaxle.
- Always use both hands for steering.
- Know location of controls and how and what they operate.
- Never operate utility vehicle while standing.
- Never operate utility vehicle with the cargo box or any attachment raised.
- Check brake action before beginning vehicle operation. Adjust or service the brakes as necessary.
- To provide adequate braking ability and traction, DO NOT tow any attachment or loaded trailer unless the utility vehicle cargo box is loaded.
- Inspect vehicle before operating. Be sure hardware is tight. Repair or replace damaged, badly worn, or missing parts. Be sure guards and shields are in good condition and fastened in place. Make any necessary adjustments before operating.
- Keep people and pets out of the work area. Stop the vehicle if anyone enters the area. If an object is hit, stop and inspect the vehicle for damage. Make repairs before operating. Keep the vehicle properly maintained and in good working order.
- Keep headlight and taillight lenses clean.
- DO NOT leave vehicle unattended when it is running.
- Only operate during daylight or with good artificial light.
- Be careful of traffic when operating near or crossing roadways.
- This vehicle is NOT intended for use on highways or public roadways. It is to be used for off-road use only.
- Avoid sudden starts, stops, or turns.

Buy Now



Our support email:

ebooklibonline@outlook.com