

240 and 265 Lawn and Garden Tractors

(Serial No. 130001 -)

**John Deere Horicon Works
OMM114669 Issue H1
(Mark old manual OMM96102 G0 for
machines up to Serial No. 130000)**

LITHO IN U.S.A.
ENGLISH

Introduction

THANK YOU for purchasing a John Deere product.

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specifications section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

TIRE WARRANTY—John Deere warranty applies for tires available through the John Deere parts system. For tires not available through the John Deere parts system, the tire manufacturer's warranty applicable to your machine may not apply outside the U.S. (See your John Deere dealer for specific information.)



M41174
-UN-06SEP88

Contents

	Page		Page
Safety	1	Dismounting to Inspect or Unplug Mower	41
Safety Signs	10	Using Correct Blades	42
Controls	14	Using Front Weights	42
Operating Engine		Using Rear Weights	43
Starting Engine	16	Mowing, Bagging, and Mulching	
Cold Weather Starting	19	The Basics of Blade Cutting	44
Checking Indicator Lights	19	Mowing for a Better Lawn	46
Warming and Idling Engine	20	Thatch	46
Stopping Engine	20	Preventing Uneven Cut	47
Driving Tractor		Mowing Tall Grass	47
Avoid Damage to Painted Surfaces	21	Operating Bagging Attachment	48
Using Park Brake	21	Removing and Emptying Bags	49
Using Hydrostatic Transmission (265)	22	Bolt-On Lip Sections (38-Inch)	51
Using Gear Transmission (240)	23	Bolt-On Lip Sections (48-Inch)	52
Using Tilt Steering (265)	23	Bagging and Composting Tips	53
Using Headlights	24	Mulching	54
Stopping Gear Tractor (240)	24	Transporting	55
Stopping Hydrostatic Tractor (265)	24	Fuels and Lubricants	57
Emergency Stopping	25	Troubleshooting	62
Wheel Spacing	25	Service	
Installing Chains on Tires	26	John Deere Parts—Your Best Choice	67
Operating Mower		Service Intervals	68
Operate Mower Safely	28	Service—Miscellaneous	
Using Lift Lever to Raise and Lower Mower	29	Checking Tire Pressure	69
Before Adjusting Lift Spring	30	Testing Safety System	70
Adjusting Lift Spring	31	Service—Engine	
Adjusting Mower Level	32	Checking Engine Oil Level	73
Adjusting 48-Inch Mower Rear Gauge Wheels (Side-to-Side)	33	Cleaning Air Intake Screen	73
Measuring Mower Level (Front-to-Rear)	34	Checking and Cleaning Precleaner and Air Cleaner Element	74
Adjusting Cutting Height	36	Changing Engine Oil and Filter	75
Adjusting Gauge Wheels (38-Inch)	38	Replacing Fuel Filter	77
Adjusting Gauge Wheels (48-Inch)	39		
Engaging Mower	39		
Stopping Mower	41		

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMM114669 H1-19-01AUG91

COPYRIGHT© 1991
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual

	Page		Page
Service—Electrical		Crime Prevention	116
Checking Battery Electrolyte Level	78	Assembly	117
Checking Spark Plug(s)	80	Specifications	122
Cleaning or Replacing Battery	81	Index	
Charging Battery	84		
Using Booster Battery	86		
Replacing Fuses	86		
Replacing Headlight Bulb	87		
Replacing Indicator Light Bulb	87		
Service—Transmission/Transaxle			
Checking Hydrostatic Transmission Oil Level (265)	88		
Checking Transaxle Oil Level (240)	89		
Changing Hydrostatic Transmission Oil and Filter (265)	89		
Checking Hydrostatic Shift Lever Adjustment (265)	91		
Service—Steering			
Lubricating Front Wheel Spindles	92		
Checking Steering Sector Oil	92		
Adjusting Steering	93		
Service—Mower and Blades			
Lubricating Mower Blade Spindles	94		
Lubricating Rear Gauge Wheels (48-Inch Mower)	94		
Cleaning or Replacing Mower Drive Belt	95		
Cleaning or Replacing Mower Deck Belt (38-Inch Mower)	96		
Cleaning or Replacing Mower Deck Belt (48-Inch Mower)	98		
Checking Mower Blades	99		
Sharpening Blades	99		
Balancing Blades	100		
Removing and Installing Mower Blades	101		
Removing Mower			
38-Inch Mower	102		
48-Inch	103		
Installing Mower			
38-Inch Mower	107		
48-Inch Mower	109		
Storage	112		
Attachments	115		

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-04JUN90

T81389 -UN-07DEC88

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-04JUN90

TS187 -19-30SEP88


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

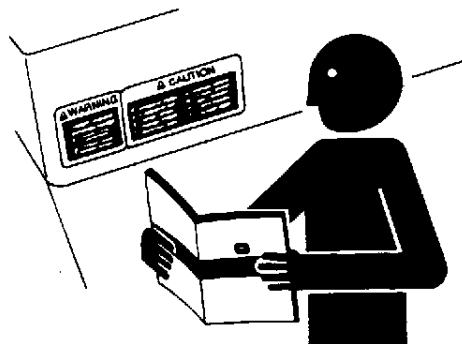

DX,READ -19-04JUN90

TS201 -UN-23AUG88

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com