

**LX172, LX176,
LX178, and LX188
Lawn Tractors**
(Serial No. 040001—)

John Deere Horicon Works
OMM115211 Issue H2
(This manual replaces OMM115211 H1.)

LITHO IN U.S.A.
ENGLISH

Introduction

THANK YOU for purchasing a John Deere product.

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specifications section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

TIRE WARRANTY—John Deere warranty applies for tires available through the John Deere parts system. For tires not available through the John Deere parts system, the tire manufacturer's warranty applicable to your machine may not apply outside the U.S. (See your John Deere dealer for specific information).



M72170
-UN-24JUL90

Contents

	Page		Page
Safety	1	Dismounting to Inspect or Unplug Mower	39
Controls	13	Mowing, Bagging, and Mulching	40
Operating the Engine		Transporting	51
Checking Engine Oil Level	16	Fuels and Lubricants	
Filling Fuel Tank	17	Engine Oil	53
Starting Engine (LX172)	17	Grease	53
Starting Engine (LX176, LX178 and LX188)	19	Handle Fuel Safely—Avoid Fires	54
Cold Weather Starting	21	Before Refueling Tractor	55
Checking Indicator Lamps	21	Refueling Tractor Safely	55
Warming and Idling Engine	22	Fuel Recommendations	56
Stopping Engine	23	Filling Fuel Tank	56
Driving the Tractor		Hydrostatic Transmission Oil	56
Adjusting Seat	24	Troubleshooting	57
Using Park Brake	25	Service	
Using Gear Transmission Tractor (LX172)	26	John Deere Parts—Your Best Choice	62
Stopping Gear Transmission Tractor (LX172)	27	Service Intervals	64
Using and Stopping Hydrostatic Transmission (LX176, LX178 and LX188)	27	Service—Miscellaneous	
Using Weights and Tire Chains	28	Checking Tire Pressure	65
Installing Tire Chains	28	Testing Safety Systems	65
Operating the Mower		Adjusting Hood Latch	68
Avoid Injury From Rotating Blades	31	Lubricating Wheel Spindles	68
Operate Mower Safely	31	Service—Engine	
Using Lift Lever to Raise and Lower Mower	32	Checking Engine Oil Level	69
Adjusting Cutting Height	33	Cleaning Air Intake Screen	70
Adjusting Mower Wheels (38-Inch)	34	Checking and Cleaning Precleaner and Air Cleaner Element	71
Adjusting Mower Wheels (48-Inch)	35	Changing Engine Oil (LX172 and LX176)	73
Adjusting Mower Level (Side-To-Side)	36	Changing Engine Oil (LX178 and LX188)	74
Adjusting Mower Level (Front-To-Rear)	37	Replacing Fuel Filter	75
Engaging Mower	38	Adjusting Carburetor Idle Mixture Screw (LX172 and LX176)	76
Disengaging Mower	39		
Using Correct Blades (38-Inch Mower)	39		

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMM115211 H2-19-29JUL92

COPYRIGHT© 1992
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright 1991, 1990 Deere & Company

	Page		Page
Adjusting Carburetor Idle Mixture Screw (LX178 and LX188)	77	Attachments	109
Service—Electrical		Assembly	110
Charge The Battery Safely	78	Specifications	118
Charging Rates	79	Index	
Checking Battery Electrolyte Level	80		
Checking Spark Plug	81		
Cleaning or Replacing Battery	82		
Using Booster Battery	84		
Replacing Fuses	84		
Replacing Headlight Bulb	85		
Cleaning Headlight Lens	85		
Replacing Indicator Light Bulb	86		
Service—Transmission			
Checking Hydrostatic Transmission Oil Level (LX176, LX178 and LX188)	87		
Service—Cooling System			
Checking Coolant Level (LX178 and LX188)	88		
Draining Cooling System (LX178 and LX188)	88		
Flushing Cooling System (LX178 and LX188)	90		
Filling Cooling System (LX178 and LX188)	91		
Service—Mower and Blades			
Lubricating Mower Blade Spindles (38-Inch)	92		
Lubricating Mower Blade Spindles (48-Inch)	92		
Lubricating Mower Rear Wheels (48-Inch)	92		
Cleaning or Replacing Mower Drive Belt	93		
Cleaning or Replacing Mower Deck Belt (38-Inch)	94		
Cleaning or Replacing Mower Deck Belt (48-Inch)	95		
Checking Mower Blades	96		
Removing and Installing Mower Blades	97		
Sharpening Blades	98		
Balancing Blades	98		
Removing Mower	99		
Installing Mower	103		
Storage	106		

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-04JUN90

T81389 -UN-07DEC88

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-09JAN92

TS187 -19-30SEP88


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

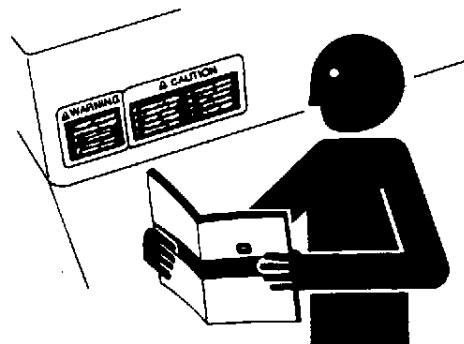

DX,READ -19-04JUN90

TS201 -UN-23AUG88

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com