

TRS22
Walk-Behind
Snowblowers
(Serial No. 120001—)

John Deere Horicon Works
OMM117853 Issue G2

LITHO IN U.S.A.
ENGLISH

Introduction

THANK YOU for purchasing a John Deere product.

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalent. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the machine or implement will travel when going forward.

WRITE PRODUCT IDENTIFICATIONS NUMBERS (P.I.N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied.

TIRE WARRANTY—John Deere warranty applies for tires available through the John Deere parts system. For tires not available through the John Deere parts system, the tire manufacturer's warranty applicable to your machine may not apply outside the U.S. (See your John Deere dealer for specific information.)



TRS22 Snowblower

M71546
-JUN-12JUN92

MX,IFC,117853 -19-12JUN92

Contents

	Page		Page
Safety	1	Cleaning Fuel Cap Vents	36
Controls	9	Replacing Fuel Filter	37
Operating the Engine		Storage	
Starting the Engine	10	Assembly	40
Starting the Engine—Optional Electric Start	12	Specifications	45
Stopping the Engine	13	Record Identification Numbers	46
Operating the Snowblower		Index	
Adjusting Skids	14		
Using Speed Selector Lever	15		
Using Drive Control Levers	16		
Using Wheel Lockout	16		
Using Chute and Spout Control	17		
Stopping the Snowblower	17		
Emergency Stopping	18		
Snowblower Tips	18		
Fuels and Lubricants	19		
Troubleshooting	21		
Service	22		
Service Intervals	22		
Checking Hardware	23		
Checking Engine Oil	23		
Changing Engine Oil	24		
Adjusting Auger Drive Belt	25		
Cleaning and Gapping Spark Plug	27		
Checking Tire Pressure	27		
Adjusting Traction and Auger Drive Cable	28		
Adjusting Belt Guides	29		
Replacing Auger Drive Belt	30		
Replacing Traction Drive Belt	31		
Replacing Shear Bolt	33		
Adjusting Chute Worm Drive	33		
Adjusting Carburetor	34		
Adjusting Friction Wheel	35		
Reversing Scraper Blade	36		

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMM117853 G2-19-12JUN92

COPYRIGHT© 1992
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-04JUN90

T81389 -UN-07DEC68

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-09JAN92

TS187 -19-30SEP88


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

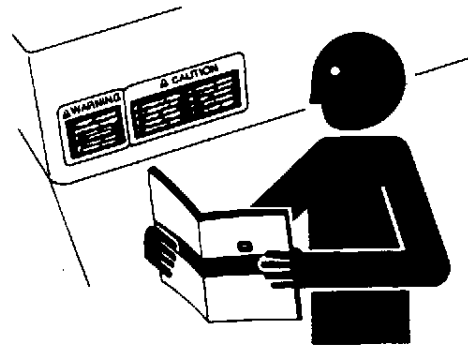

DX,READ -19-04JUN90

TS201 -UN-23AUG88



OPEI CERTIFICATION

This OPEI label on your snow thrower indicates that this model has been certified by an independent laboratory for compliance with American National Standard B-71.3-1984, "Safety Specifications" for Snowthrowers.



DX,CERT2 -19-04JUN90

TS289 -19-07OCT88

INSPECT SNOWBLOWER BEFORE YOU USE IT

Check hardware. Keep it tight.

Keep snowblower clean.

Replace missing parts.

Repair damaged or badly worn parts.

Guards and shields must be in good condition and fastened in place.

Make adjustments before you operate.

MX,SAHM,A -19-12JUN92

PROTECT FROM THROWN OBJECTS

Before snow falls clear work area of objects that might be picked up and thrown by snowblower.

Keep people and pets out of work area. Keep children in the house when you are operating the snowblower.

Do not blow snow toward people, cars, or buildings.

BE EXTREMELY CAREFUL IF YOU MUST CLEAR SNOW FROM A GRAVEL PATH:

- During operation the blower turns 1320 times per minute (rpm). It can throw gravel—or other objects—with great force, and cause serious face, eye, or bodily injury.
- Adjust skids lower so scraper blade is well above gravel.
- Be aware that snowblower may pick up gravel in snow. Adjust spout angle carefully to blow this snow safely.



MX,SAHM,B -19-12JUN92

IM41423 -UN-30AUG88

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com