

60, 70, and 70A Loaders

(Serial No. 110,001 –)

OPERATOR'S MANUAL

**John Deere
Lawn & Grounds Care Division
OMM120877 L3**

North American Version
Litho in U.S.A
English

TABLE OF CONTENTS

	Page
Safety Signs	
Safety-Alert Symbol.....	1
Loader Safety Labels.....	1
Preparing The Vehicle	
Preparing Tractor.....	2
Rear Ballast.....	3
Ballast Box.....	4
Rear Wheel Weights.....	4
Installing	
Park Vehicle Safely.....	6
Avoid High Pressure Fluids	6
Installing Loader	7
Removing	
Park Vehicle Safely.....	10
Avoid High Pressure Fluids	10
Removing Loader	11
Operating	
Operate Machine Safely	14
Operate Loader Safely.....	15
Use Seat Belt Properly	16
Keep Riders Off	16
Avoid Power Lines.....	16
Dig Safely	17
Wear Appropriate Clothing	17
Operating Loader Control Levers (650 And 750 Tractors).....	18
Operating Loader Control Lever (655, 755, 855, And 955 Tractors).....	18
Operating Loader Control Lever (670 And 770 Tractors).....	19
Removing Material From Pile	19
Forward Leveling	20
Reverse Leveling	20

TABLE OF CONTENTS

	Page
Loading Operations	21
Digging Or Peeling	21
Backfilling.....	22
Cleaning Concrete Surfaces	22
Operating Optional Equipment	
Ballast Box	23
Materials Buckets.....	23
Converting Materials Bucket To Manure Bucket	24
Service Machine Safely	
Practice Safe Maintenance	26
Wear Appropriate Clothing.....	27
Avoid High Pressure Fluids.....	27
Service	
Service Intervals.....	28
Grease	28
Lubricate Boom, Bucket, And Lift Cylinders.....	29
Check Transmission/Hydraulic Oil Level.....	29
Adjust Wedges	30
Adjust Latch Rods	31
Troubleshooting	
Using Troubleshooting Chart	32
Storing Loader	
Storing Safety.....	34
Storing Loader.....	34
Assembly	
Install Wire-Form Hose Retainer.....	35
Install Bucket.....	35
Install And Adjust Loader To Tractor.....	37
Install Restrictor—Loader On 670 Tractor Only	41
70A Loader Restricters	41

TABLE OF CONTENTS

	Page
Specifications	
60 Loader Specifications	42
70 and 70A Loader Specifications	45
Recommended Lubricants.....	49
John Deere Service Literature	
Order Form	51

All information, illustrations and specifications in this manual are based on the latest information at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT© 1993
John Deere Horicon Works
All rights reserved
Previous Editions
COPYRIGHT© 1991

SAFETY SIGNS


Safety-Alert Symbol

Read and recognize safety information. Be alert to the potential for personal injury when you see this safety-alert symbol.


On your machine safety labels, the words DANGER, WARNING, and CAUTION are used with this safety-alert symbol. DANGER identifies the most serious hazards. In this manual, the word CAUTION and this symbol call attention to safety messages.



Loader Safety Labels

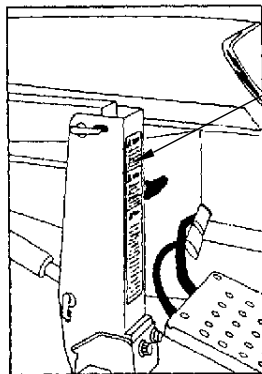

▲WARNING

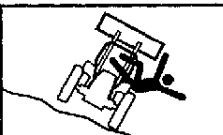

Tractor rollover from instability can cause serious injury or death.

- Add recommended rear wheel and rear tractor ballast.
- Move rear wheels to widest setting.
- Transport with liftarms at low position.
- Operate and turn at slow speeds.
- Use of ROPS and seat belt is recommended.

▲WARNING

Falling loads can cause serious injury or death. Do not handle round bales, loose or shiftable loads with this loader.

▲WARNING

Electrical shock can cause serious injury or death. Avoid contact with overhead and underground electric lines.

▲CAUTION

- Lock loader latches before operating.
- Lower loader to ground when parked.
- Do not stand or work under raised loader.
- Do not work from raised loader.
- Keep others off loader and attachments.
- Before servicing, adjusting equipment or disconnecting oil lines:
 - a) Lower loader to ground or support liftarm.
 - b) Shut off engine and relieve hydraulic pressure.
- Observe safety recommendations in Loader Operator's Manual.

C.C.

M61559

PREPARING THE VEHICLE

Preparing Tractor

- C CAUTION:** To help prevent personal injury, do **ALL** of the following when you prepare loader for operation:
- Put rear wheels in widest position: rims dished out.
 - Add fluid to rear tires.
 - Put correct number of weights on rear wheels.
 - Install ballast box and fill it with dry sand.
 - Check tire inflation.

1. Install loader mounting kit and SCV kit. Instructions are included with each kit.

• 60 LOADER MOUNTS ON:

- 650 Tractor
- 655 Tractor
- 670 Tractor

• 70 LOADER MOUNTS ON:

- 750 Tractor
- 755 Tractor
- 770 Tractor

• 70A LOADER MOUNTS ON:

- 855 Tractor
- 955 Tractor

2. Put rear wheels in widest position— rims dished out— to help make tractor more stable. Before you mow with loader attached, you may have to put wheels in narrow position.

Buy Now



Our support email:

ebooklibonline@outlook.com