TRS22 Walk-Behind Snowblower

(Serial No. 140001 –

OPERATOR'S MANUAL

John Deere Lawn & Grounds Care Division OMM122054 H5

North American Version Litho in U.S.A English

INTRODUCTION

THANK YOU for purchasing a John Deere product.

Read this manual and your attachment manuals thoroughly. Failure to do so could result in personal injury or equipment damage.



WARNING: The Engine Exhaust from this C product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

CALIFORNIA Proposition 65 Warning

This manual should be considered a permanent part of your machine and should remain with the machine when you sell it.

Measurements in this manual are metric units and their U.S. customary equivalents. RIGHT-HAND and LEFT-HAND sides are determined by facing in the direction the machine will travel when going forward. When you see a broken line arrow (- - - →) it indicates the part it is pointing to is hidden.

Record identification numbers below. Be sure to record all the numbers to help in tracing the machine if it is stolen. You also need to give these numbers to your dealer when you order parts.

Date of Purchase:	Dealer Name:	Phone:
	Engine M	lodel Number:
	Machine	e Serial Number:

TABLE OF CONTENTS

	_
Pag Sofoty Signs	је
Safety Signs	
Safety-Alert Symbol1	
Machine Safety Labels1	
Certification Label	2
Controls	
Snowblower Controls	3
Engine Controls	
Operating	
Operate Safely4	1
Rotating Blades Are Dangerous - Protect Children	
And Prevent Accidents	
Wear Appropriate Clothing	
Adjusting Skids	
Using Speed Selector Lever	
Using Drive Control Lever	
Using Fuel Shutoff Knob	
Starting Engine	
Electric Start (Optional Equipment)	
Stopping Engine	
Emergency Stopping	
Using Chute And Spout Controls	
Daily Operating Checklist	
Avoid Damage To Plastic And Painted Surfaces	
Snowblowing Tips	
Service Machine Safely	
Practice Safe Maintenance	7
Wear Appropriate Clothing 17	
Avoid Injury From Moving Parts18	
Handling Waste Products18	3

TABLE OF CONTENTS

Service	Page
Service Intervals	
Engine Oil	
Grease	
Checking Engine Oil	
Changing Engine Oil	
Gapping Spark Plug	25
Adjusting Carburetor	25
Checking Gearbox Lubricant	26
Cleaning Fuel Cap Vents	27
Adjusting Auger Drive Belt	28
Adjusting Belt Guides	29
Replacing Auger Drive Belt	30
Replacing Traction Drive Belt	31
Adjusting Friction Wheel	33
Replacing Shear Bolt	
Reversing Scraper Blade	35
Replacing Fuel Filter	35
Adjusting Traction And Auger Drive Cable	36
Lubricating Friction Disc Hub	36
Lubricate Auger Shaft	37
Lubricate Wheel Axle	37
Filling Fuel Tank Safely	38
Filling Fuel Tank	39
Fuel Recommendations	
Check Tire Pressure	40
Troubleshooting	
_	11
Using Troubleshooting Chart	41
Storing Machine	
Storing Snowblower Safely	44
Storing Snowblower Salery	
Removing Snowblower From Storage	
Tromoving onowbiowor i form olorage	40

TABLE OF CONTENTS

	Page
Assembly	J
Adjustments	47
Install Handlebars	
Install Chute Crank	
Install Auger And Traction Drive Cable Ends	
Install Chute	
Check Tire Pressure	
Adjust Skid Height	
Add Engine Oil	51
Specifications	
Engine	52
Machine	52
Auger	
Blower	
Recommended Lubricants	53
Warranty Information	
Product Warranty	54
John Deere Service Literature Available	
Order Form	55

All information, illustrations and specifications in this manual are based on the latest information at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT© 1995
John Deere Horicon Works
All rights reserved
Previous Editions
COPYRIGHT© 1994 and 1992

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com