
## 45 BP Backpack Blower

(Serial No. 010001 –

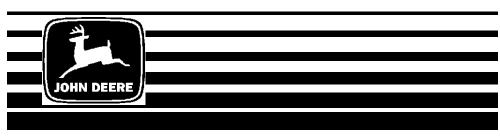

# OPERATOR'S MANUAL

John Deere Lawn & Grounds Care Division OMM122066 H4

North American Version Litho in U.S.A English

#### INTRODUCTION

### THANK YOU for purchasing a John Deere product.

Read this manual and your vehicle manual thoroughly. Failure to do so could result in personal injury or equipment damage.



This manual should be considered a permanent part of your machine and should remain with the machine when you sell it.

Measurements in this manual are U.S. customary units and their metric equivalents. RIGHT-HAND and LEFT-HAND sides are determined by facing in the direction the machine will be used.

Product warranty is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The product warranty is explained on the warranty certificate you received from your dealer.

Record identification numbers below. Be sure to record all the numbers to help in tracing the machine if it is stolen. You also need to give these numbers to your dealer when you order parts.

Date of Purchase:	Dealer Name:	Phone:
Serial Number:		

## **TABLE OF CONTENTS**

Page	=
Safety	=
Safety-Alert Symbol 1	
Machine Safety Labels	
Safety3	
Wear Appropriate Clothing4	
Reduce Noise4	
Reduce Chances Of Damage5	
Operating	
Learning Controls	
Starting Cold Engine8	
Starting A Warm Engine	
Stopping the Engine	
Strapping Blower to Operator	
Operating Blower	
Service	
Practice Safe Maintenance	
Wear Appropriate Clothing	
Handling Fuel	
Engine Oil	
Mixing Fuel	
Storing Fuel	
Filling Fuel Tank	
Cleaning Air Cleaner	
Adjusting Carburetor	
Initial Adjustment	
Low Speed Adjustment	
High Speed Adjustment	
Idle Speed	
Engine Cover	
Checking Spark Plug	
Engine Cooling and Cylinder Fin Maintenance	
Muffler and Exhaust Port	
Fuel Strainer	
Cleaning Fuel Tank Cap Vent	

## TABLE OF CONTENTS

	Page
Troubleshooting	
Using Troubleshooting Chart	27
Storing Machine	
Storing Safety	30
Storing For a Short Time	
Long Term Storage	30
Assembly	
Assemble Pipes	32
Specification	
Engine	34
Fuel System	34
Ignition System	
Capacities	34
Blowern	35
Order Form	37

All information, illustrations and specifications in this manual are based on the latest information at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT© 1994 John Deere Horicon Works All rights reserved

## **SAFETY SIGNS**

## **Safety-Alert Symbol**

Read and recognize safety information. Be alert to the potential for personal injury when you see this safety-alert symbol.

On your machine safety labels, the words DANGER, WARNING, and CAUTION are used with this safety-alert symbol. DANGER identifies the most serious hazards. In this manual, the word CAUTION and this symbol call attention to safety messages.



### **Machine Safety Labels**

Read and understand all safety messages in the operator manual before using this machine.

Always wear eye and ear protection when operating this machine. Permit only the operator in the area of operation. Never point air pipe at people or pets. To prevent spillage do not fill the fuel tank to top. Secure fuel cap before starting engine. To maintain best control of machine start engine while unit is on the ground and the harness is not attached to the operator.

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com