

JOHN DEERE
WORLDWIDE COMMERCIAL & CONSUMER
EQUIPMENT DIVISION

**Quick Hitch Broom for X400/X500 and
X700 Series**

60

SN (010001-)

OMM144943 G9

OPERATOR'S MANUAL



JOHN DEERE

Original Instruction

All information, illustrations and specifications in this manual are based on the latest information at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT© 2009

Deere & Co.

**John Deere Worldwide Commercial and
Consumer Equipment Division**

All rights reserved

Previous Editions

COPYRIGHT© 2001

North American Version

Litho in U.S.A.

INTRODUCTION

Introduction

Thank You for Purchasing a John Deere Product

We appreciate having you as a customer and wish you many years of safe and satisfied use of your machine.

Using Your Operator's Manual

This manual is an important part of your machine and should remain with the machine when you sell it.

Reading your operator's manual will help you and others avoid personal injury or damage to the machine. Information given in this manual will provide the operator with the safest and most effective use of the machine. Knowing how to operate this machine safely and correctly will allow you to train others who may operate this machine.

If you have an attachment, use the safety and operating information in the attachment operator's manual along with the machine operator's manual to operate the attachment safely and correctly.

This manual and safety signs on your machine may also be available in other languages (see your authorized dealer to order).

Sections in your operator's manual are placed in a specific order to help you understand all the safety messages and learn the controls so you can operate this machine safely. You can also use this manual to answer any specific operating or servicing questions. A convenient index located at the end of this book will help you to find needed information quickly.

The machine shown in this manual may differ slightly from your machine, but will be similar enough to help you understand our instructions.

RIGHT-HAND and LEFT-HAND sides are determined by facing in the direction the machine will travel when going forward. When you see a broken line (-----), the item referred to is hidden from view.

Before delivering this machine, your dealer performed a predelivery inspection to ensure best performance.

Special Messages

Your manual contains special messages to bring attention to potential safety concerns, machine damage as well as helpful operating and servicing information. Please read all the information carefully to avoid injury and machine damage.



CAUTION: Avoid injury! This symbol and text highlight potential hazards or death to the operator or bystanders that may occur if the hazards or procedures are ignored.

IMPORTANT: Avoid damage! This text is used to tell the operator of actions or conditions that might result in damage to the machine.

NOTE: General information is given throughout the manual that may help the operator in the operation or service of the machine.

Attachments for Your Machine

There's a John Deere attachment or kit to make your new machine perform more tasks or be more versatile, whether your machine is a lawn tractor or compact utility tractor or a utility vehicle.

You can check out the entire line of attachments for your machine at JohnDeere.com or ask your John Deere dealer. From aerators to electric lift kits to tillers, there's a John Deere attachment or kit to fill every need.

Product Identification

Product Compatibility

This broom is designed for use with the X400, X500, and X700 Ultimate Series Lawn and Garden Tractors.

Record Identification Numbers

Heavy Duty Rotary Broom

60 Serial No. (010001 -)

If you need to contact an Authorized Service Center for information on servicing, always provide the product model and identification numbers.

You will need to locate the identification numbers for the product. Record the information in the spaces provided below.



MX12608

DATE OF PURCHASE:

DEALER NAME:

 
DEALER PHONE:

SERIAL NUMBER (A):

Safety

Read Safety in Machine Operator's Manual

Read the general safety operating precautions in your machine operator's manual for additional safety information.

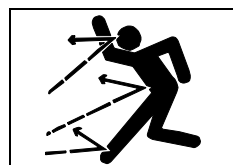

Operate Safely

- Read the machine and attachment operator's manual carefully. Be thoroughly familiar with the controls and the proper use of the equipment. Know how to stop the machine and disengage the controls quickly.

- Only allow responsible adults, who are familiar with the instructions to operate the machine.

- Never direct the discharge at bystanders or allow anyone to stand in front of the unit.

SAFETY

- Never operate the broom near glass enclosures, automobiles, window wells, or drop-offs without first adjusting the angle and direction of the discharge.
- Inspect machine before you operate. Be sure hardware is tight. Repair or replace damaged, badly worn, or missing parts. Be sure guards and shields are in good condition and fastened in place. Make any necessary adjustments before you operate.
- Clear work area of objects that might be thrown. Keep people and pets out of the work area. Stop machine if anyone enters the area.
- If you hit an object, stop the machine and inspect it. Make repairs before you operate. Keep machine properly maintained and in good working order. Keep all shields and guards in place.
- Use recommended ballast.
- Do not leave machine unattended when it is running.
- Do not operate machine when you are tired or ill or under the influence of drugs or alcohol.
- Only operate during daylight or with good artificial light.
- Look behind machine before you back up. Back up carefully.
- Do not let anyone, especially children, ride on machine or attachment. Riders are subject to injury such as being struck by foreign objects and being thrown off. Riders may also obstruct the operator's view, resulting in the machine being operated in an unsafe manner.
- Use extreme caution when operating on or near gravel drives, walks, or roads. Stay alert for hidden hazards or traffic.
- Do not wear radio or music headphones while operating the machine. Safe operation requires your full attention.
- Slow down before turning. Avoid sudden turns.
- Don't operate near drop-offs, ditches or embankments.

Parking Safely

1. Stop machine on a level surface, not on a slope.
2. Disengage PTO and stop attachments.
3. Lower attachments to the ground.
4. Lock park brake.
5. Stop engine.
6. Remove key.
7. Wait for engine and all moving parts to stop before you leave the operator's station.
8. Close fuel shut off valve before servicing the fuel system, if your machine is equipped.
9. Disconnect the battery ground cable before making repairs to electrical system or doing any welding.

Stay Clear of Rotating Drivelines

Entanglement in rotating driveline can cause serious injury or death.

- Wear close fitting clothing.
- Stop the engine and be sure PTO driveline is stopped before getting near it.

Practice Safe Maintenance

- Only qualified, trained adults should service this machine.
- Understand service procedure before doing work. Keep area clean and dry.

- Do not operate the engine in a confined space where dangerous carbon monoxide fumes can collect.
- Never lubricate, service or adjust the machine or attachment while it is moving. Keep safety devices in place and in working condition. Keep hardware tight.
- Keep hands, feet, clothing, jewelry, and long hair away from any moving parts, to prevent them from getting caught.
- Lower any attachment completely to the ground or to an existing attachment mechanical stop before servicing the attachment. Disengage all power and stop the engine. Lock park brake and remove the key. Let machine cool.
- Disconnect battery or remove spark plug wire (for gasoline engines) before making any repairs.
- Before servicing machine or attachment, carefully release pressure from any components with stored energy, such as hydraulic components and springs.
- Release hydraulic pressure by lowering attachment or cutting units to the ground or to a mechanical stop and move hydraulic control levers.
- Securely support any machine or attachment elements that must be raised for service work. Use jack stands or lock service latches to support components when needed.
- Never run engine unless park brake is locked.
- Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Replace all worn or damaged safety and instruction decals.
- Check all hardware at frequent intervals to be sure the equipment is in safe working condition.
- Do not modify machine or safety devices. Unauthorized modifications to the machine or attachment may impair its function and safety.



Avoid High Pressure Fluids

- Hydraulic hoses and lines can fail due to physical damage, kinks, age, and exposure. Check hoses and lines regularly. Replace damaged hoses and lines.
- Hydraulic fluid connections can loosen due to physical damage and vibration. Check connections regularly. Tighten loose connections.
- Escaping fluid under pressure can penetrate the skin causing serious injury. Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.
- Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.
- If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A. Information may be obtained in the United States and Canada only by calling 1-800-822-8262.

INSTALLING

Installing

Preparing the Tractor

Tractor Requirements

Tractor must be equipped with the following options to complete installation of the broom:

- Hydraulic selective control valve.
- Front PTO.
- Implement driveshaft.
- Front quick hitch.
- Hydraulic angling kit.
- Front attaching support kit or hood guard kit.

Installing Ballast



CAUTION: Avoid injury! Proper ballasting is required for safe operation of the broom and the tractor. Install the correct number of weights to help maintain tractor steering control and stability. Remove ballast when the attachment is removed.

NOTE: See your machine operator's manual or your John Deere dealer for more information on rear ballast.

Install the following required ballast to each rear wheel before attaching the broom:

- One 33 kg (72 lb) cast iron rear wheel starter weight.
- Two 23 kg (50 lb) cast iron rear wheel weights.

 
If added traction is needed while operating broom:

- Install chains on drive tires.
- Use the differential lock.

Check Tire Pressures


Check vehicle tire pressure before operating the broom. See your tractor operator's manual for correct tire pressures.

Attaching Broom to Front Quick Hitch

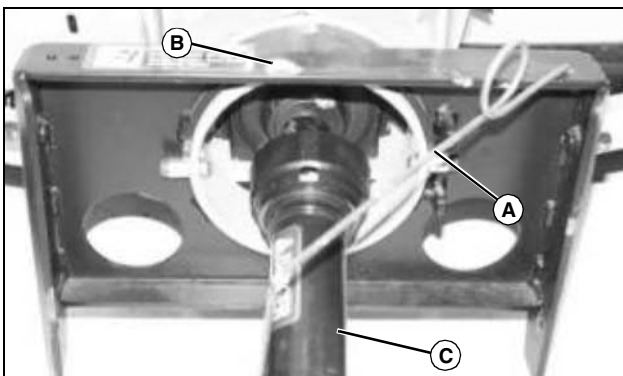

MX12609

 1. Release PTO shaft support (A) from storage hook (B) on mounting frame.
2. Swing shaft support toward center of mounting frame. Place PTO shaft (C) in the support.

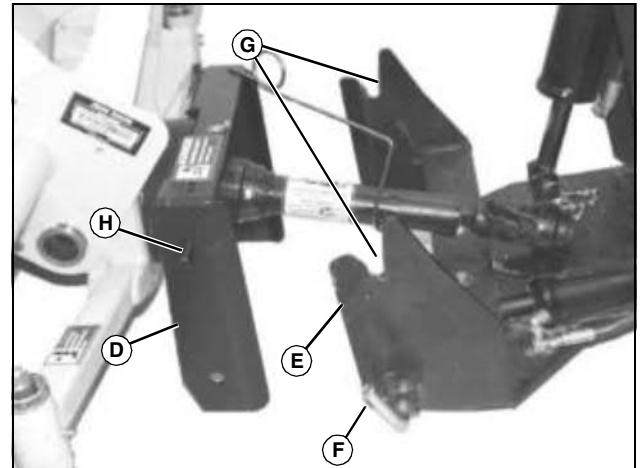


MX12619

3. Align broom mounting frame (D) with front quick hitch (E).
4. Rotate and release both L-pins (F).
5. Start the engine.
6. Push SCV control lever forward until notches (G) in front quick hitch are lower than pins (H) on mounting frame.
7. Drive machine forward slowly to engage pins (H) into notches (G).
8. Pull the SCV control lever rearward to raise front quick hitch. Make sure pins drop into notches.
9. Lower the hitch until L-pins (F) snap into holes at sides of broom mounting frame.
10. Park machine safely. (See Parking Safely in the SAFETY section.)
11. Check engagement of L-pins. Adjust as needed.

Checking and Adjusting L-Pin Engagement

IMPORTANT: Avoid damage! Broom could slide out of position on quick hitch if L-pins are not properly engaged. Check engagement of L-pins before operating and adjust as needed.

 Checking L-Pin Engagement

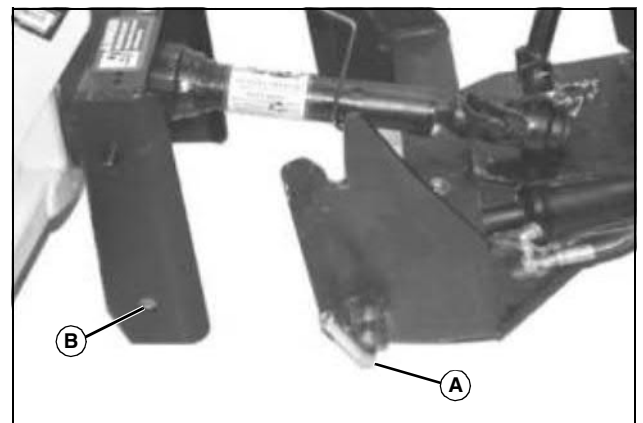

MX12619

Picture Note: Broom shown removed for clarity.

 
1. Make sure both L-pins (A) pass completely through holes (B) in broom mounting frame.
2. Push broom as far as possible to the right and left. Make sure L-pins remain in the mounting frame holes.

INSTALLING

3. Reverse the installation if L-pins disengage or do not pass completely through holes in mounting frame.

Reversing the L-Pins

1. Remove broom from front quick hitch.

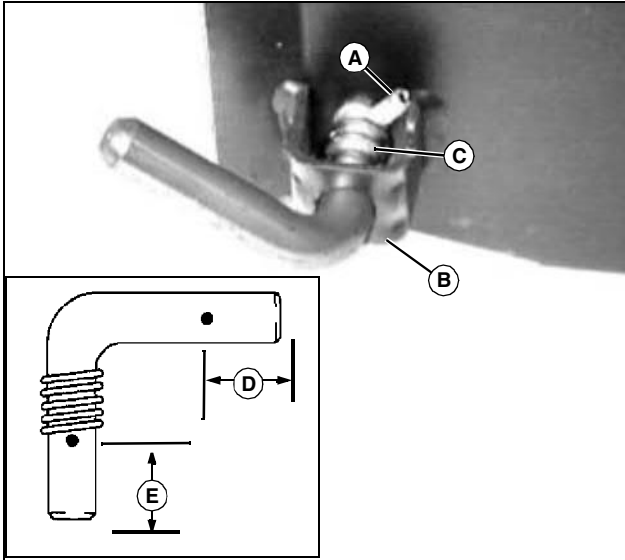

M79058

2. Remove roll pin (A) using a punch. Retain the roll pin.

3. Pull L-pin from bracket (B) and remove spring (C).

NOTE: The L-pin legs are different lengths. Leg (D) is 23 mm (0.906 in.) and leg (E) is 27 mm (1.063 in.).

4. Hold spring inside bracket. Reverse the L-pin and insert longer leg (E) through bracket and spring.

 
5. Install roll pin.

6. Repeat for other L-pin.

7. Install broom to front quick hitch.

8. Push broom as far as possible to the right and left. Make sure L-pins remain in the mounting frame holes.

Unlocking the Angle Lock

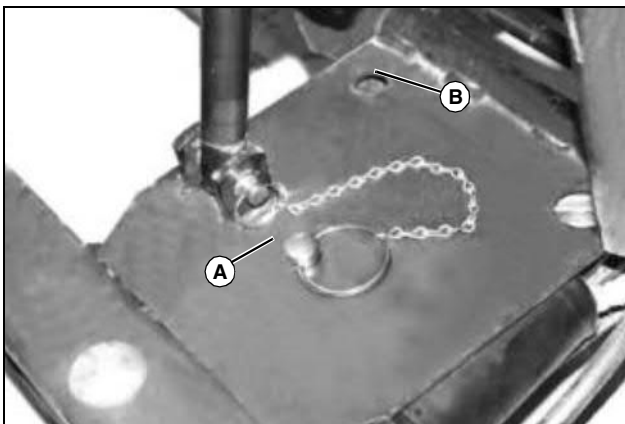

MX12616

1. Remove lock pin (A) from angle lock position in front quick hitch.

 
2. Install pin to storage position (B) to unlock the angle lock.

Connecting PTO Shaft




CAUTION: Avoid injury! Stay clear of rotating PTO shafts. Stop the engine and be sure the PTO shaft is stopped before getting near it.

IMPORTANT: Avoid damage! Failure to lock the PTO shaft support into the storage position will cause damage to the PTO shaft and support.

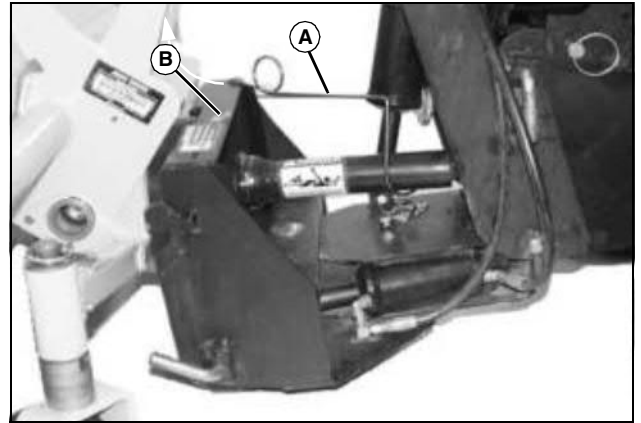

MX12620

 1. Lift the PTO shaft from PTO shaft support (A). Latch the shaft support in storage hook (B) on mounting frame.

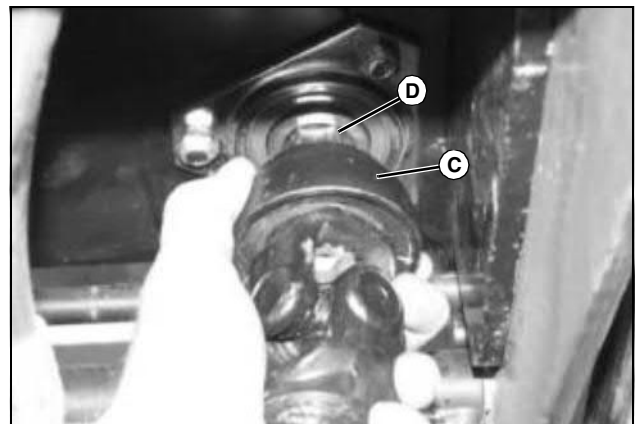

MX12618

2. Pull back collar (C) on PTO shaft coupler.

3. Align coupler splines with splines on PTO output shaft (D). Slide coupler onto PTO output shaft until collar snaps back to the locked position.

4. Move PTO shaft forward and rearward to ensure it is locked in place.

Raising Park Stands

Install broom park stands in the raised position.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com