655, 755, and 855 Tractors

John Deere Horicon Works
OMM79644 Issue B9
machines up to Serial No. (Serial No. 615,001LITHO IN U.S.A.
ENGLISH

Introduction

THANK YOU for purchasing a John Deere product.

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are U.S. customary units and their metric equivalents.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.

WRITE IDENTIFICATION NUMBERS in the Specifications section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the

machine, also file the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S.



MX,IFC,79644 -19-06FEB89

Contents

Page	Page
Safety	Fuels and Lubricants
Controls	Fuel Specifications 43 Fuel Storage 43
Prestarting Checks	Filling Fuel Tank
Operating the Engine	Diesel Engine Oil 45 Gear Case Oil 46
Starting Engine	General Purpose Grease
Engine Idling	Troubleshooting
Cold Weather Starting	Engine 48 Electrical 51 Tractor 52
Driving the Tractor	Brakes
Operator Training Required 20	Steering
Operating on Slopes 20	
Adjusting Seat	Periodic Service Chart
Using Seat Belt	Service Interval Chart
Driving the Tractor	
Using Cruise Control	Service/Break-In
Operating Differential Lock	
Using Turn Brake Pedals	Service/10-Hours or Daily
Using PTO	
Using Stationary Rear PTO (Operator Off	Service/50-Hours or Weekly 66
Seat)	
Using Rockshaft Control Lever	Service/200-Hours
Using Hydraulic Stop Valve 28	
Using Optional (SCV) Selective Control	Service/500 Hours
Valve	
Using Lights	Service/Every 2 Years
Using Mower Depth Control 30	
Stopping the Tractor	Service/As Necessary
Indicator Lights	
Using Rear Weights	Storage
Using Front Weights	O. B. (1. T)
Using Liquid Ballast	Crime Prevention Tips
Using Drawbar Hitch	Assembly
Coming of ontermion	Assembly
Transporting 41	Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMM79644 B9-19-11DEC89

COPYRIGHT© 1989
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRUCTION™ Manual

Contents

Page	
Specifications	

Predelivery Checklist

DEALER'S RECORD
Owner's Name
Address
City
StateZip
Date Sold
Skid-Steer Loader
Product Identification Number
Engine Serial Number

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com