

**316, 318 and 420
Lawn and Garden
Tractors**
(Serial No. 010001-)

John Deere Horicon Works
OMM79655 Issue J9
(This manual replaces OM-M79655 H9)

LITHO IN U.S.A.
ENGLISH

Introduction

THANK YOU for purchasing a John Deere product.

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are U.S. customary units and their metric equivalents.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS in the Specifications section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your distributor also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your distributor.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S.



M35174
-UN-29AUG88

MX,IFC,M79655 -19-12APR89

Contents

	Page		Page
Safety	1	Troubleshooting	
Controls	8	Engine	35
Operating the Engine		Tractor	38
Starting the Engine	13	Electrical System	39
Warming Engine	16	Brakes	40
Engine Idling	17	Steering	40
Stopping the Engine	17	Service	
Driving the Tractor		Hour Meter	41
Driving the Tractor	19	Removing and Installing Engine Shields	41
Using 2-Speed Axle Shift Lever—420		Service Intervals	42
Tractors Only	20	Engine Break-In	43
Operating Differential Lock—420 Tractors	22	Checking	
Using Turn Brake Pedals—318 and 420		Engine Oil Level	44
Tractors	22	Transmission Oil Level	44
Using reserve Fuel System—318 and 420		Air Cleaner Elements	45
Tractors	23	Air Intake Screens	47
Stopping Tractor	24	Safety Interlock System Checkout	
Emergency Stopping	24	Procedure	48
Operating the Lights	25	Changing Engine Oil	52
Oil Pressure Indicator	25	Checking Tire Pressure	53
Battery Discharge Indicator	25	Checking Gear Case Oil Level for Tractor	
Connecting Front Attachment Hydraulic		with 2000 RPM Rear PTO	53
Hoses	26	Lubricating	
Using Rear Weights	26	Front Wheel Spindles	54
Rear Wheel Weights—Cast Iron	26	Brake Pedal Shaft	54
Rear Wheel Weights—Plastic Shell	27	Power Steering Cylinder Ball Joint	54
Rear Weights for 3-Point Hitch	27	Drive Shaft	55
Rear Weights for Tractor Without 3-Point		Clean Engine Cooling Fins	57
Hitch	27	Changing Engine Oil Filter	57
Using Front Weight	28	Cleaning and Gapping Spark Plugs	58
Liquid Weight	28	Changing Transmission Oil and Filter	59
Maximum Weights	29	Changing Air Cleaner Element	60
Adjusting Rear Wheel Spacing	29	Checking Battery Electrolyte Level	61
Transporting	31	Changing Fuel Filter	62
Fuels and Lubricants	32	Adjusting Seat	62
		Lubricating Ball Joints on Tractors With	
		3-Point Hitch	62

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMM79655 J9-19-11DEC89

COPYRIGHT© 1989
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual

Contents


	Page
Replacing	
Headlight Bulbs	63
Taillight Bulb	63
Indicator Light Bulb	64
Lighting Circuit Fuse	65
Adjusting Transmission Shift Lever	65
Storage	66
Assembly	68
Specifications	72
Index	

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

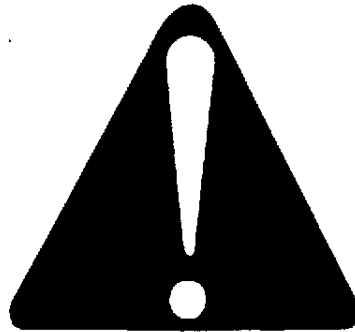

O53,ALERT -19-16JUN87


T81389 -UN-07DEC68

FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

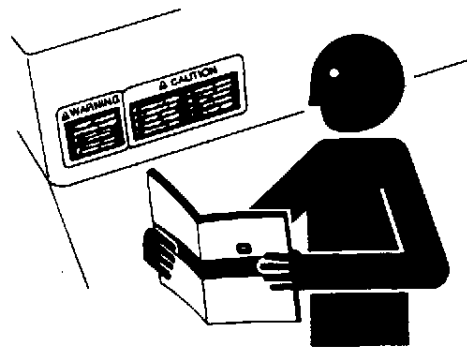

O53,READ -19-23APR87

T5201 -UN-23AUG88

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

Safety signs with signal word DANGER or WARNING are typically near specific hazards.

General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



O53,SIGNAL -19-07OCT85

T5187 -19-30SEP88

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com