

**870, 970, and 1070
Compact Utility
Tractors**
(Serial No. 100001-)

John Deere Horicon Works
OMM95327 Issue F1
(This manual replaces OMM95327 J0.)
LITHO IN U.S.A.
ENGLISH

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

W THIS MACHINE is of metric design. Measurements in this manual are metric with the customary U.S. measurement following. Use only metric hardware and tools as specified.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.

WRITE IDENTIFICATION NUMBERS in the Specifications section. Accurately record all the numbers to help in tracing the machine should it be

stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.



970 Tractor

M52821
-UN-12JAN89

Contents

| | Page | | Page |
|---|------|--|------|
| Safety | 1 | Using 3-Point Hitch | 41 |
| Controls | 11 | Adjusting Sway Links | 43 |
| Operating Engine | | Using Draft Sensing Control (1070) | 44 |
| Before Starting Engine | 12 | Using Draft Sensing Lockout | 46 |
| Starting Engine | 12 | Positioning Upper Link (1070) | 47 |
| Cold Weather Starting | 16 | Adjusting Rockshaft Feedback Linkage (1070) | 48 |
| Jump-Starting Engine | 17 | Lever Neutral Adjust Procedure | 49 |
| Observing Engine Work and Idle Speeds | 18 | Adjusting Draft Control Neutral Position | 49 |
| Determining Correct PTO Speeds | 18 | Using Speed of Drop/Lock Valve | 50 |
| Changing Engine Speeds | 19 | Determining Maximum Rear Ballast | 50 |
| Warming Engine | 19 | Using Optional Rear Cast Iron Wheel Weights | 51 |
| Idling Engine | 19 | Using Optional Rear Ballast Box | 51 |
| Restart Stalled Engine | 20 | Using Liquid Weight in Rear Tires | 52 |
| Stopping Engine | 20 | Selecting Front Ballast | 53 |
| Driving Machine | | Using Front Weights | 53 |
| Operator Training Required | 22 | Using Implement Codes | 54 |
| Operating on Slopes and Rough Terrain | 22 | Selecting Front Tire Rolling Direction | 55 |
| Adjusting Seat | 23 | Changing Rear Tread | 56 |
| Seat Weight Adjustment | 23 | Selecting Rear Tread Width | 57 |
| Using Seat Belt | 24 | Transporting Tractor | 61 |
| Selecting Light Switch Positions | 24 | Fuels and Lubricants | 65 |
| Using Park Brake | 25 | Troubleshooting | 70 |
| Using Turn Brake Pedals | 25 | Periodic Service | 75 |
| Operating Transmission | 26 | Break-In | |
| Selecting a Gear | 26 | Cap Screw Torque Chart | 77 |
| Determining Travel Speed | 27 | Engine Break-In | 78 |
| Using Differential Lock | 30 | Hour Meter/Tachometer | 78 |
| Operating Optional Front-Wheel Drive | 31 | Opening and Closing Hood | 78 |
| Using Power-Take-Off (PTO) | 32 | Removing and Installing Engine Shields | 79 |
| Using Stationary Rear PTO | 33 | Tractor Break-In | 79 |
| Operating Mid Power-Take-Off PTO | 35 | | |
| Warming Hydraulic System Oil | 36 | | |
| Using Optional (SCV) Selective Control Valve | 36 | | |
| Connecting Attachment Hydraulic Cylinder Hoses | 38 | | |
| Using Drawbar Hitch | 40 | | |

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMM95327 F1-19-04JUN91

COPYRIGHT© 1991
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright 1990, 1989 Deere & Company

Contents


| | Page | | Page |
|---|-------------|--|-------------|
| 10 Hours | | Replacing Warning Light Bulb | 114 |
| Checking Engine Oil Level | 80 | Adjusting Front Axle | 114 |
| Checking Hydraulic Oil Level | 81 | Adjusting Toe-In | 117 |
| Checking Optional Air Restriction Indicator | 82 | Adjusting Brakes | 118 |
| Checking Coolant Level | 83 | Adjusting Clutch | 118 |
| Cleaning Grille and Radiator Screen | 84 | Injection Pump | 119 |
| Checking Fuel Filter Sediment Bowl | 85 | Injection Nozzles | 120 |
| Checking Fuel/Water Separator Sediment Bowl | 85 | Storage | 121 |
| Safety Interlock System Checkout Procedurre | 85 | Attachments | 123 |
| 50 Hours | | Crime Prevention Tips | 124 |
| Checking Wheel Bolt Torque | 88 | Specifications | 126 |
| Checking Optional MFWD Oil Level | 88 | Index | |
| Lubricating Grease Fittings | 88 | | |
| Checking Battery Electrolyte Level | 89 | | |
| Check Tire Inflation | 91 | | |
| Lubricating Tractor Grease Fittings | 92 | | |
| 200 Hours | | | |
| Changing Engine Oil and Filter | 94 | | |
| Checking Fan Belt Tension | 95 | | |
| Lubricating 3-Point Hitch | 96 | | |
| Replace Fuel Filters | 96 | | |
| Cleaning Radiator Cooling Fins | 97 | | |
| 400 Hours | | | |
| Servicing Air Cleaner | 98 | | |
| 500 Hours | | | |
| Changing Hydraulic Oil and Filter | 101 | | |
| Changing Optional MFWD Oil | 103 | | |
| Checking Engine Speeds | 104 | | |
| Tightening Hose Clamps | 105 | | |
| Every 2 Years | | | |
| Draining, Flushing, and Filling Cooling System | 106 | | |
| As Required | | | |
| Replacing Thermostat | 109 | | |
| Bleeding Fuel System | 109 | | |
| Cleaning or Replacing Battery | 110 | | |
| Adjusting Throttle | 112 | | |
| Replacing Fuses | 112 | | |
| Replacing Hood Headlight Bulb | 113 | | |
| Replacing Taillight Bulb | 113 | | |

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

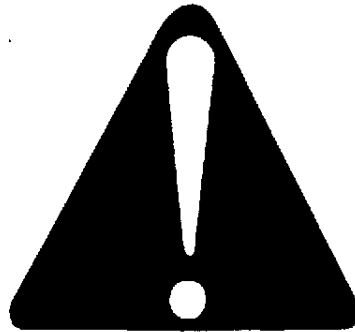

DX,ALERT -19-04JUN90

T81389 -UN-07DEC88

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-04JUN90

TS187 -19-30SEP88


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

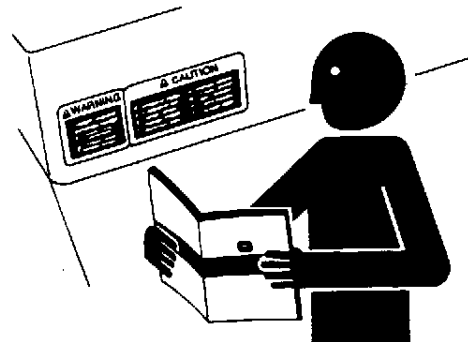

DX,READ -19-04JUN90

TS201 -UN-23AUG88

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com