
No. 8 Two-Row Self-Propelled Cotton Picker (Effective Serial No.8-764)

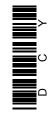



OPERATORS MANUAL

No. 8 Two-Row Self-Propelled Cotton Picker (Effective Serial No.8-764)

OMN13353 C3 English

OMN13353 C3

LITHO IN U.S.A. ENGLISH



TO THE PURCHASER

Your new cotton picker was built to rigid manufacturing standards. Material and workmanship are the best. It will serve you in direct proportion to the care you give it. Depreciation, in a machine of this kind, is an item of expense that must be considered. How long it will last and continue its good work is a matter entirely in your hands.

The way you operate your cotton picker and the care you give it have much to do with the service and satisfaction you will get from it. This manual has been carefully prepared and illustrated to show you what to do and when to do it. It explains the adjustments that are built into the machine and gives instructions on when and how to make these adjustments. The information given in these Manuals will afford a clear understanding of the fundamentals of cotton picker harvesting. The best use of these fundamentals to suit the conditions in which the machine is operating is a responsibility that is completely up to the operator.

If you find you need information not covered in this manual, or if your cotton picker requires special servicing, take advantage of the facilities offered by your John Deere dealer. He has trained mechanics, who are kept informed on the best methods of servicing and can give you prompt, "know-how" service in the field or in his shop.

Location References. "Right" and "Left," "Front" and "Rear" refer to the operator's "Right" or "Left" and "Front" or "Rear" when facing the same direction machine is headed or traveling.


Engine Reference Only. Timing gear end of engine is referred to as the "Front"; flywheel end as the "Rear."

"Clockwise" refers to a shaft, screw, or similar part turning to the operator's "Right," or like the hands of a clock. "Counterclockwise" refers to the operator's "Left."

SERIAL NUMBER

You will find the serial number of your cotton picker, also the engine and axle serial numbers, stamped on a plate located on the steering column support just below the radiator screen on the left-hand side of picker as shown below.

Write these serial numbers in the space provided below for a handy reference later.

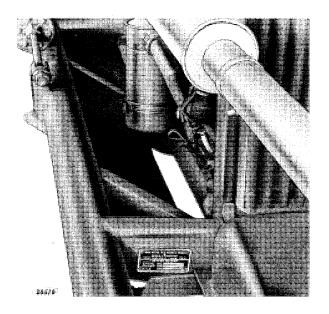

JOHN DEERE DEALER'S DELIVERY REPORT

on the

No. 8 COTTON PICKER

The John Deere No. 8 Cotton Picker has been designed and built to give years of satisfactory service. Intelligent operation, proper adjustment, and regular care by the operator are important factors in obtaining peak performance and long service from the picker.

By the use of this delivery report you can insure that your customer understands the operation, adjustment, and care of his new cotton picker. It will also provide valuable information that will enable us to continue to design and build cotton pickers to meet your customer's needs.

The delivery report is divided into three parts. The use and purpose of each part is explained below:

Part 1, below, provides space for recording the customer's and dealer's names and addresses, and the serial numbers of the cotton picker. This information should be recorded before deliverying the cotton picker.

Part 2, on the reverse side, is a delivery check list of the points which should be explained to the owner about his new cotton picker. Discuss each point fully to be sure the owner understands the use of the cotton picker. Point out that each item is discussed in the operator's manual. (It would be a good idea to go through the manual with him.) As each point is discussed, put a cross (X) in the box provided.

Part 3, also on the reverse side, covers the farming operations of the new owner. The information obtained about his farming operations will help us continue to produce cotton pickers best suited to changing varieties of cotton and changing methods of growing. Please record accurate answers to each question in the appropriate boxes.

When the delivery report has been completed, it should be signed by both the owner and the dealer. Give the completed form to your John Deere territory manager who will see to it that the form is returned to the Company.

Thank you.

JOHN DEERE
Moline, Illinois

Delivered to(Purchaser	o'a Nama)	Dealer Making D	Dealer Making Delivery(Name of Dealership)	
Address (Street Number, F	,		(Street Number, R.F.D., Etc.)	
City				
County		County		
State		State		
Cotton Picker Serial No	Engine S	Serial No	_ Axle Serial No	

Please Fill Out Parts 2 and 3 on the Reverse Side of This Report When the Cotton Picker Is Delivered.

JOHN DEERE No. 8 COTTON PICKER DELIVERY REPORT Fill in This Information at the Customer's Farm

2. DELIVERY CHECK LIST

At the time of delivery, explain to the customer all of the operations and adjustments listed below. Use the operator's manual as a guide and put a cross (X) in the appropriate box in front of each item as you discuss it.

		•• • '	•
Ge	eneral	Hydraulic pump drive belt tension.	Operation of oilers and water control valves.
	☐ Safety shields.	Oil pressure check—(26 lbs.	Proceedity With Orange
Crop and weather conditions.		—full throttle).	Propelling Unit Operation
	Post-season service and stor-	Slip clutches.	Picking unit balance springs.
	ing machine.	Dislana Unite Occuption	Picking unit stabilizers.
Pr	eparation for Picker Use	Picking Units Operation	Clutch.
	Lubrication.	☐ Spindle moistening system—oiling system.	Brakes.
	☐ Inflate tires to—22 lbs. front	Stalk lifters.	Suction fan belt tension.
	—36 lbs. rear.		☐ Gear shift.
Check water level in cooling		Stalk lifter spring fingers.	Picking unit lifting mecha-
	system.	Pressure plates.	nism.
	Check engine fan belt ad-	☐ Doffers.	☐ Unit stop.
	justment.	Spindle moisteners.	☐ Fan.
	☐ Wheel lug bolts.	☐ Picking unit.	☐ Basket lift.
	The John Deere No. 8 Cotton Picker has want to continue to design and build the obtain the answers to the following ques	e cotton picker to meet his needs. To he itions about the new owner's farming or	needs efficiently and effectively. We elp us determine these needs, please perations.
1.	What is the total number of acres in your farm?		of work do you expect to do with your t a cross (X) in the appropriate box.)
	(Acres)	our own harvest only.
2.	How many acres do you have in cotton? (Acres		ustom work only.
3.	What is your estimated yield in bales per acre for	-	About how many acres?(Acres)
	your present crop?		our own harvest and custom work.
	(Bales per Acre)		About how many acres custom work?
4.	In which type of farming are you engaged? (Pu a cross (X) in the appropriate box.)	ıt	(A)
	Non-irrigated.		(Acres)
	☐ Irrigated by rows.	8. Is this your	only cotton picker? Yes. No. pove, indicate makes and how many
_	☐ Irrigated by borders.	other picker	s you now own:
э.	In which type of soil do you grow your cotton (Put a cross (X) in the appropriate box.)	·	
	☐ Sandy. ☐ Light.		(Make) (Indicate How Many)
	Sand-loam. Medium.		(Make) (Indicate How Many)
	☐ Clay-loam. ☐ Heavy. ☐ Other		(2.2.0.2.0 2.2.0)
			(Make) (Indicate How Many)
б.	What types of cotton are you growing? (Put cross (X) in the appropriate box and indicate strain		Deere No. 8 replacing another machine?
	in blank.)	3. 15 the John 2	☐ Yes. ☐ No.
	Upland. Sea Land.	If "Ver" u	that is the make of machine it is re-
	☐ Acala ☐ American- (Strain) Egyptian Pima,	placing?	
	Other, Other(Indicate Type)	· minlear)	(Make) years did you operate the replaced
	☐ Sea Island.		(Years)
	I have taken delivery of the above machi		ation and maintenance.
		(Owner)	
	Signed		Date
		(Dealer)	

TABLE OF CONTENTS

SPECIFICATIONS AND DATA	4-5
CONTROLS	6-7
LUBRICATION	8-17
General Instructions	89
8-Hour Service	
30-Hour Service 120-Hour Service 120-Hou	
500-Hour Service	17
BREAKING IN THE NEW COTTON PICKER	18
GENERAL OPERATING INFORMATION	18-19
Fundamentals of Cotton Picking	18
Starting in the Field	19 19
OPERATING THE PICKER	
Before Operation Checks and Adjustments	20-23 20
Starting the Engine	20
Starting the Picker	21
Slip Clutches	21
TransportingCold Weather Operation	21 22
Operating Precautions	23
OPERATING ADJUSTMENTS	24-34
Basket Lid Grates	34
Brake Adjustment	33
Clutch Pedal	32 26
Fan	34
Hydraulic Pump Belt Tightener	31
Picking Unit Balance Springs and Stabilizers	29 25
Pressure Plates	30
Spindles	25
Spindle Moisteners	27
Spring Fingers Stalk Lifters	24 24
Steering Mechanism.	31
Water and Oil Adjustments	28
TROUBLE SHOOTING	35-52
CARE OF THE PICKER	54-55
When the Season is Over	54
Beginning of the Next Season	55
PICKING UNITS	
Description	59-60 62-63
Spindles.	61
Picker Bars	61-63
WATERING AND OILING SYSTEMS	64-67
Oiling Systems	64
Watering System	65 66–67
HYDRAULIC SYSTEM	68-70
ENGINE SERVICE.	71-75
Cooling System	71-75 74
Fuel System	73-74
Ignition System	71-72
Starting System	72–73 75
Wiring Diagram	76–77
LARD UR VADRUIS CHAINS AND TIMES	70-77

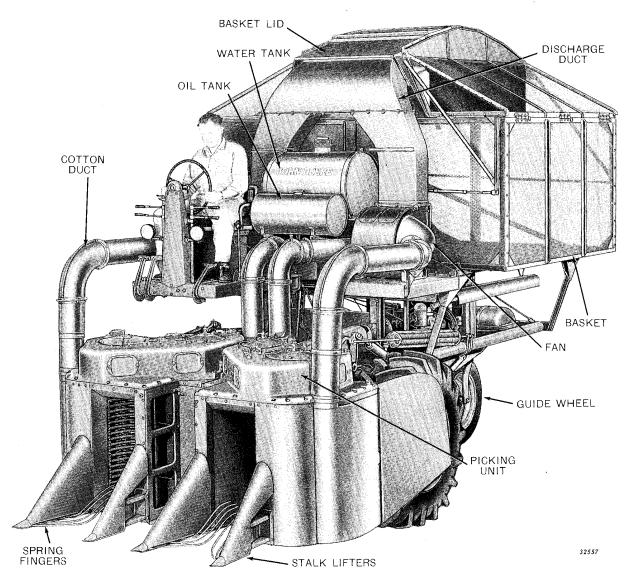


Figure 1-John Deere No. 8 Two-Row, Self-Propelled Cotton Picker

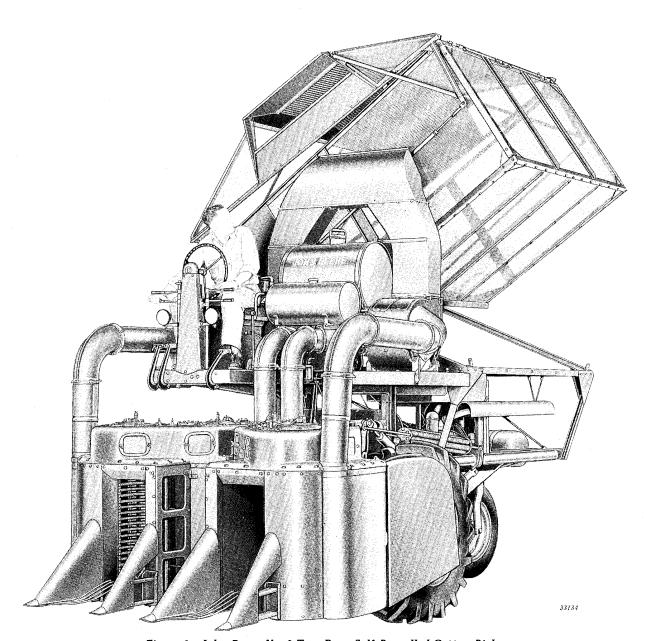


Figure 2—John Deere No. 8 Two-Row, Self-Propelled Cotton Picker with Basket Being Tipped

SPECIFICATIONS

PERFORMANCE.	PICKING UNITS.	
Picking Unit ControlTwo Single-action	No. of Units	
Hydraulic Rams. Basket ControlTwo	No. of Picker Bars: Front Drum	
Double-action Hydraulic Rams.	No. of Spindles Per Picker Bar	
Row Width	Speeds (approx.): 67 R.P.M. Front drum 67 R.P.M. Rear drum 89 R.P.M. Spindles 2300 R.P.M.	
Governed Speeds: Picking Speed		
Reverse speed	Weight, per unit2250 Lbs.	
CAPACITIES.	ENGINE. Make	
Cotton Basket	No. of Cylinders	
Gasoline Tank22 U.S. Gals.	Stroke 4-1/8 in. Displacement 230 Cu. In.	
Crankcase	N.A.C.C. Rating	
Oil Filter	Brake Horsepower	
Transmission	Tappet Clearance:	
Final Drive Housing (each) 9 Qts.	Intake	
Air Cleaner	Firing Order	
Hydraulic Reservoir	Valve ArrangementL-Head	
Water Supply Tank	Speeds: Rated load1800 R.P.M.	
Oil Supply Tank	Idle450 R.P.M.	

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com