 
334, 434 and 634 Corn Attachments (Effective Serial No.334-901, 434N-462, 434W-1528 and 634N-126





 
OPERATORS MANUAL

334, 434 and 634 Corn Attachments (Effective Serial No.334-901, 434N-462, 434W-1528 and 634N-126

OMN159084 A6 English

OMN159084 A6

LITHO IN U.S.A. ENGLISH



TO THE PURCHASER

This manual contains useful information on how to operate your new John Deere Corn Attachment.

This corn attachment is built to handle a wide range of conditions with regular equipment. Field conditions vary from year to year, from day to day, and even from hour to hour. Different varieties of corn present widely different picking problems. A careful study of adjustments on your corn attachment and what they accomplish under varying conditions will allow you to reap many benefits and economies that a corn attachment can provide.


Your new corn attachment will do quality work in direct proportion to the care you use in operating it. Operate, adjust and service the attachment according to the instructions in this manual.

If you need information not covered in this manual, see your John Deere dealer. He has the latest information on how to get the best service from your corn attachment and can give you prompt service in the field or in his shop.


When in need of parts, go to your John Deere dealer. He carries genuine John Deere parts for your Corn Attachment. Be prepared to give him the serial number of your corn attachment and the year purchased. This information should be recorded in the space below as soon as you have received your corn attachment.

Serial	Number	٠.	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Date F	urchase	d.				_			_												


You will find the serial number plate on the left-hand auger housing as shown.

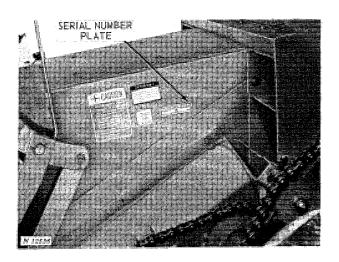


CONTENTS Page 4-21 Operation 22-23 24-26 27 - 3233-37 Removing Corn Attachment 38-40 Installing Corn Attachment 41-48 Assembly 49-54 Index 55-56

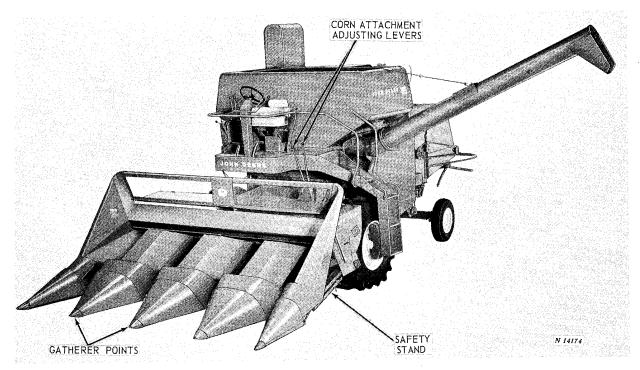


John Deere 434W Corn Attachment on 105 Combine

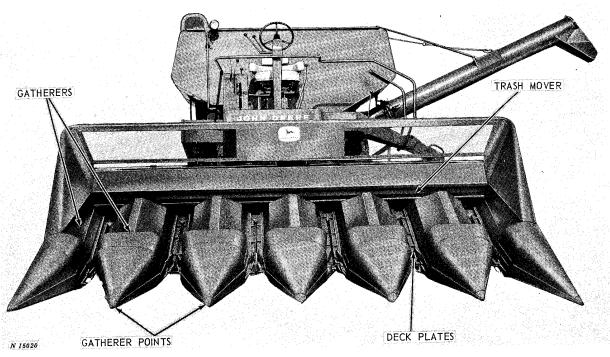

John Deere 634N Corn Attachment on 105 Combine

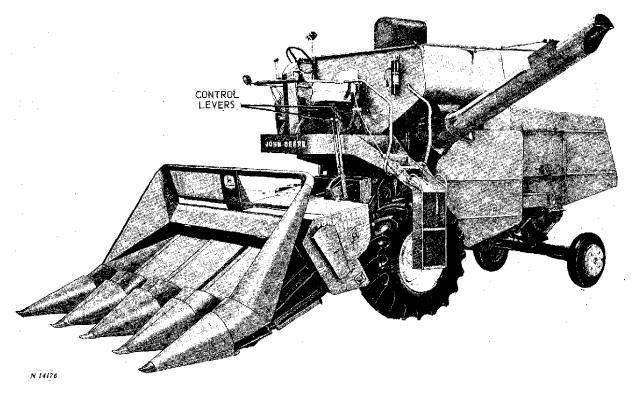

John Deere 434N Corn Attachment on 95 Combine

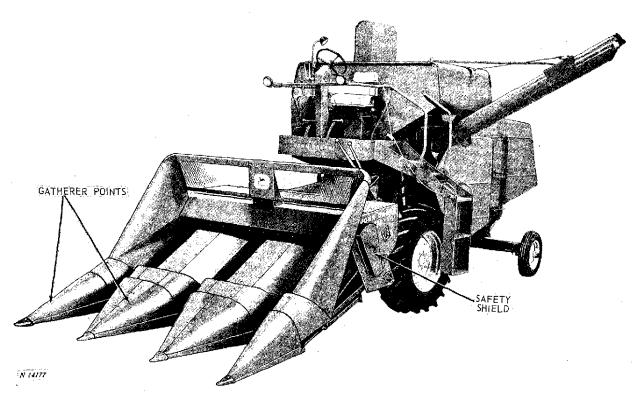

John Deere 334 Corn Attachment on 55 Combine



x 26 front tires.

SPECIFICATIONS

John Deere Combine required- 334	Length of fluted stalk rolls including points								
434W and 434N 95 or 105 634N	Fluted stalk roll adjustment By operator from combine platform on 334 and 434 only								
Number of Rows-	•								
334	Deck plate adjustment By operator from combine platform								
	Conveyor from gatherers to								
Row Widths Handled-	combine Augers								
334 30, 36, 38, and 40 inches									
434N 28 and 30 inches	Approximate over-all width for storage-								
434W	334 9 feet 8 inches 434N 11 feet 5 inches 434W								
Gatherer points. Hinged above gatherer chains	634N								
M	Annuaring to area all lought for								
Number of gatherer chains per	Approximate over-all length for storage 12 feet								
snapping unit 2	storage 12 feet								
Type of gatherer chains. Endless steel roller chain (no master connecting link)	Weight of corn attachments only- 334 for 55 Combine 3150 pounds 334 for 95 Combine 3208 pounds								
One of orthogon shains 200 form (negation)	334 for 105 Combine 3251 pounds 434N for 95 Combine 3861 pounds								
Speed of gatherer chains — 326 fpm (regular) (feet per minute) 279 fpm and 373 fpm	434N for 105 Combine 3904 pounds								
· • • · •	434W for 95 Combine 3944 pounds								
(special).	434W for 105 Combine 3949 pounds								
Minimum clearance between gatherer	634N for 105 Combine 5010 pounds								
chains and ground 0 inches and up	654N for 103 Complite 3010 pounds								
chains and ground o menes and up	ATTACHMENTS								
Distance gatherer chains ahead	ATTACHMENTS								
or fluted stalk roll points 10 inches	Row Spacing Parts (see page 21).								
Length of fluted stalk rolls less	Down Corn (see page 23).								
points 30 inches	Trash Mover (see page 23).								
•	Corn-Cob Mix (see page(22).								
*The 334 Corn Attachment should not be mount-									
ed on the 105 Combine when the 334 is set for	For other attachments available for the Combine,								
30-inch rows, because the drive wheel will run over unpicked corn.	see your John Deere dealer.								
**The 105 Combine must be equipped with 23.1									

(Specifications and design subject to change without notice.)

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com