


John Deere	Operator's Manual
550 Pull-Type	OM-N159250
Sprayer	Issue Jo

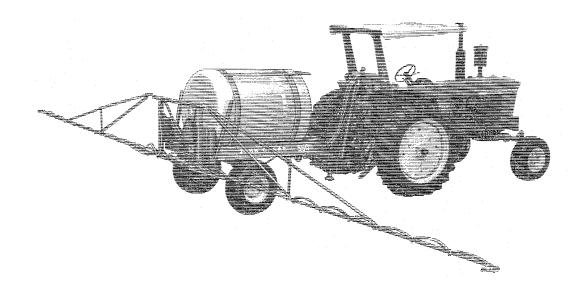



To the Purchaser

This new sprayer was carefully designed and manufactured to give years of dependable service. To keep it running efficiently, read the instructions in this operator's manual. Each section is clearly identified so you can easily find the information you need—whether it is operation, lubrication, trouble shooting, or service. Read the Table of Contents to learn where each is located. Use the alphabetical index for fast reference.


Should your sprayer require replacement parts go to your John Deere dealer where you can obtain Genuine John Deere Parts—accept no substitutes. Genuine John Deere Parts fit properly and insure satisfactory service because they are made from the original patterns and from the same materials as used in the new machines.

"Right-hand" and "left-hand" sides are determined by facing the direction the sprayer will travel when in use.

Record your sprayer serial number in the space provided on page 41. Your dealer needs this information to give you prompt, efficient service when you order parts or attachments.

The warranty on this sprayer appears on your copy of the purchase order which you should have received from your dealer when you purchased the sprayer.

This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

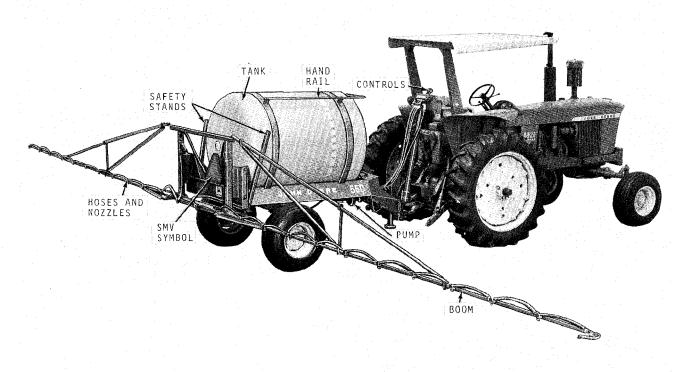

Attachment

Code

Identifier

Description

Nozzle Tips and Strainers

NOTE: Nozzle tips and strainers must be ordered in multiples of nine. Please refer to your operators manual for nozzle tip capacity and quantity requirements.

9001	N85638	50 Mesh Strainer (1 strainer per code)
Flat Fan Spra 9002 9003 9004	ay Brass Tips (1 tip N85780 N85781 N85782	per code) Small Tip Medium Tip Large Tip
Flat Fan Spra 9005 9006 9007	ay Stainless Steel 1 N85785 N85786 N85787	ips (1 tip per code) Small Tip Medium Tip Large Tip
Even Spray B 9008 9009 9010	Brass Tips (1 tip pe B11653 B11655 B13195	r code) Small Tip Medium Tip Large Tip
Even Spray 8 9011 9012 9013	Hardened Stainless B16011 B16013 B16016	Steel Tips (1 tip per code) Small Tip Medium Tip Large Tip
Cone Spray 9014	Stainless Steel Tips BN901820	s with Cores (9 tips per code) Small Tips with Nylon Cores 9-B16007 - Disc 9-N85636 - Core
9015	BN901821	Medium Tips with Nylon Cores 9-B16007 - Disc 9-N150972 - Core
9016	BN901822	Large Tips With Nylon Cores 9-B17518 - Disc 9-N85776 - Core
9017	BN901823	Small Tips With Stainless Steel Cores 9-B16007 - Disc 9-N85777 - Core
9018	BN901824	Medium Tips With Stainless Steel Cores 9-B16007 - Disc 9-N150973 - Core
9019	BN901825	Large Tips With Stainless Steel Cores 9-B17518 - Disc 9-N85778 - Core
Flooding Spray Brass Tips (1 tip per code)		
9020	N150974 N150976	Small Tip Medium Tip
9021 9022	N150978	Large Tip
9023	B14533	Extra Large Tip
Flooding Spray Stainless Steel Tips (1 tip per code)		
9024	N150975	Small Tip
9025	N150977	Medium Tip
9026	N150979	Large Tip
9027	B16018	Extra Large Tip

Code

Description

2752N5003

For Centrifugal Pump With Hydraulic Drive

With Control On Mast

1-BN150109 - Solution System

1-BN150097 - Mast

2752N5004

For Centrifugal Pump With Hydraulic Drive

With Control On Tractor

1-BN150110 - Solution System 1-BN150108 - Mounting Bracket

2752N5005

Less Solution System and Control Mounting

Booms

NOTE: Codes 6001 thru 6005 requires code 7001

2752N6001

27 Foot Boom (8-40 rows) (1 square tube)

1-BB11150 -Heavy-Duty Boom Frame

1-BB11863 -Heavy-Duty Boom 1-BN150084-Support Brackets

2-BN150111-Nozzle Tees (4) and Clamps

1-BN150112-Nozzle Tees (7), Elbows (2) and Clamps

1-BN150113-Hose and Boom Accessories

2752N6002

27 Foot Boom (10-30 rows) (1 square tube)

1-BB11150 -Heavy-Duty Boom Frame

1-BB11863 -Heavy-Duty Boom 1-BN150084-Support Brackets

3-BN150111-Nozzle Tees (4) and Clamps

1-BN150112-Nozzle Tees (7), Elbows (2) and Clamps

1-BN150113-Hose and Boom Accessories

2752N6003

30 Foot Boom (12-30 rows) (1 square tube)

1-BB11150 -Heavy-Duty Boom Frame

1-BB11863 -Heavy-Duty Boom 1-BN150084-Support Brackets

4-BN150111-Nozzle Tees (4) and Clamps

1-BN150112-Nozzle Tees (7), Elbows (2) and Clamps

1-BN150113-Hose and Boom Accessories

1-BN150114-20 Inch Extension

2752N6004

40 Foot Boom (12-40 rows) (1 square tube)

1-BB11150 -Heavy-Duty Boom Frame

1-BB11151 -40 Foot Boom 1-BN150084-Support Brackets

4-BN150111-Nozzle Tees (4) and Clamps

1-BN150112-Nozzle Tees (7), Elbows (2) and Clamps

1-BN150115-Hose and Boom Accessories

Code	Description
2752N6005	40 Foot Boom (16-30 rows) (1 square tube) 1-BB11150 -Heavy-Duty Boom Frame 1-BB11151 -40 Foot Boom 1-BN150084-Support Brackets 6-BN150111-Nozzle Tees (4) and Clamps 1-BN150112-Nozzle Tees (7), Elbows (2) and Clamps 1-BN150115-Hose and Boom Accessories
2752N6006	47 Foot Boom (14-40 rows) (1-1/2 square tube) 1-BN150138-Boom Center Frame 1-BN150139-Outer Boom 3-BN150116-Nozzle Tees (4) and Clamps 2-BN150117-Nozzle Tees (7), Elbows (2) and Clamps 1-BN150118-Hose and Boom Accessories
2752N6007	47 Foot Boom (18-30 rows) (1-1/2 square tube) 1-BN150138-Boom Center Frame 1-BN150139-Outer Boom 5-BN150116-Nozzle Tees (4) and Clamps 2-BN150117-Nozzle Tees (7), Elbows (2) and Clamps

2752N6008 Less Boom

Folding and Leveling

For Codes 6001 thru 6005

2752N7001

Less Folding and Leveling

For 47 Foot Booms Codes 6006 and 6007.

2752N7002

Manual Folding and Hydraulic Leveling For Tractors With Closed Center System

1-BN150091-Leveling Parts

1-BN150092-Hydraulic Valve and Hoses 1-BN150137-Manual Folding Parts

1-BN150118-Hose and Boom Accessories

2752N7003

Manual Folding and Hydraulic Leveling
For Tractors With Open Center System
1-BN150091-Leveling Parts

1-BN150135-Leveling Parts 1-BN150137-Manual Folding Parts

2752N7004

Hydraulic Folding and Leveling

For Tractors With Closed Center System

1-BN150091-Leveling Parts

1-BN150092-Hydraulic Valve and Hoses 1-BN150136-Hydraulic Folding Parts Code

Description

2752N7005

Hydraulic Folding and Leveling

For Tractors With Open Center System

1-BN150091-Leveling Parts 1-BN150135-Leveling Parts

1-BN150136-Hydraulic Folding Parts

2752N7006

Manual Folding Without Leveling

1-BN150137-Manual Folding Parts

ATTACHMENTS

Code

Attachment

Identifier Description

Hand Guns

2752N9045

BN901827

Junior Hand Gun With 25 Foot Hose

1-AN150568-Hose and Fittings 1-BN150062-Junior Hand Gun

2752N9046

BN901828

Regular Hand Gun With 25 Foot Hose

1-AN150568-Hose and Fittings

1-BN150063-Hand Gun

Miscellaneous

2752N9064

BN150050

Hydraulic Adapters

2752N9066

BN150066

Nozzle Check Valves (9)

2752N9077

BN150131

Strainers and Fittings For

Boom Supply Lines

2752N9078

BN150102

Hydraulic Adapters and Check Valves

Hydraulic Cylinder in Parallel

Row-Crop Drops

NOTE: Number of drops required = number of rows + 1

2752N9068

BB11815

Nine Regular 18 Drops

2752N9069

BN150065

Four Regular 18 Drops

550 PULL-TYPE SPRAYER

OWNER REGISTER	DELIVERY CHECK LIST	
Name	At the time the sprayer is delivered, the following check list is a reminder of very important information which should be conveyed directly to the customer Check off each item as it is fully explained to the customer.	
CountyState		
Date Sold	 Because some chemicals are quick to cause metal to corrode, advise the customer to oil pump and thoroughly flush tank, booms, pump and con trols after each day's use with clear water. Explain to the customer the importance of prope handling of chemicals. 	
PREDELIVERY CHECK LIST After the sprayer has been completely assembled, inspect to be sure it is ready to operate before delivering it to the customer. The following check list is a reminder of points to inspect. Check off each item as it is found satisfactory or after proper adjustment has been made.		
	Advise the customer that the life expectancy of this or any other machine is dependent on the maintenance and care as directed in operator's manual.	
Inspect to be sure nuts on all bolts have been tightened and all cotter pins spread.	Give the operator's manual to the customer and explain all operating adjustments and safety pre- cautions to him.	
☐ Check nozzle tips to see that fan spray is angled 5° from parallel with boom.	When the sprayer is transported on a road highway at night or during the day, accesso	
Inspect to be sure that all hose clamps and hose couplings have been tightened.	lights and devices should be used for adequat warning to operators of other vehicles. In this	
☐ Paint all parts scratched up in shipment.	regard, tell customer to check local governmen regulations.	
☐ This sprayer has been thoroughly checked and, to the best of my knowledge, is ready for delivery to the customer.	To the best of my knowledge this machine has been delivered ready for field use and the custom- er has been fully informed as to proper care and operation.	
(Date Set Up)	(Date Delivered)	
(Signature of Set Up Man)	(Signature of Delivery Man)	

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com